

**ENGINE COMPARTMENT
FUSE BOX RELAYS**

- Engine compartment fuse box
- Ignition positive relay
- Horn relay
- Dip beam relay
- Powerwash relay
- Main beam relay
- Front fog relay
- Heater pump relay

**CONTROL MODULE
ENCLOSURE RELAYS (RHD)**

- O2S heaters relay
- Engine management fuse box
- Ignition coil relay
- Throttle motor power relay
- Fuel injection relay
- EMS control relay

LH ENCLOSURE RELAYS

- A/C compressor clutch relay
- Wiper RUN/STOP relay
- Wiper FAST/SLOW relay

LH FASCIA RELAYS

- Ignition positive relay (LHD)
- Auxiliary positive relay (RHD)
- Door mirror heater relay
- Driver side fuse box (LHD)
- Passenger side fuse box (RHD)

**CONTROL MODULE
ENCLOSURE RELAYS (LHD)**

- O2S heaters relay
- Engine management fuse box
- Intercooler pump relay (LHD)
- Fuel injection relay
- Throttle motor power relay
- Ignition coil relay
- EMS control relay

RH ENCLOSURE RELAYS

- Starter relay
- LH windshield heater relay
- RH windshield heater relay
- Intercooler pump relay (RHD)

RH FASCIA RELAYS

- Auxiliary positive relay (LHD)
- Ignition positive relay (RHD)
- Door locking relay
- Air conditioning isolate relay
- Passenger side fuse box (LHD)
- Driver side fuse box (RHD)

