


3. Remove the headlamp fixings.
1. Disconnect the multi-plug from the headlamp.
 2. Remove the upper securing bolt and lower securing bolt.
 3. Slacken the headlamp securing nut.
- Carefully reposition the headlamp for access to the washer jet.

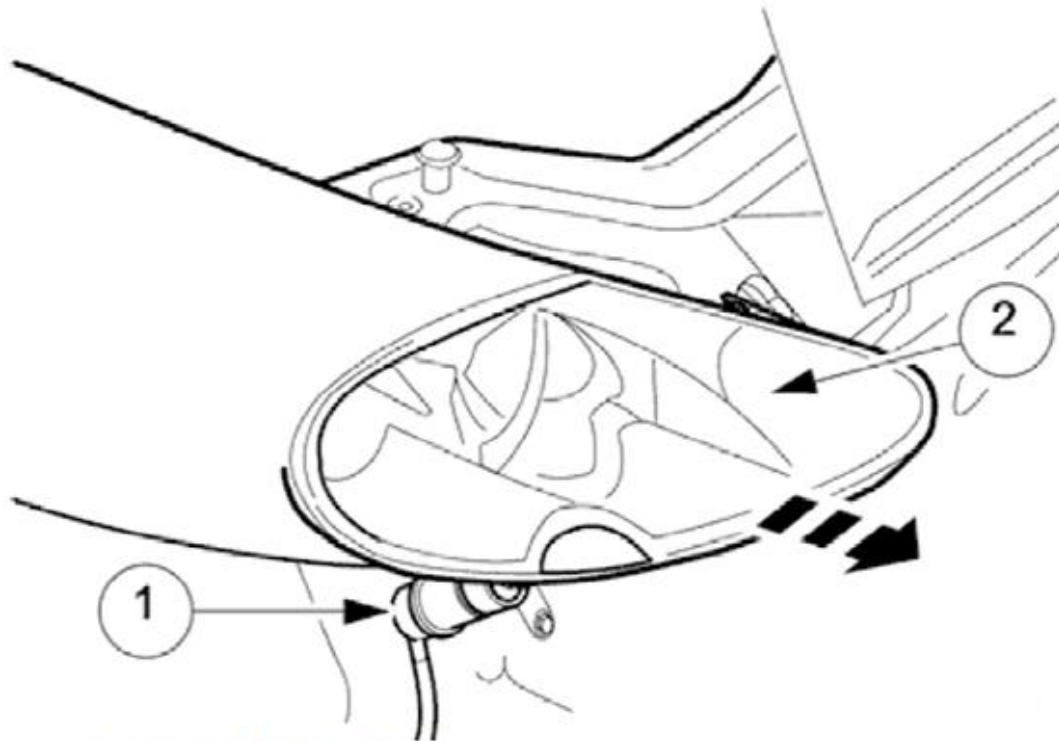

4. Remove the headlamp.

1. Disconnect the washer jet assembly from the headlamp and reposition clear of the lamp.
2. Remove the headlamp assembly.

Installation

1. Installation is the reverse of removal.