



## Air Cleaner Element 19.10.08

### Removal

1. Open the engine compartment and fit paintwork protection sheets.

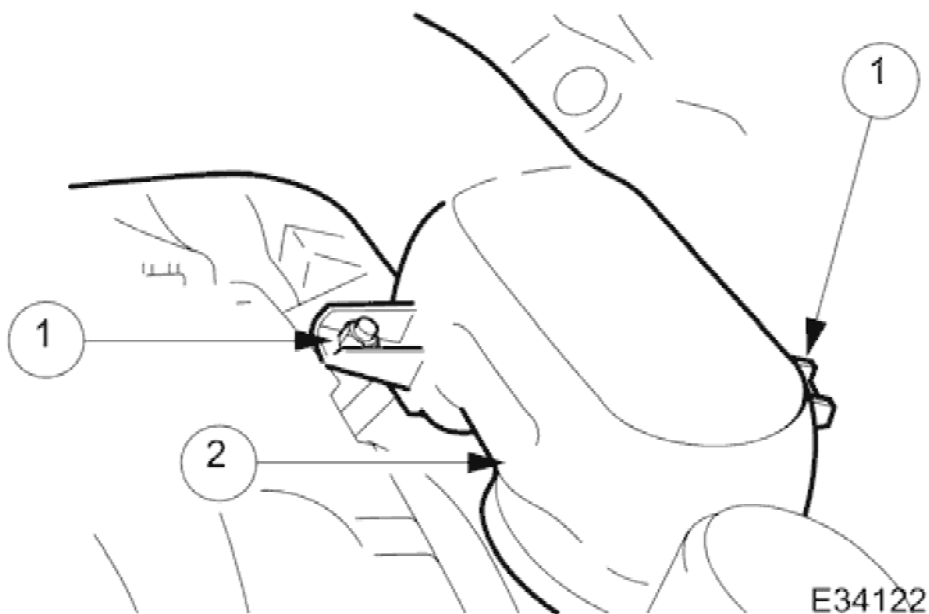


2. Release the air intake trunking to gain access to the air cleaner cover inner rear clip.
  1. Remove the bolts which secure the trunking to the intake elbow.
  2. Release the trunking from the elbow and carefully lift the assembly to gain access to the inner rear clip.

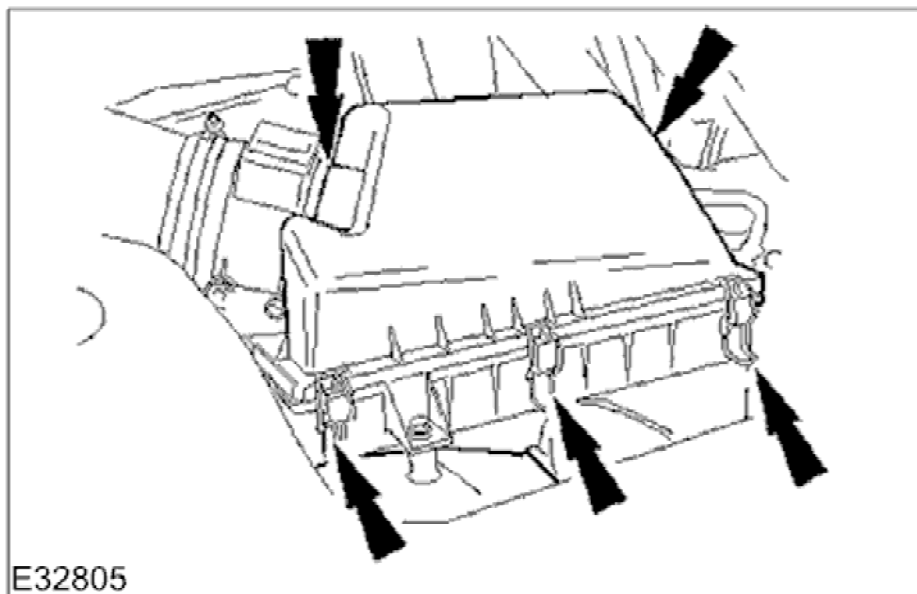

3. Disconnect the air cleaner cover.

## 1997 XK RANGE - Intake Air Distribution and Filtering - 303-12

1. Release the five clips which secure the air cleaner cover. Lift the cover.

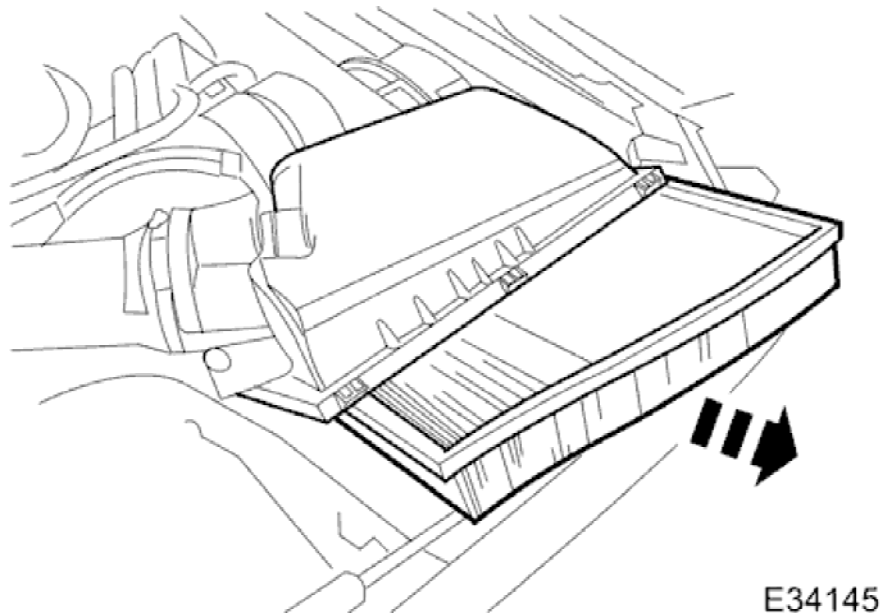

4. Release and remove the air cleaner element.
5. Clean the air cleaner cover and body.

### Installation

1. Installation is the reverse of the removal procedure.