


# RESERVOIR

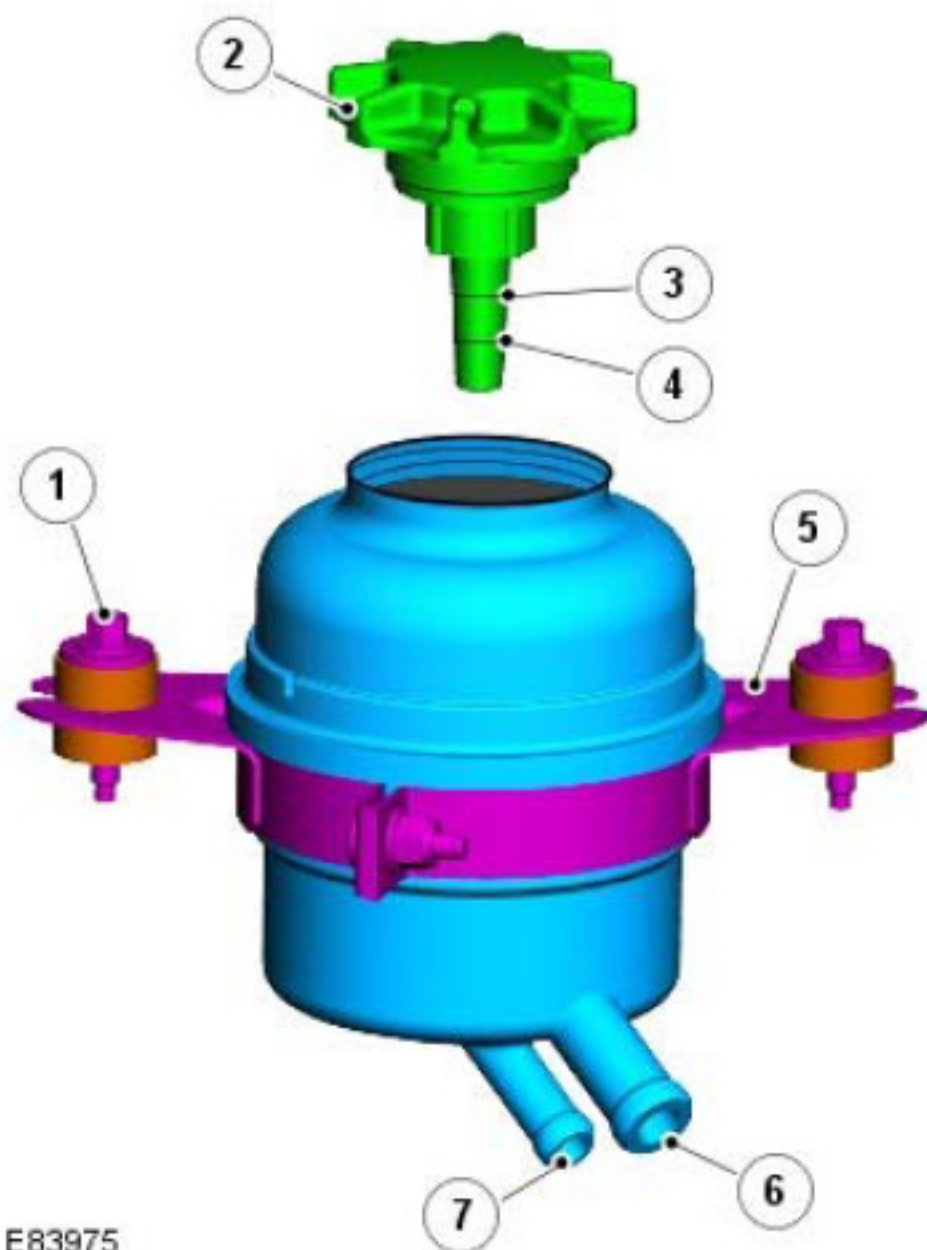

E83975

Item	Description
1	Mounting bolt (2 off)
2	Cap
3	Maximum oil level
4	Minimum oil level
5	Bracket
6	Feed to pump
7	Return from cooler

The reservoir is located in the engine compartment, forward of the Left Hand (LH) suspension turret. A bracket attached to the reservoir is bolted via 2 rubber mounts, to 2 brackets on the front body crossmember.