

## Rear Light Assembly – Bulb Renewal

The rear light assembly has the following bulbs

- (A) Fog light.
- (B) Tail light.
- (C) Stop light.
- (D) Reverse light.
- (E) Direction Indicator.

Ensure that the lights and ignition switch are OFF before removing any bulbs.

Open the luggage compartment and pull the flap on the seal retainer to expose the rear light connector.

Squeeze the clips on the rear of the unit together and remove the bulb carrier.

Remove the faulty bulb and fit a new one of the correct type, as illustrated on the bulb holder, fitment of the correct type is essential, see page 71.

Reposition the bulb carrier and snap into place.

Clip the seal retainer flap back into position.

