

NOTE: "Crank" input is used to switch off interior lamps during engine cranking.

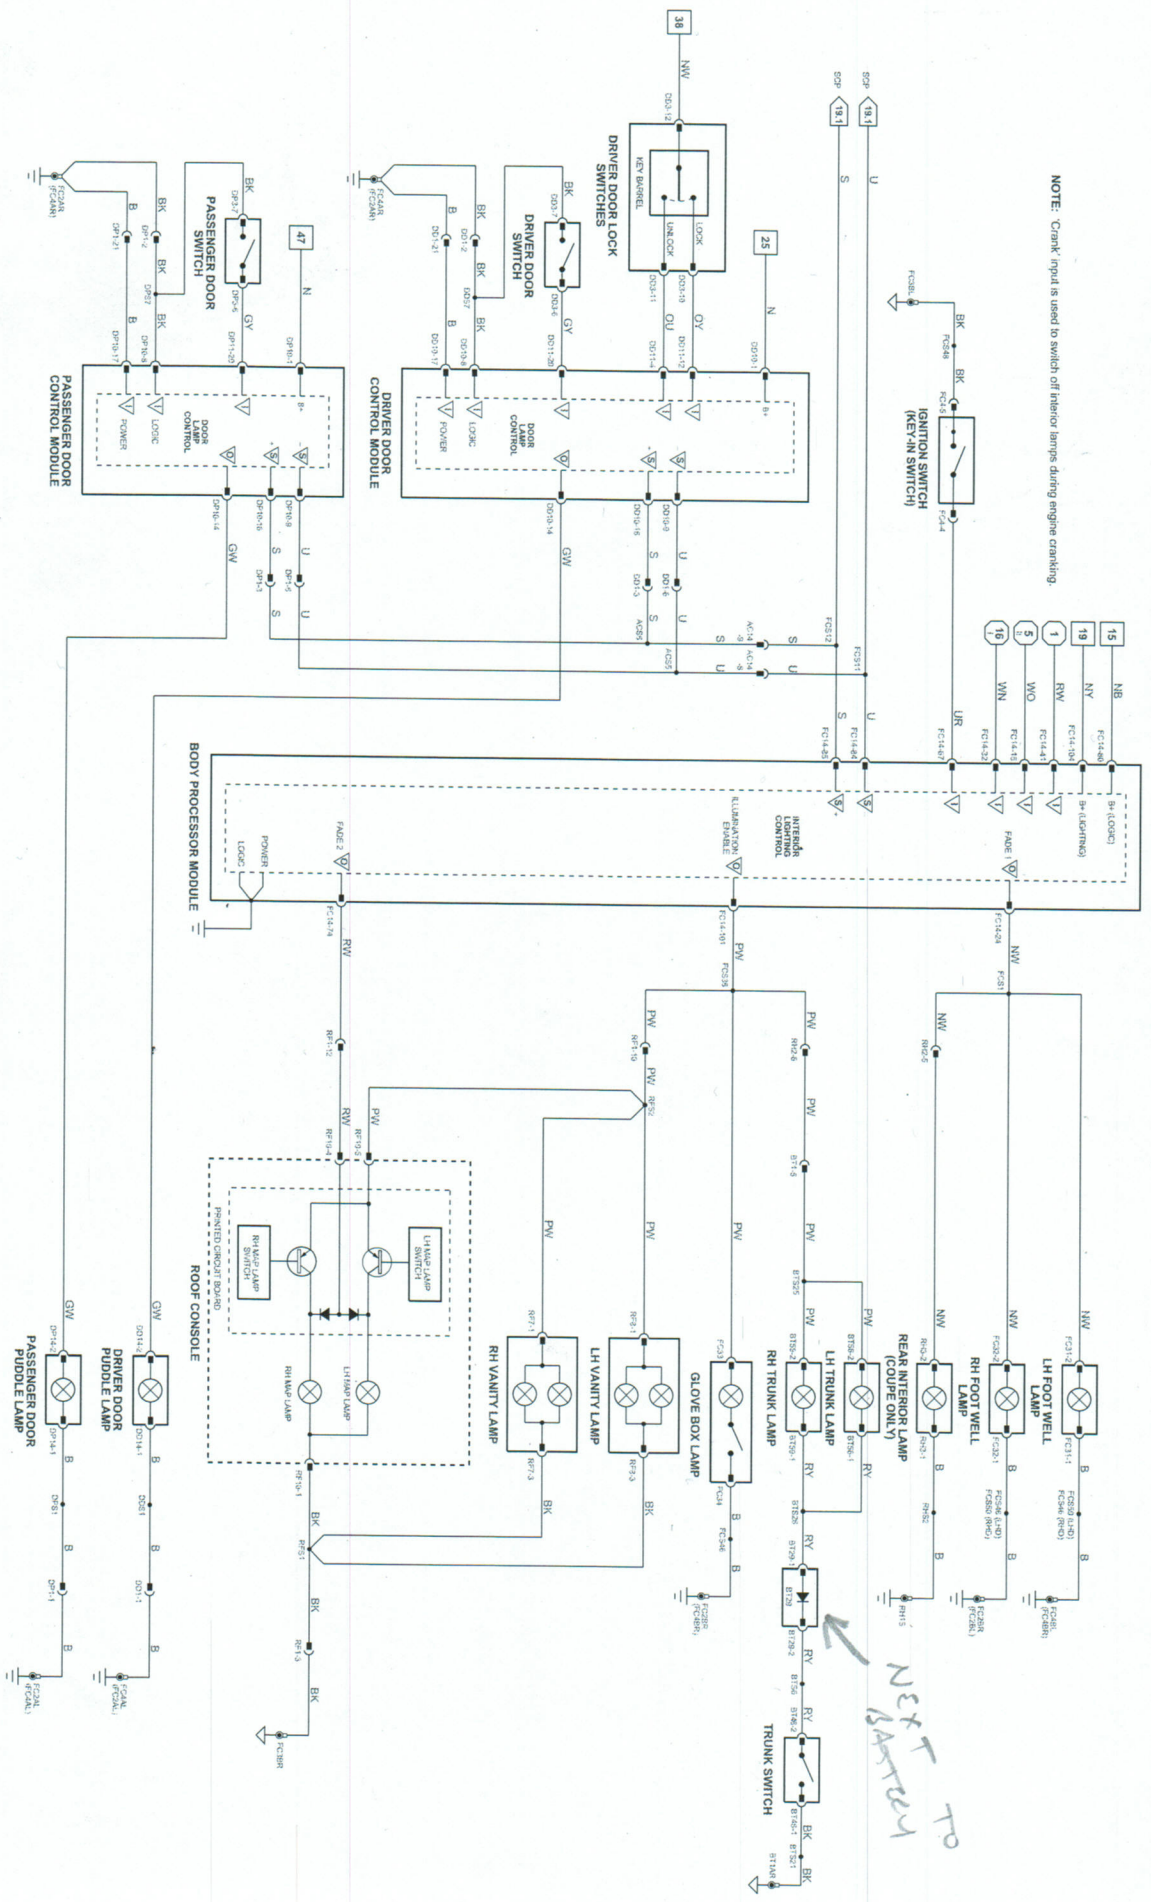


Fig. 01.1 1-6  
Fig. 01.2 7-51  
Fig. 01.3 52-81  
Fig. 01.4 8-38  
Fig. 01.5 39-59  
Fig. 02.1 1-18

Input  
Output  
Signal Ground (SG)  
CAN Network  
Serial and Encoded Communications (SCP Network)

VARIANT: All Vehicles  
VIN RANGE: 018108 →  
DATE OF ISSUE: SEPTEMBER 1997

