



## Rear Seat Backrest 76.70.38

### Removal


1. Remove rear seat cushion. Refer to <<76.70.37>>.

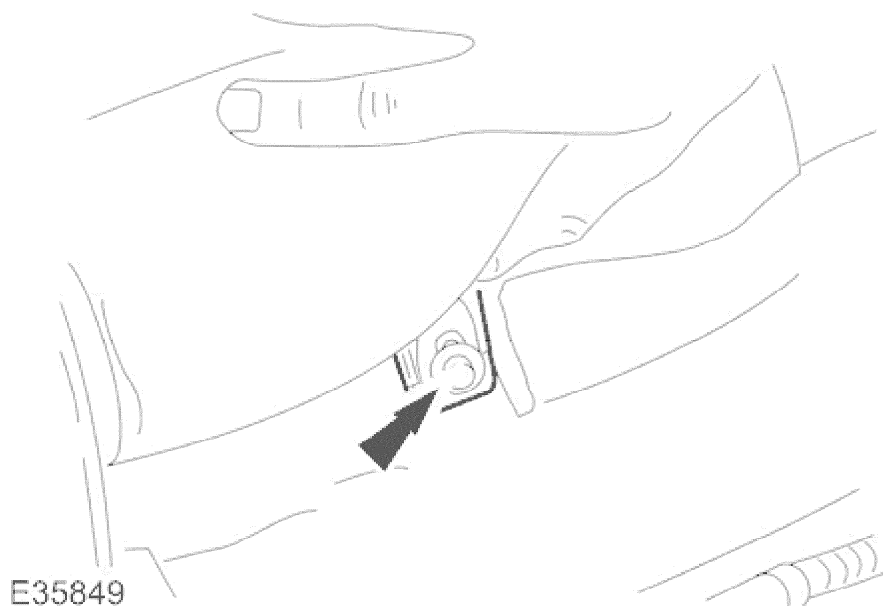

2. Slacken and remove the two rear seat squab securing screws.

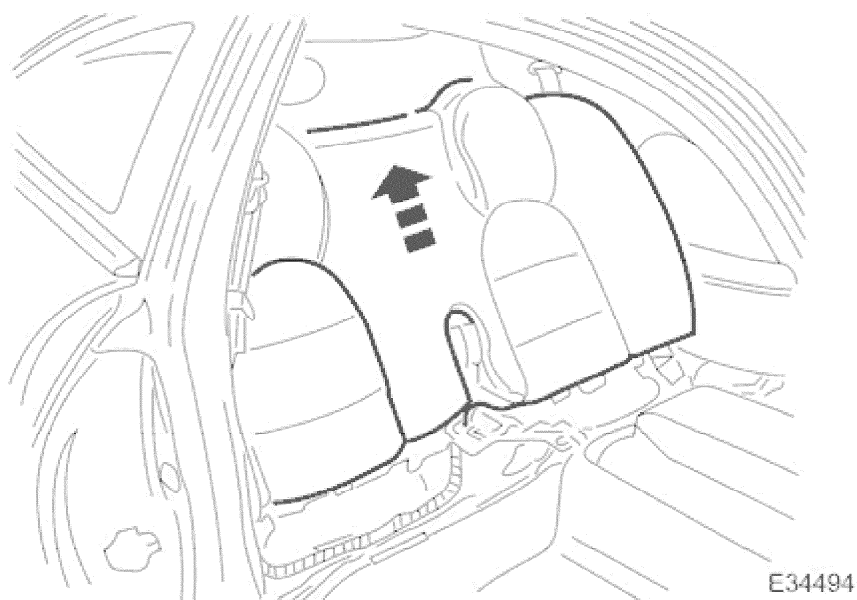

3. Move seat squab upwards to release body tangs.

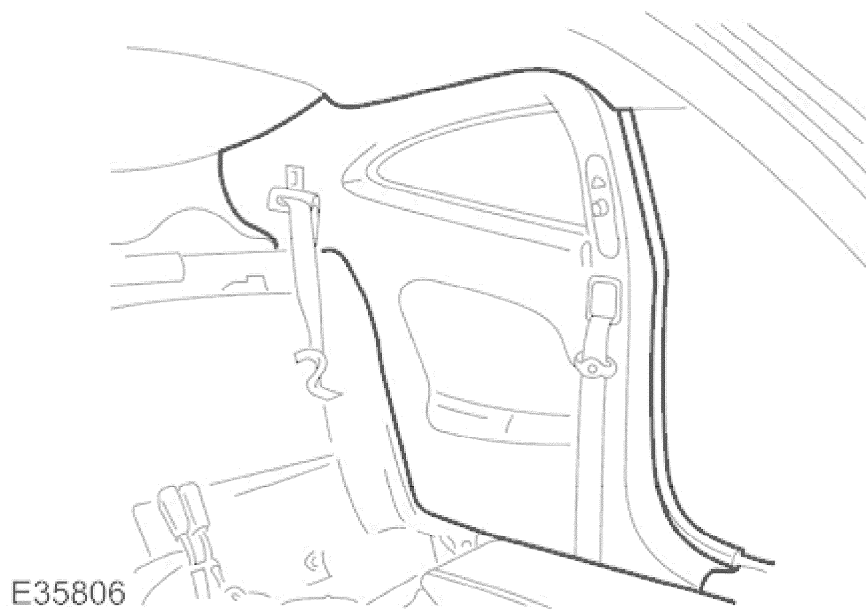

4. Position rear seat belts for access and remove squab from vehicle.

### Installation

1. Position seat squab placing seat belts over.
2. Finally position squab, engaging body tangs by applying downward hand pressure.
3. Fit and tighten the two squab securing screws.
4. Fit rear seat cushion. Refer to <<76.70.37>>.