



Instrument Panel and Console - Steering Column Lower Shroud

Removal and Installation

Removal

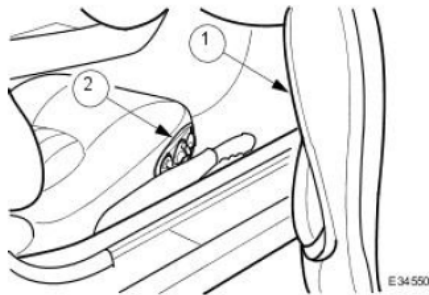

1. Move the driver's seat rearwards.
 1. Open driver's door and ensure that it remains open.
 2. On driver's seat switch pack, move front switch rearwards to traverse driver's seat to the rear.

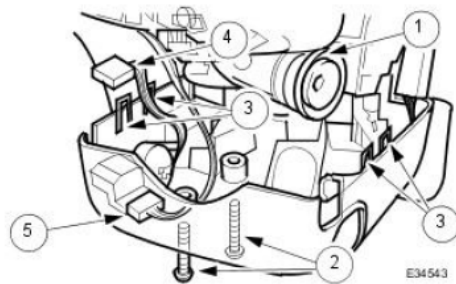

2. Remove the lower cowl from the steering column.
 1. Remove key from ignition switch.
 2. Slacken and remove cowl securing screws.
 3. Separate lower cowl from upper cowl (four tangs) and move lower cowl forward to access multiplugs.
 4. Disconnect the rheostat multiplug.
 5. Disconnect the column adjustment harness multiplug.
 - Move lower cowl clear of steering column.

3. Remove the rheostat from the cowl.

1. Remove adjusting knob from rheostat.

