



Automatic AM/FM and AM/FM/Telephone Antennas


Extend telescope as far as possible by switching the radio on. Loosen threaded bushing until it is free from the antenna head. Remove the telescope *with its plastic wire* by pulling the telescope upward. Note the direction in which the teeth face.

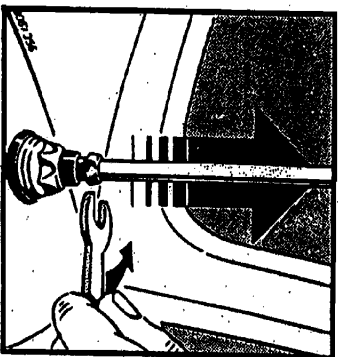


Switch radio off for a moment and then on. This should fully extend the telescope and toothed plastic wire. Do not extend the telescope by hand. The electronic control limits duration of operation at approximately 12 seconds.

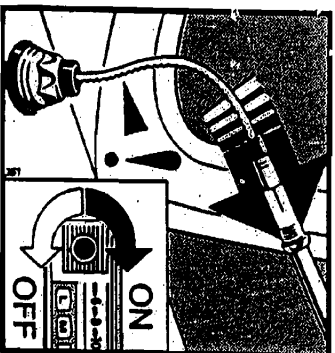


Insert plastic wire through mounting hole until it comes to a stop. Be sure to arrange wire with teeth facing in the same direction as the removed telescope.

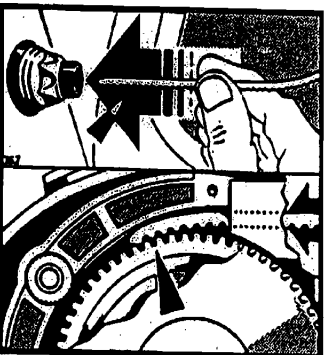

Switch radio off and drop the plastic wire into the mounting hole until teeth are engaged by the drive. If the plastic wire is not pulled into the drive, the drive has not engaged the teeth. If this occurs, switch radio off and on and turn plastic wire up to 180 degrees until teeth on wire connect with the drive. As the plastic wire is drawn in, gently push the telescope's tubes into the housing. Then insert the threaded bushing.

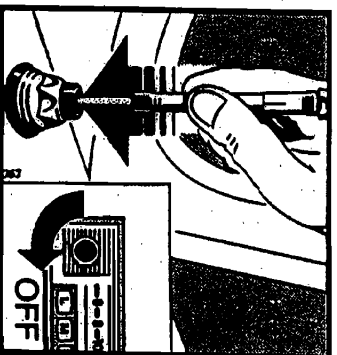

Tighten threaded bushing, then extend and retract telescope again to check function.

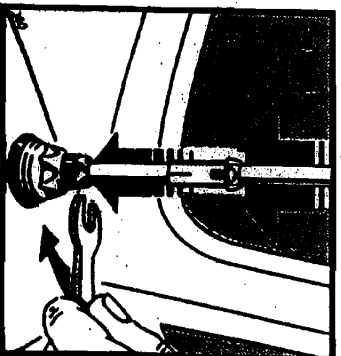

NOTE!!
IF YOUR VEHICLE HAS A SMOOTH NUT,
PLACE A SMALL SCREWDRIVER IN ONE OF
THE GROOVES,AND TAP IT COUNTERCLOCKWISE
TO REMOVE IT.