
# Air Conditioning (A/C) Compressor 82.10.20

#### Removal

- 1. Disconnect battery ground cable (IMPORTANT, see SRO <<86.15.19>> for further information).
- 2. Recover refrigerant from air conditioning system; refer to <<82.30.30>>.
- 3. Remove supercharger drive belt (where fitted); refer to <<18.50.08>>.
- 4. Remove front end accessory drive belt; refer to <<12.10.40>> or (SC) 12.10.40.

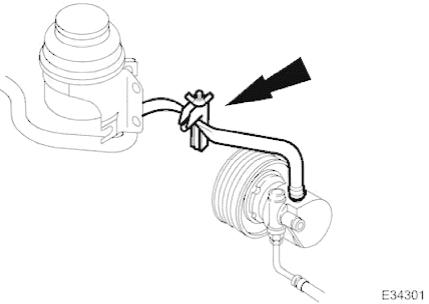


## 5. **NOTE:**

A commercially available brake pipe clamp is recommended. Do not over tighten.

1

Clamp power steering reservoir to pump feed hose.

6. Raise vehicle for access

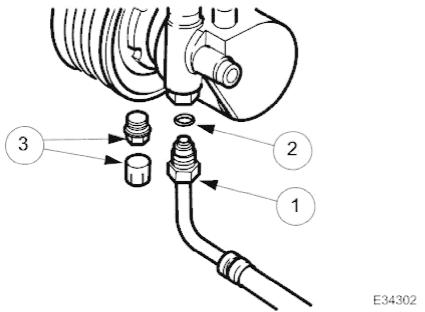


#### 7. **NOTE:**

Position drain tin to collect the fluid when union nut is released.

Disconnect steering rack hose from pump.

1. Release union nut.

- 2. Discard O-ring.
- 3. Fit suitable blanking plugs.

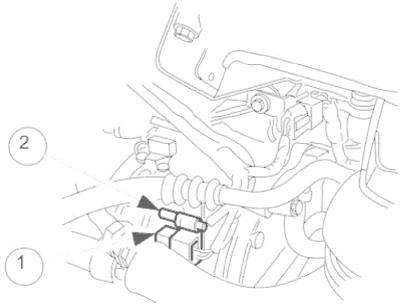

8. Disconnect clutch harness connector from compressor.


1. Disconnect connector.

2 2014-07-14

E35392



- 9. Remove suction and discharge pipes from compressor.
  - Discard O-rings.
  - Fit suitable blanking plugs.

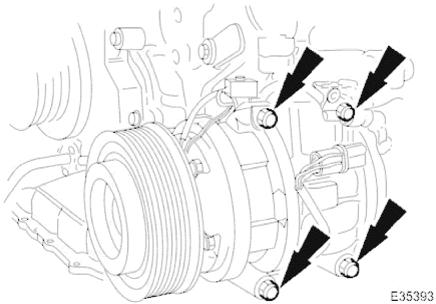

## 10. **NOTE:**

Reposition compressor after releasing the fixings to allow removal.

## Remove compressor.

• Remove bolts.

## 11. **NOTE:**

This step is not necessary in the case of refrigerant loss.


Measure amount of oil held in compressor.

- Remove blanking plugs from the compressor.
- Pour oil from compressor into a suitable measuring container. Note amount and discard the oil.
- Fit blanking plugs to compressor.


3 2014-07-14

#### Installation


- 1. Fill new compressor with correct amount of oil.
  - Remove blanking plugs from compressor.
  - Pour oil from compressor into a suitable container.
  - Fill compressor with the same amount of oil that was removed from original compressor, plus amount recovered from recovery equipment.
  - Fit blanking plugs to compressor.

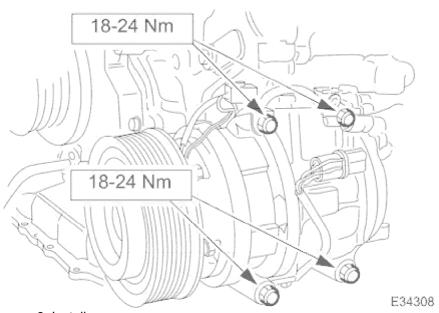


- 2. Install compressor.
  - Tighten fixings.

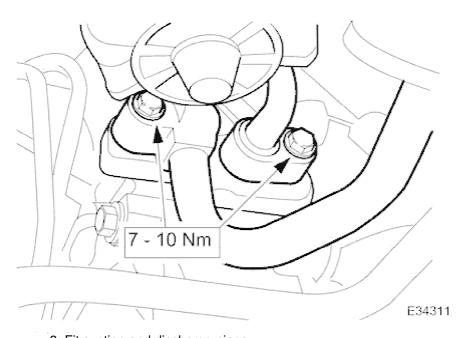


- 3. Fit suction and discharge pipes.
  - Fit new O-rings.
  - Tighten fixings.

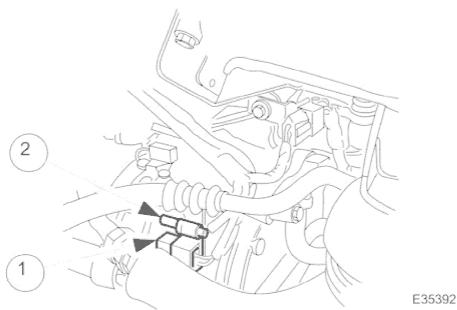

4. Connect clutch harness connector to compressor.1. Connect clutch connector.

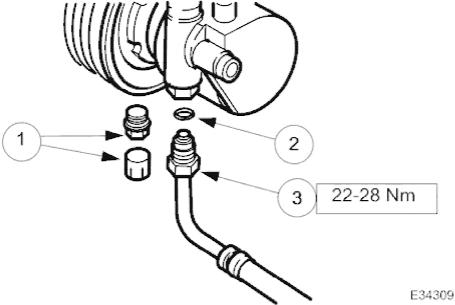

- 5. Connect power steering hose to pump.1. Remove blanking plugs.2. Fit new O-ring to hose.3. Tighten union nut.
- 6. Lower ramp.

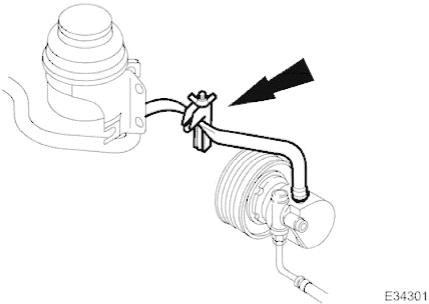

- 7. Unclamp power steering reservoir to pump feed hose.
- 8. Install front end accessory drive belt; refer to <<12.10.40>> or (SC) 12.10.40.
- 9. Install supercharger drive belt (where fitted); refer to <<18.50.08>>.
- 10. Reconnect battery ground cable (IMPORTANT, see SRO <<86.15.15>> for further information).

6

- 11. Recharge air conditioning system; refer to <<82.30.30>>.
- 12. Check / bleed / top up power steering fluid reservoir; refer to <<211-02>>.