


## 2-4 Security and locks

### Key-ring transmitter

The Security System is controlled remotely by a radio frequency, battery-operated key-ring transmitter. The transmitter uses a random encrypted fixed and rolling code each time the system is used. This provides billions of combinations and ensures that the code cannot be copied.

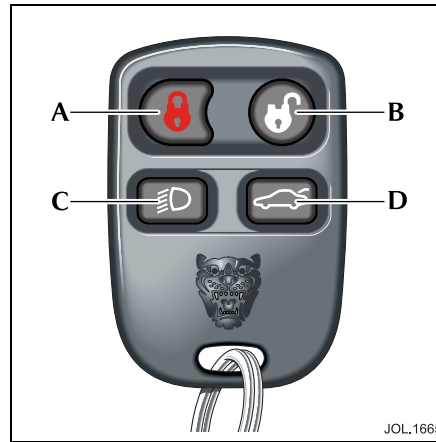

Each of the two transmitters supplied is designed to be attached to a driver's key-ring.

The key-ring transmitter is activated by pointing it towards the vehicle and pressing one of the four operating buttons:

- (A) – Locks and arms the vehicle.
- (B) – Unlocks and disarms the vehicle.
- (C) – One press switches on headlamps for 25 seconds. Three presses starts the Panic Alarm.
- (D) – Releases luggage compartment lock.

### Care of key-ring transmitters

The key-ring transmitters must be treated with care and not exposed to extremes of heat, dust, humidity or be in contact with fluids. The batteries are the only serviceable part.

### Key-ring transmitter loss

If a transmitter is lost or stolen it is advisable to contact your Dealer, without delay, to have the remaining transmitter re-programmed to prevent anyone using the lost transmitter. A new key-ring transmitter can be obtained from your Jaguar Dealer, who will ask for proof of vehicle ownership.