


Air Distribution and Filtering - Passenger Side Blower Motor

Removal and Installation


Removal

1. Remove the instrument panel.
For additional information, refer to: [Instrument Panel \(501-12 Instrument Panel and Console, Removal and Installation\)](#).
2. Remove the passenger side footwell duct.

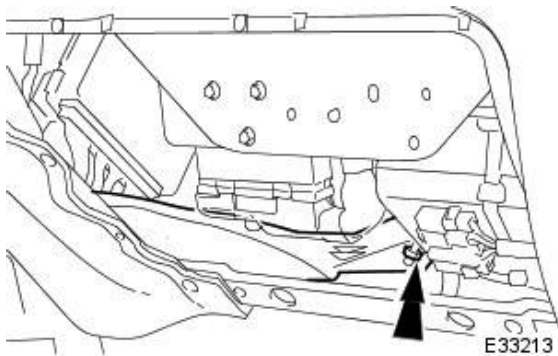


3. Disconnect the passenger side blower motor electrical connector.

1. Detach the passenger side blower motor electrical connector.
2. Remove and discard the cable ties.
3. Disconnect the passenger side blower motor electrical connector.

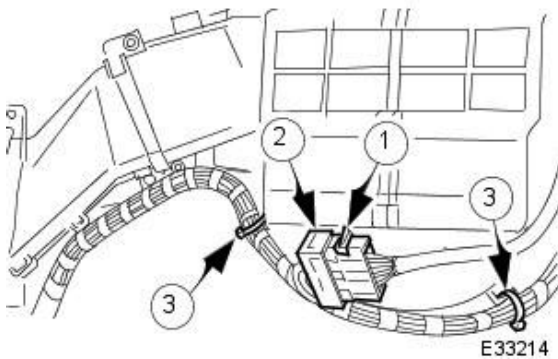



4. Detach the passenger side blower motor duct.

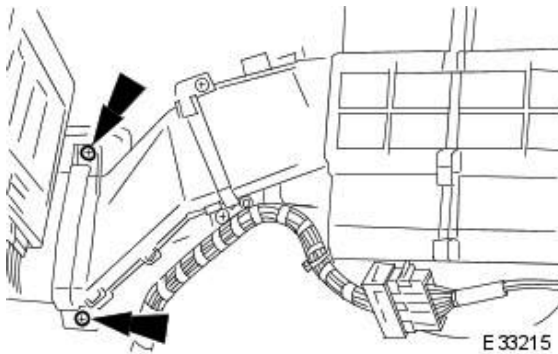

5. Remove the passenger side blower motor duct.

- Remove the screws.

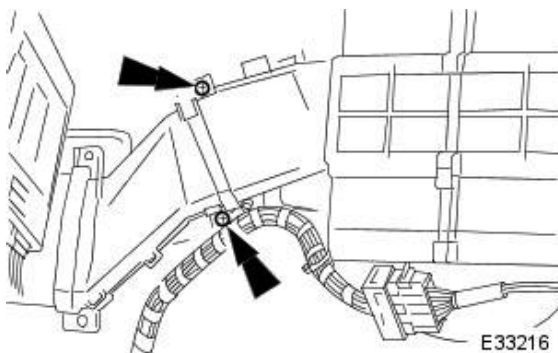

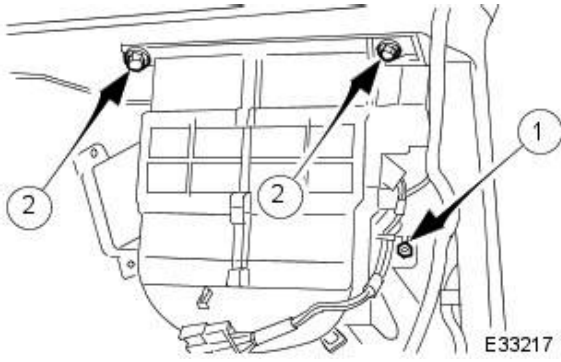

6. Remove the passenger side blower motor.

1. Loosen the nut.
2. Loosen the bolts.

Installation

1. To install, reverse the removal procedure.

1. Tighten to 6 Nm.
2. Tighten to 6 Nm.

