

Rear Interior Lamp Bulb Vehicles Without: Convertible Top 86.45.06

Removal

1. Remove the lamp from the roof.
 - Carefully prise one side of the lamp assembly from the roof panel.
 - Lower the lamp assembly.



2. Remove the bulb from the roof lamp.
 1. Squeeze the lens retaining lugs, located one each side of the bulb, and remove the lens.
 2. Remove the bulb.

Installation

1. Installation is the reverse of removal.