



Crankshaft Position (CKP) Sensor 18.30.12

Removal

1. Disconnect battery ground cable (IMPORTANT, see SRO <<86.15.19>> for further information).

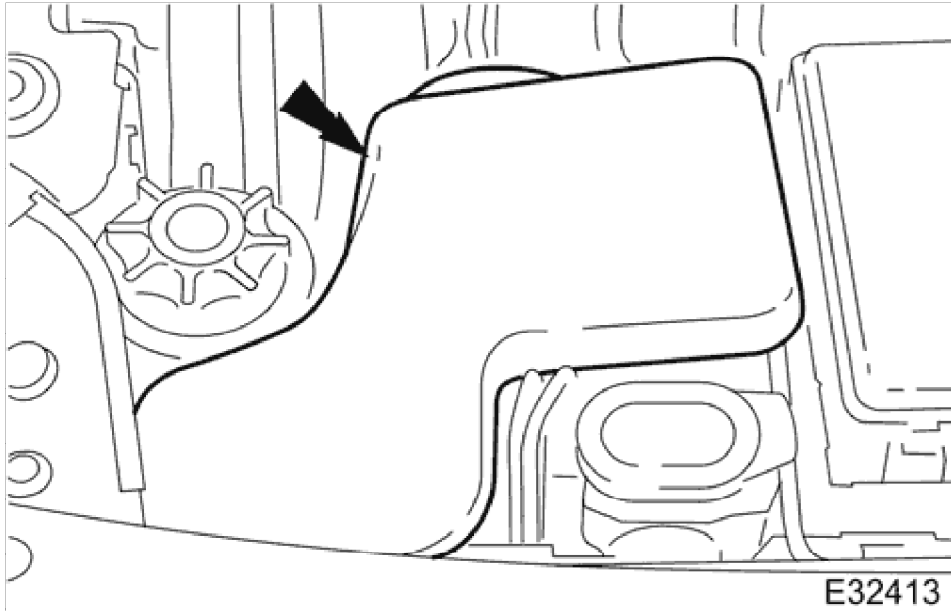


2. Remove ABS controller cover for access.

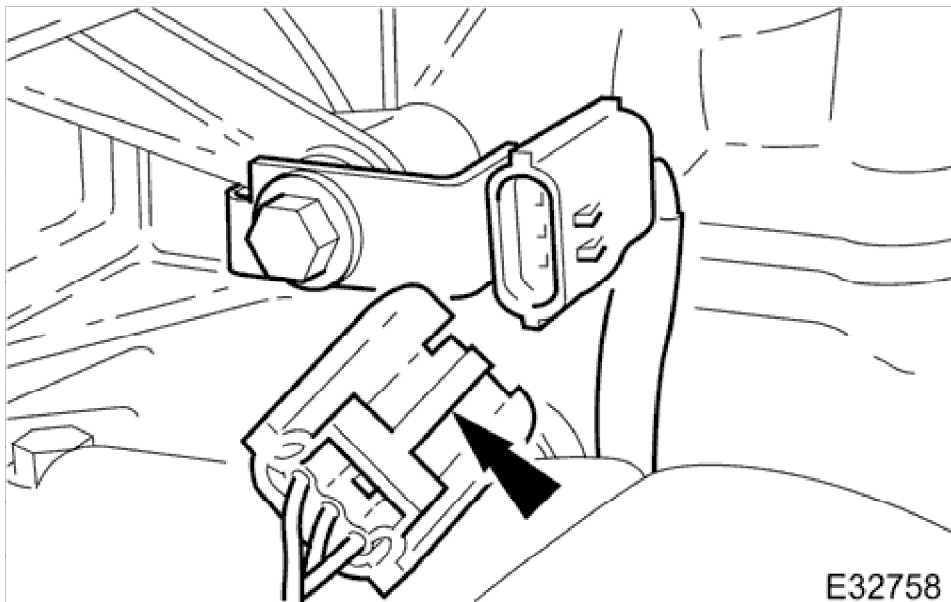


3. Disconnect engine harness connector from CKP sensor connector.
 - Depress tang on connector to release, tools are not necessary.

1998 XK RANGE - Electronic Engine Controls - 303-14

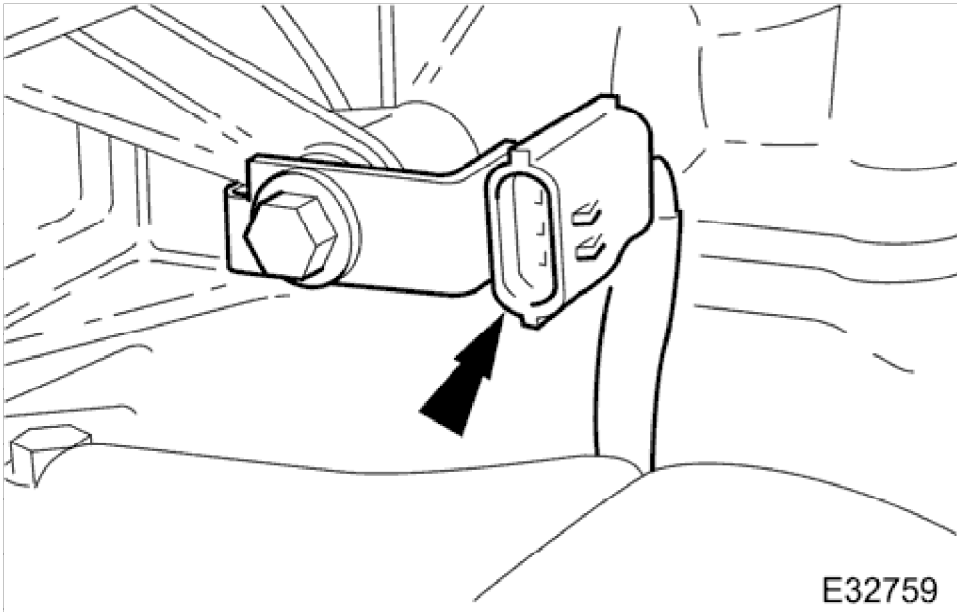


- 4. Release CKP sensor plug from mounting bracket.
 - Depress tang on sensor plug to release, tools are not necessary.

- 5. Raise vehicle.

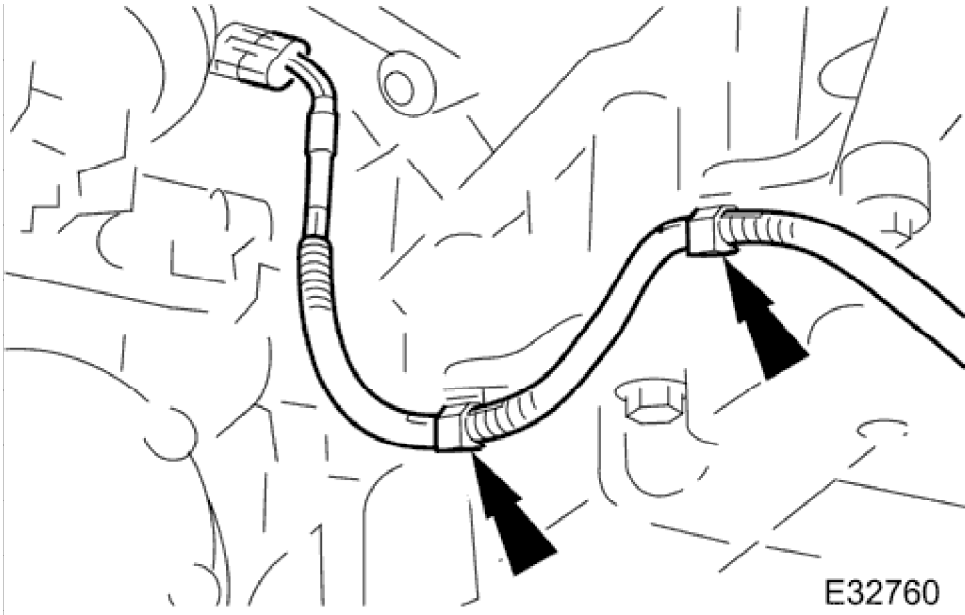


- 6. From below: release harness clips from engine.

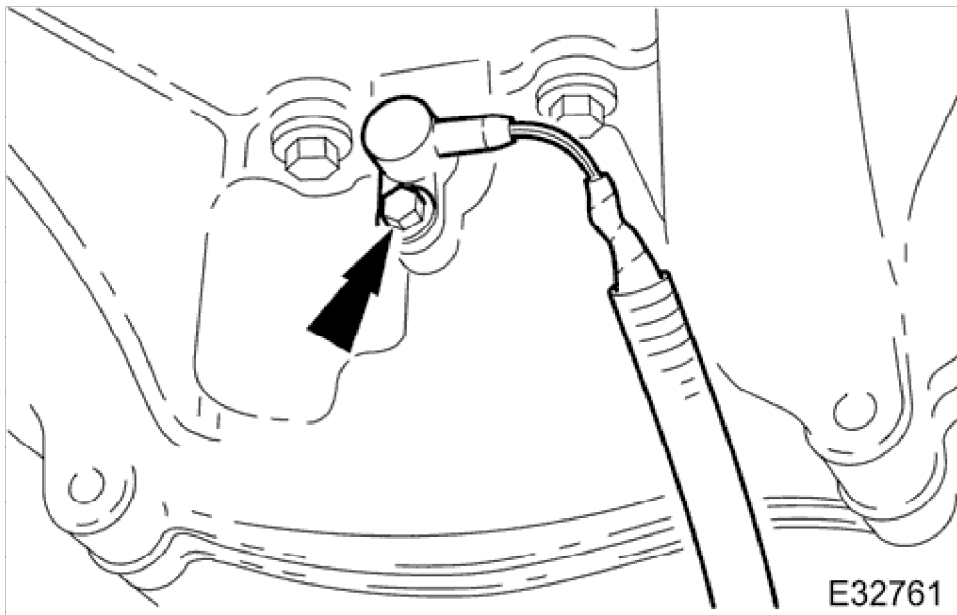

7. Remove crankshaft position sensor.

- Remove fixing.
- Remove sensor.
- Retain harness clips

Installation

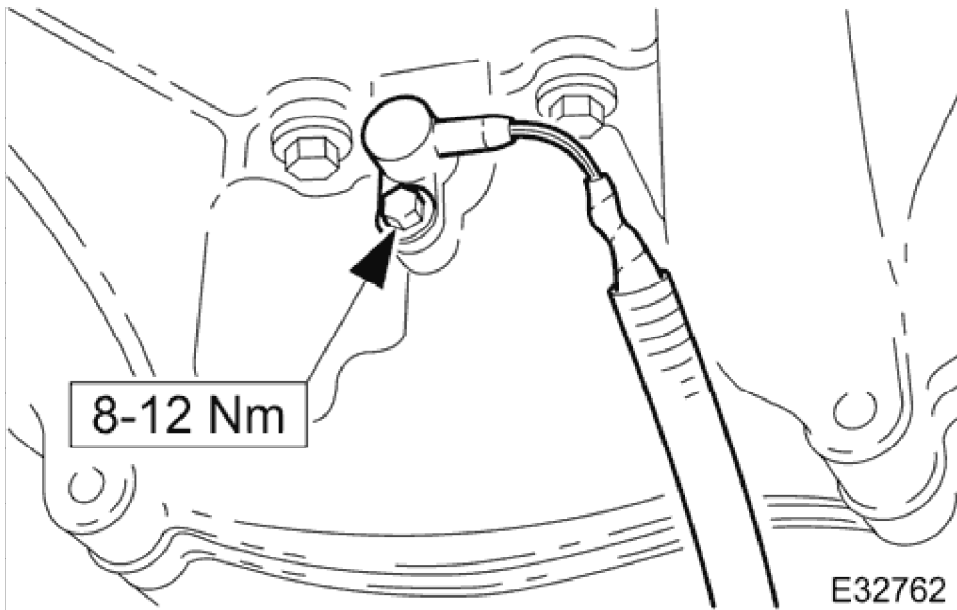

1. Installation is a reversal of the removal procedure.