CONNECTOR QUICK REFERENCE GUIDE

Publication Part No. JLR 14 03 21_1E

Document Objective: To provide basic connector location information only, including in-lines and grounds.
For detailed connector information refer to the Electrical Reference Library (ERL).

All paper copies are uncontrolled.

Note: For improved clarity some harnesses have been omitted completely e.g. engines, seats, bumpers, steering, climate control and some link leads.

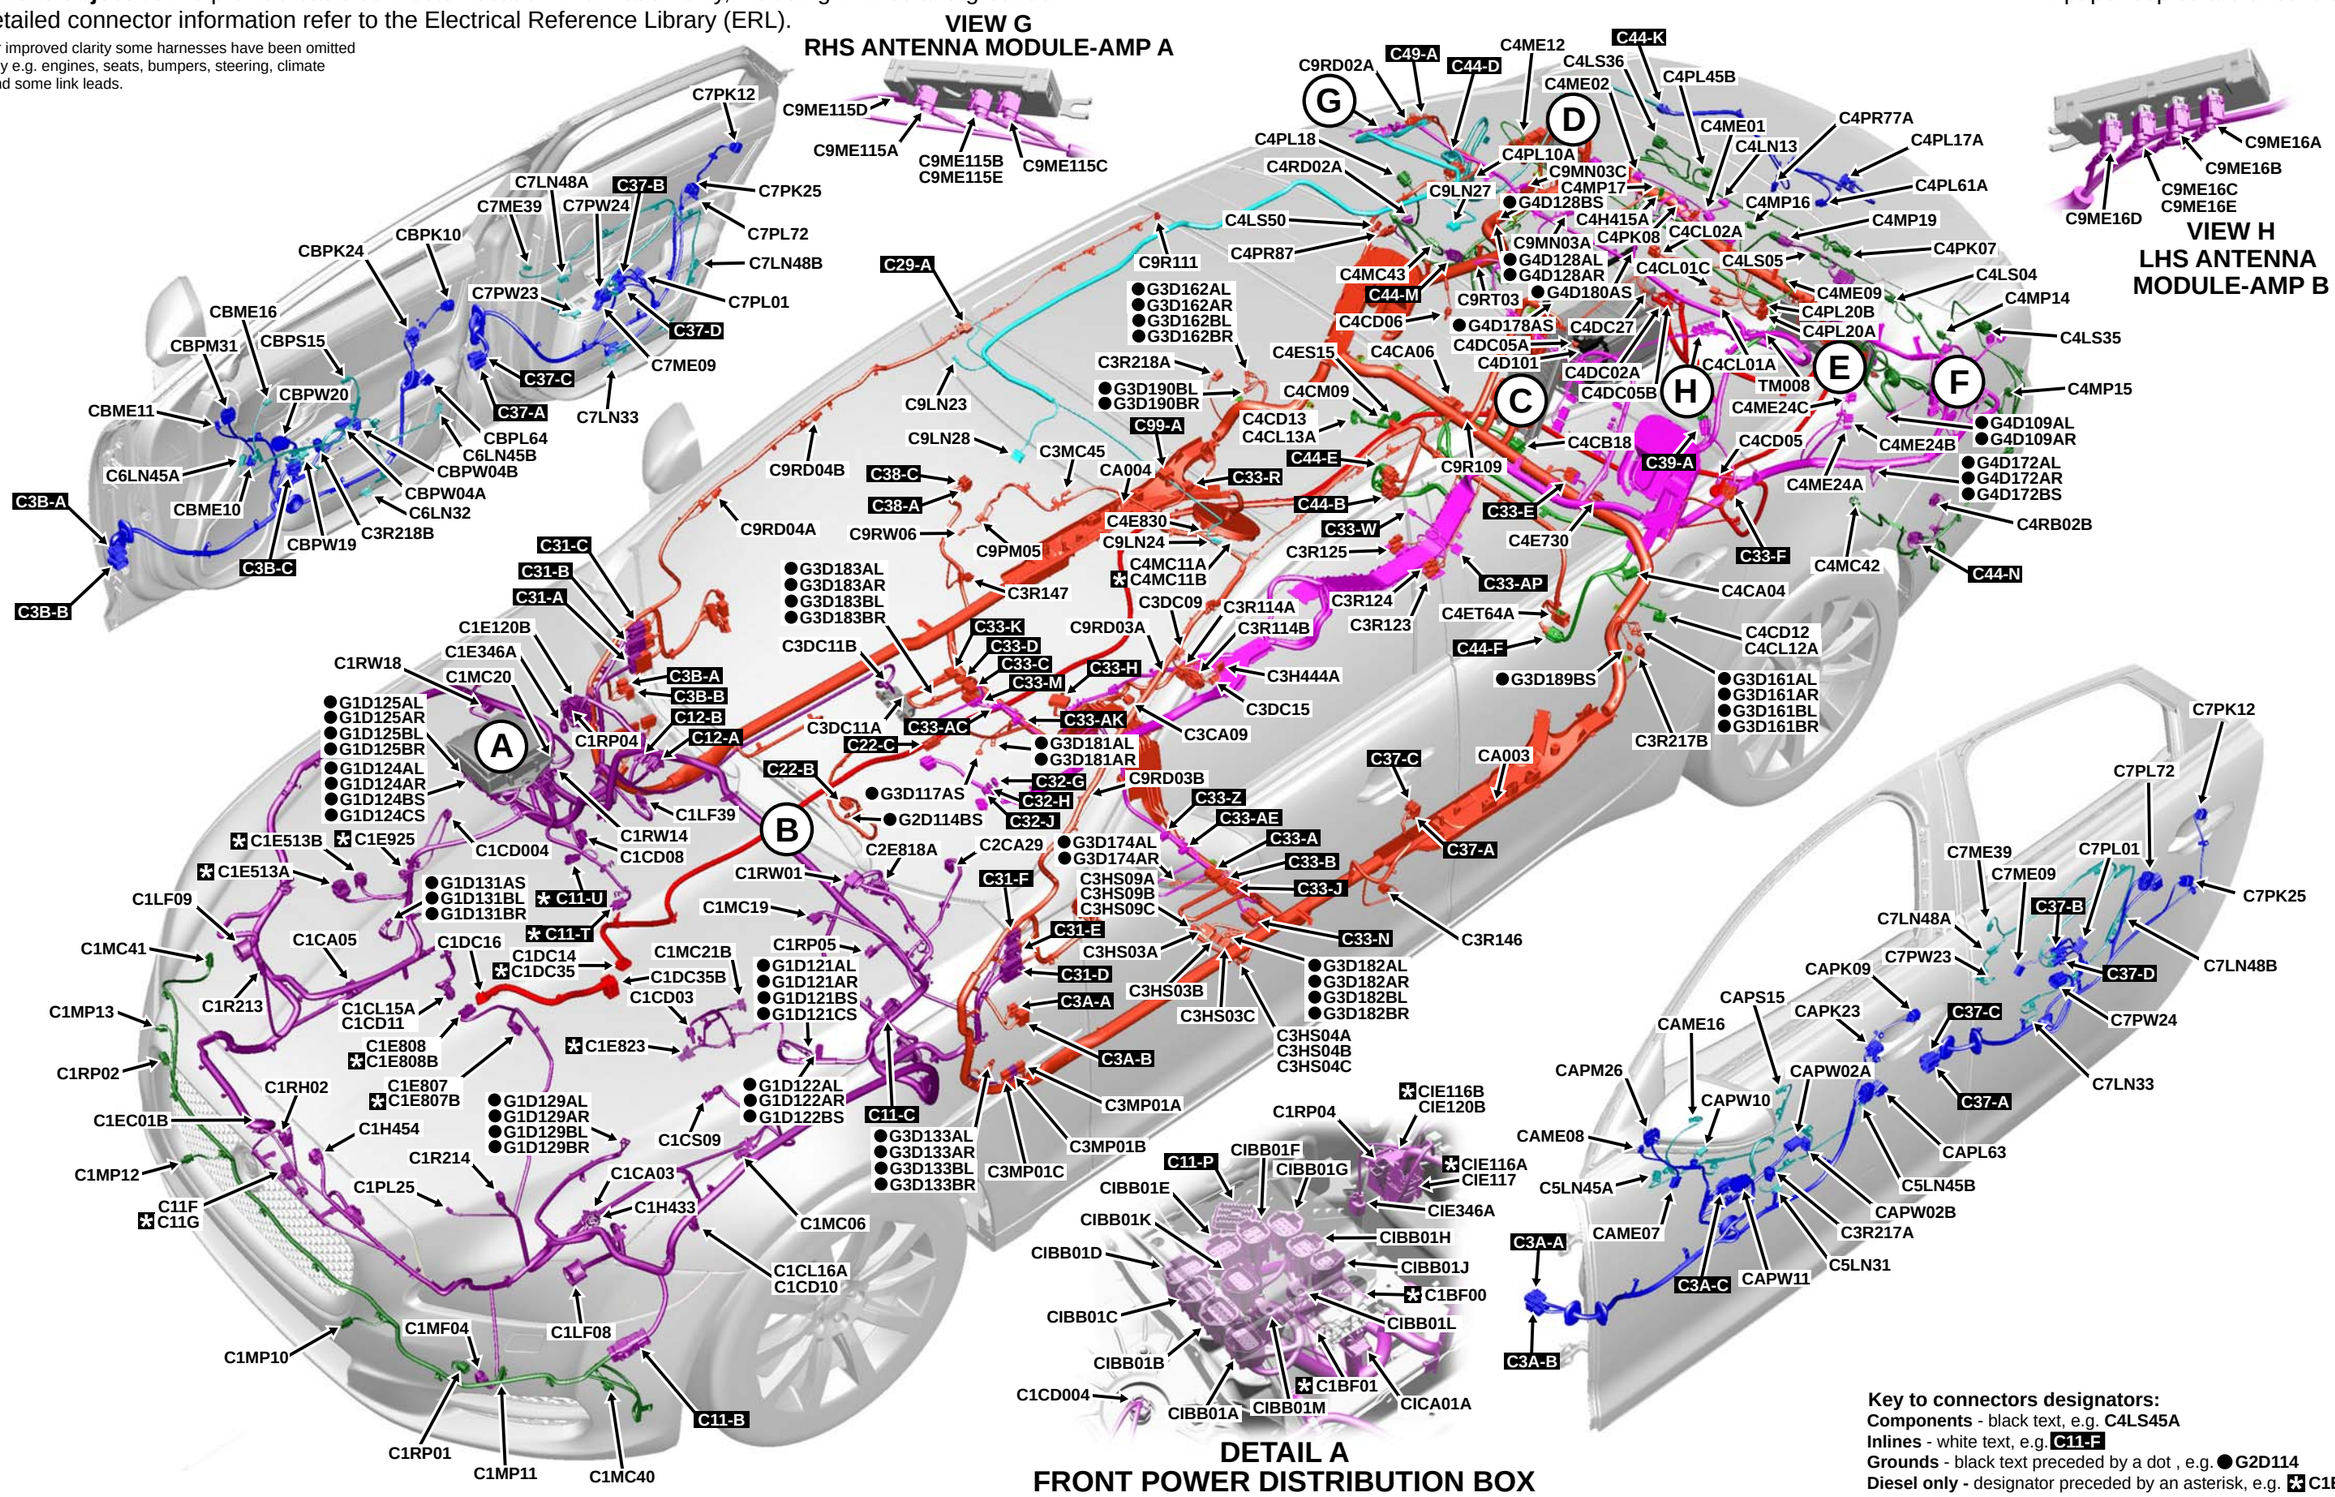

CONNECTOR QUICK REFERENCE GUIDE

Publication Part No. JLR 14 03 21_1E

All paper copies are uncontrolled.

DETAIL B
IP AND CENTRE CONSOLE

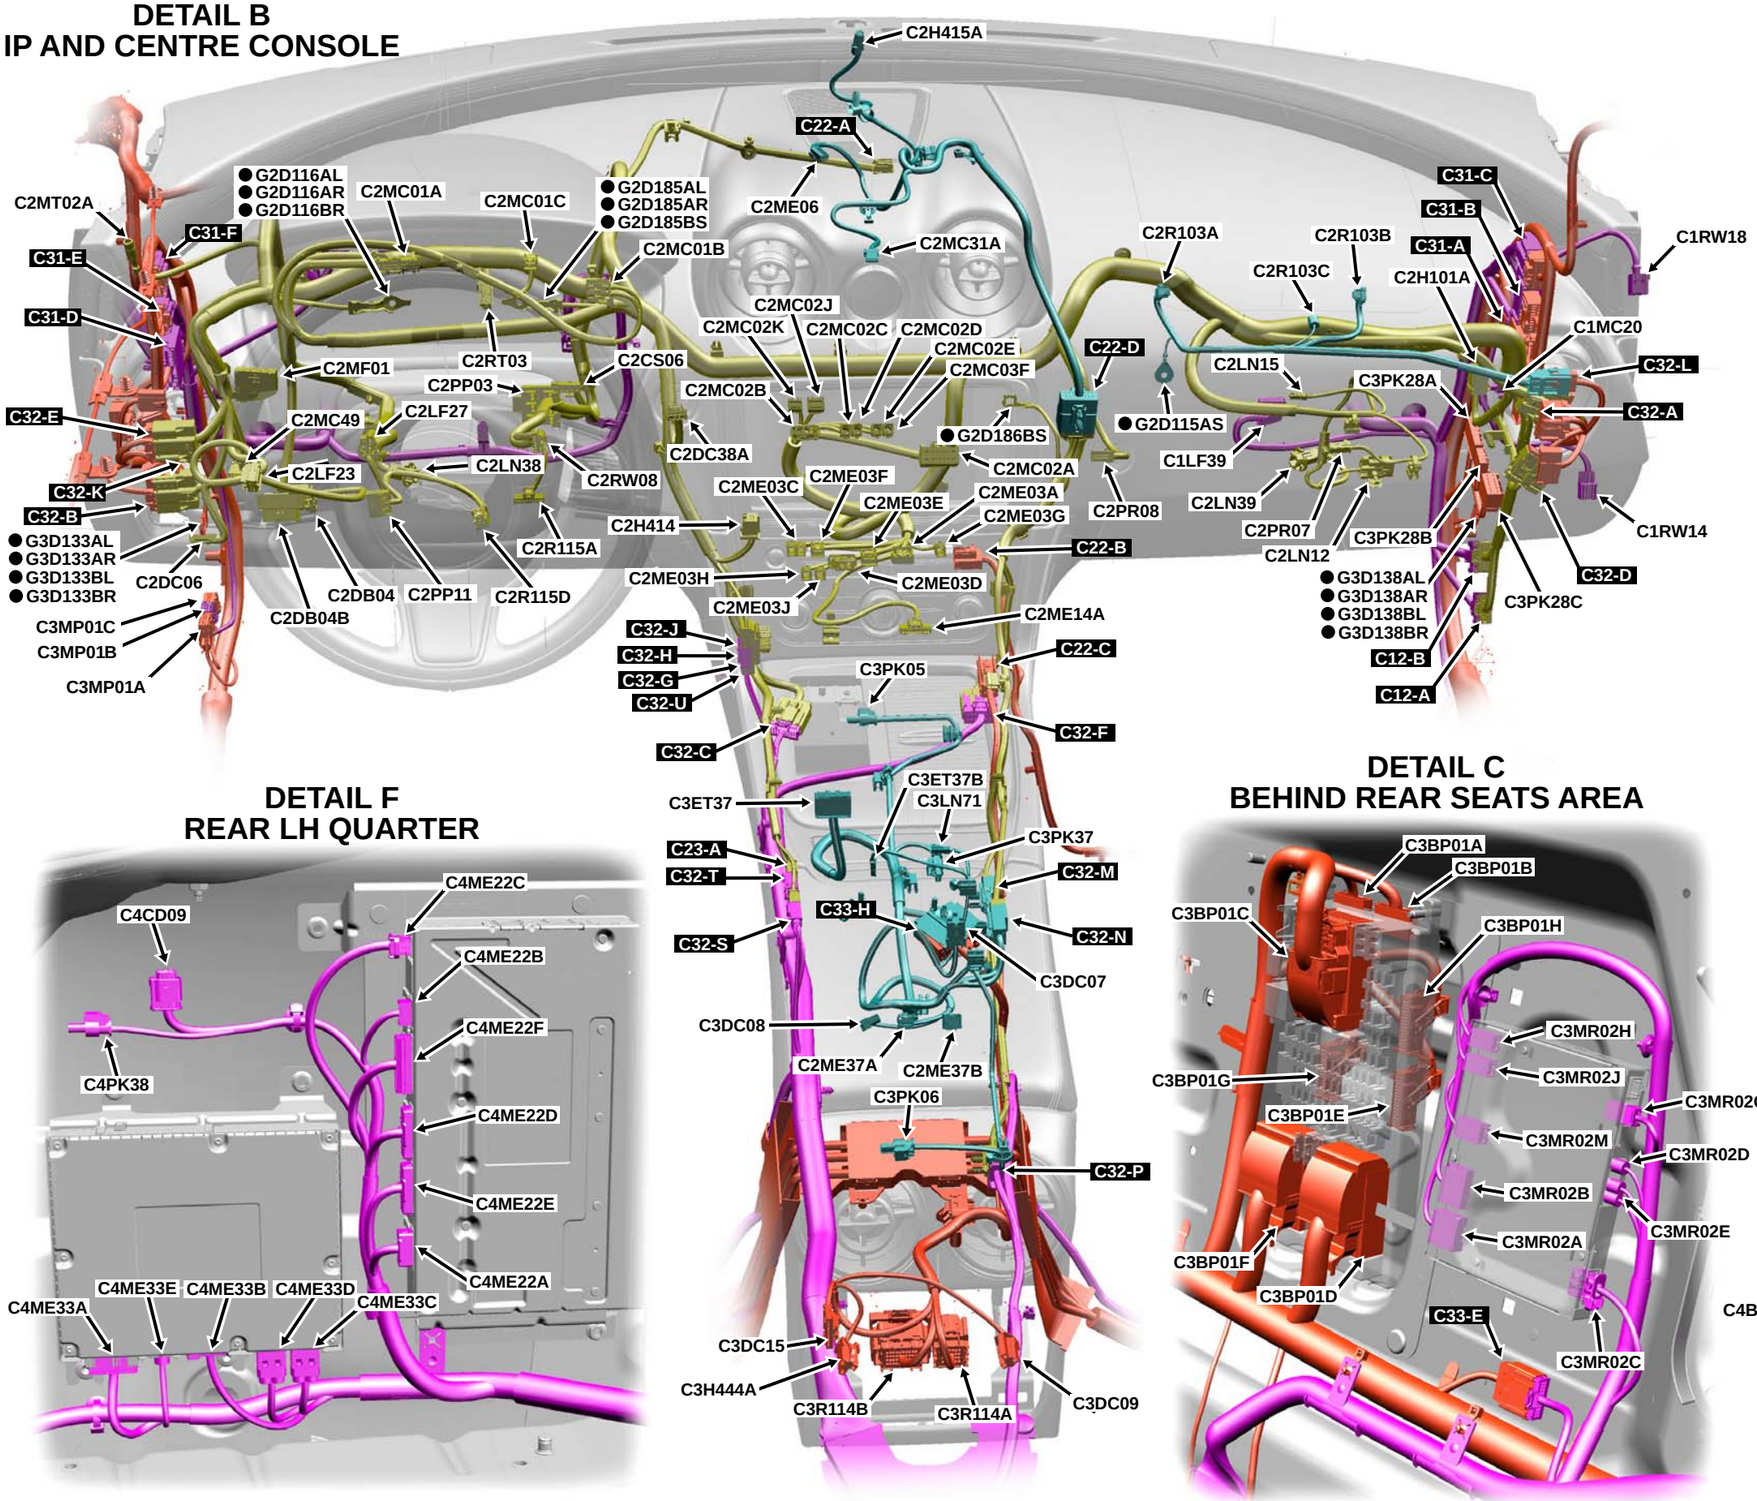

DETAIL D
REAR RH QUARTER

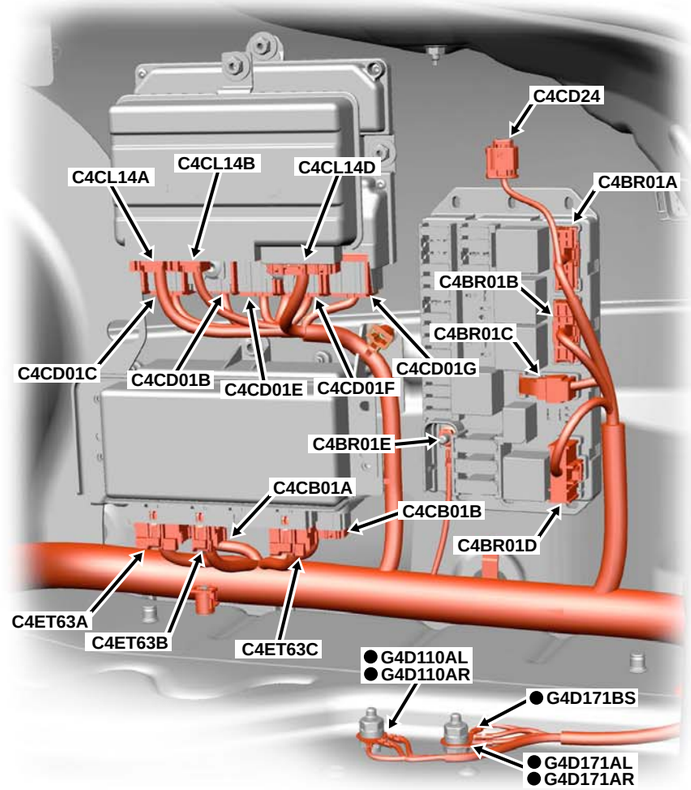

DETAIL F
REAR LH QUARTER

DETAIL C
BEHIND REAR SEATS AREA
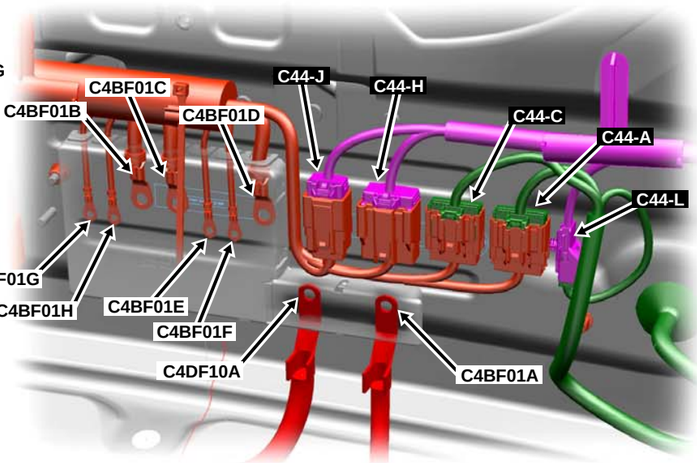
DETAIL E
REAR OF LUGGAGE COMPARTMENT