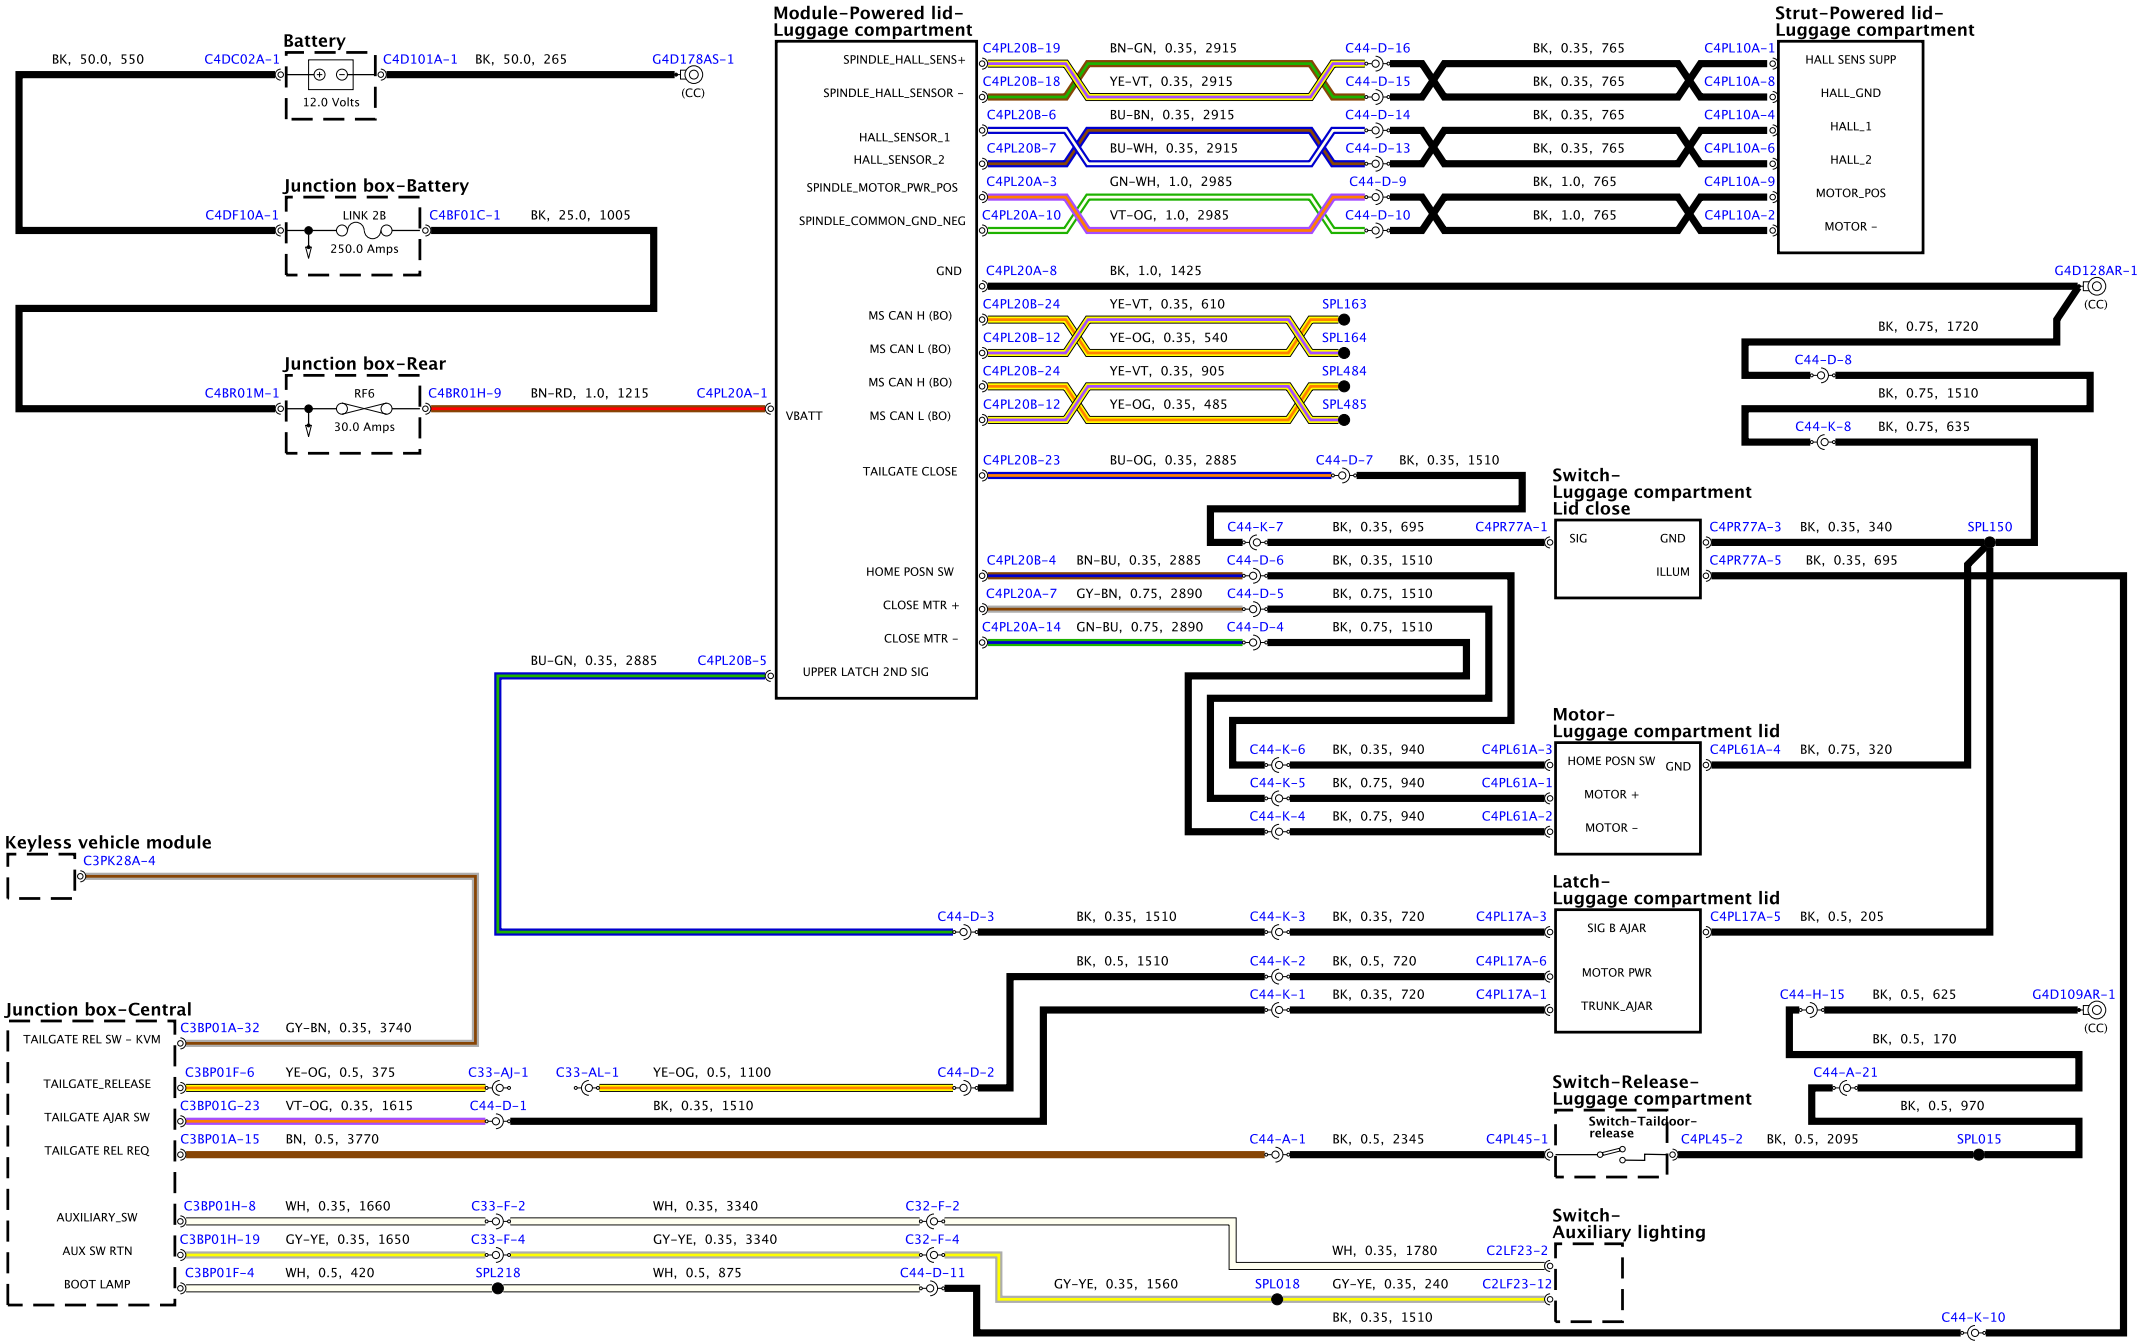
Battery
12.0 Volts
Junction box-Battery
LINK 2B
250.0 Amps
Junction box-Rear
RF6
30.0 Amps
Module-Powered lid-Luggage compartment
SPINDLE_HALL_SENS+
SPINDLE_HALL_SENSOR -
HALL_SENSOR_1
HALL_SENSOR_2
SPINDLE_MOTOR_PWR_POS
SPINDLE_COMMON_GND_NEG
GND
MS CAN H (BO)
MS CAN L (BO)
MS CAN H (BO)
VBATT
MS CAN L (BO)
TAILGATE CLOSE
HOME POSN SW
CLOSE MTR +
CLOSE MTR -
UPPER LATCH 2ND SIG
Strut-Powered lid-Luggage compartment
HALL SENS SUPP
HALL_GND
HALL_1
HALL_2
MOTOR_POS
MOTOR -
Switch-Luggage compartment Lid close
SIG
GND
ILLUM
Motor-Luggage compartment lid
HOME POSN SW
GND
MOTOR +
MOTOR -
Latch-Luggage compartment lid
SIG B AJAR
MOTOR PWR
TRUNK_AJAR
Switch-Release-Luggage compartment
Switch-Taildoor-release
Switch-Auxiliary lighting
Keyless vehicle module
Junction box-Central
TAILGATE REL SW - KVM
TAILGATE_RELEASE
TAILGATE AJAR SW
TAILGATE REL REQ
AUXILIARY_SW
AUX SW RTN
BOOT LAMP