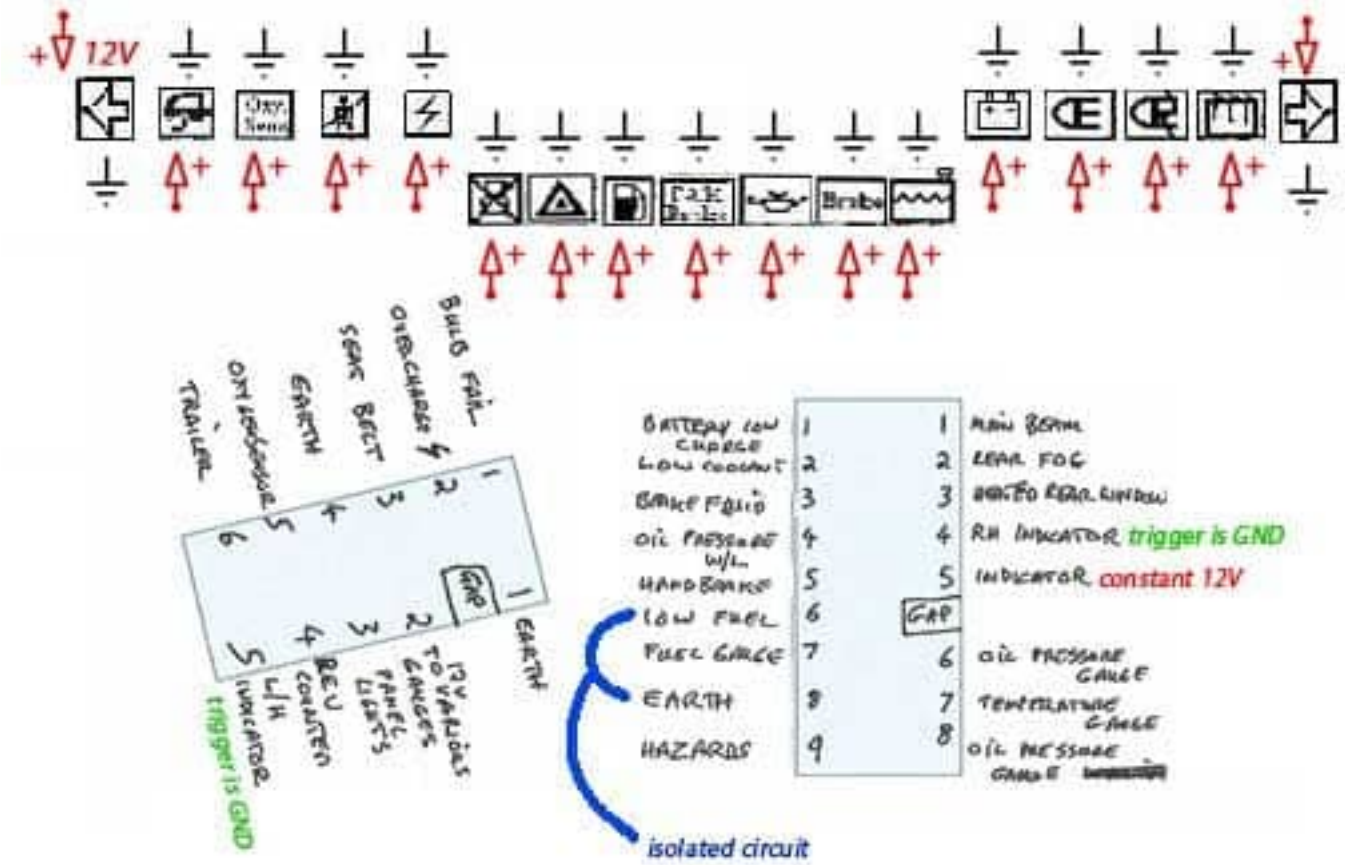
+ 12V
+
Brake
BULB FAIL
OVER-CHARGE
SEAT BELT
EARTH
OIL PRESSURE
TRAILER
GAP
EARTH
12V TO VARIOUS GAUGES PANEL LIGHTS
REV COUNTER
L/H INDICATOR
trigger is GND
BATTERY LOW CHARGE
LOW COOLANT
BRAKE FLUID
OIL PRESSURE W/L
HANDBRAKE
LOW FUEL
FUEL GAUGE
EARTH
HAZARDS
MAIN BEAM
REAR FOG
HEATED REAR WINDOW
RH INDICATOR trigger is GND
INDICATOR constant 12V
GAP
OIL PRESSURE GAUGE
TEMPERATURE GAUGE
OIL PRESSURE GAUGE
isolated circuit