Connector Quick Reference Guide

CONNECTOR QUICK REFERENCE GUIDE

Document Objective: To provide basic connector location information only, including in-lines and grounds.
For detailed connector information refer to the Electrical Reference Library (ERL).

All paper copies are uncontrolled.

Note: For improved clarity some harnesses have been omitted completely e.g. engines, seats, bumpers, steering, climate control and some link leads. *Based on convertible, some coupe differences identified.*

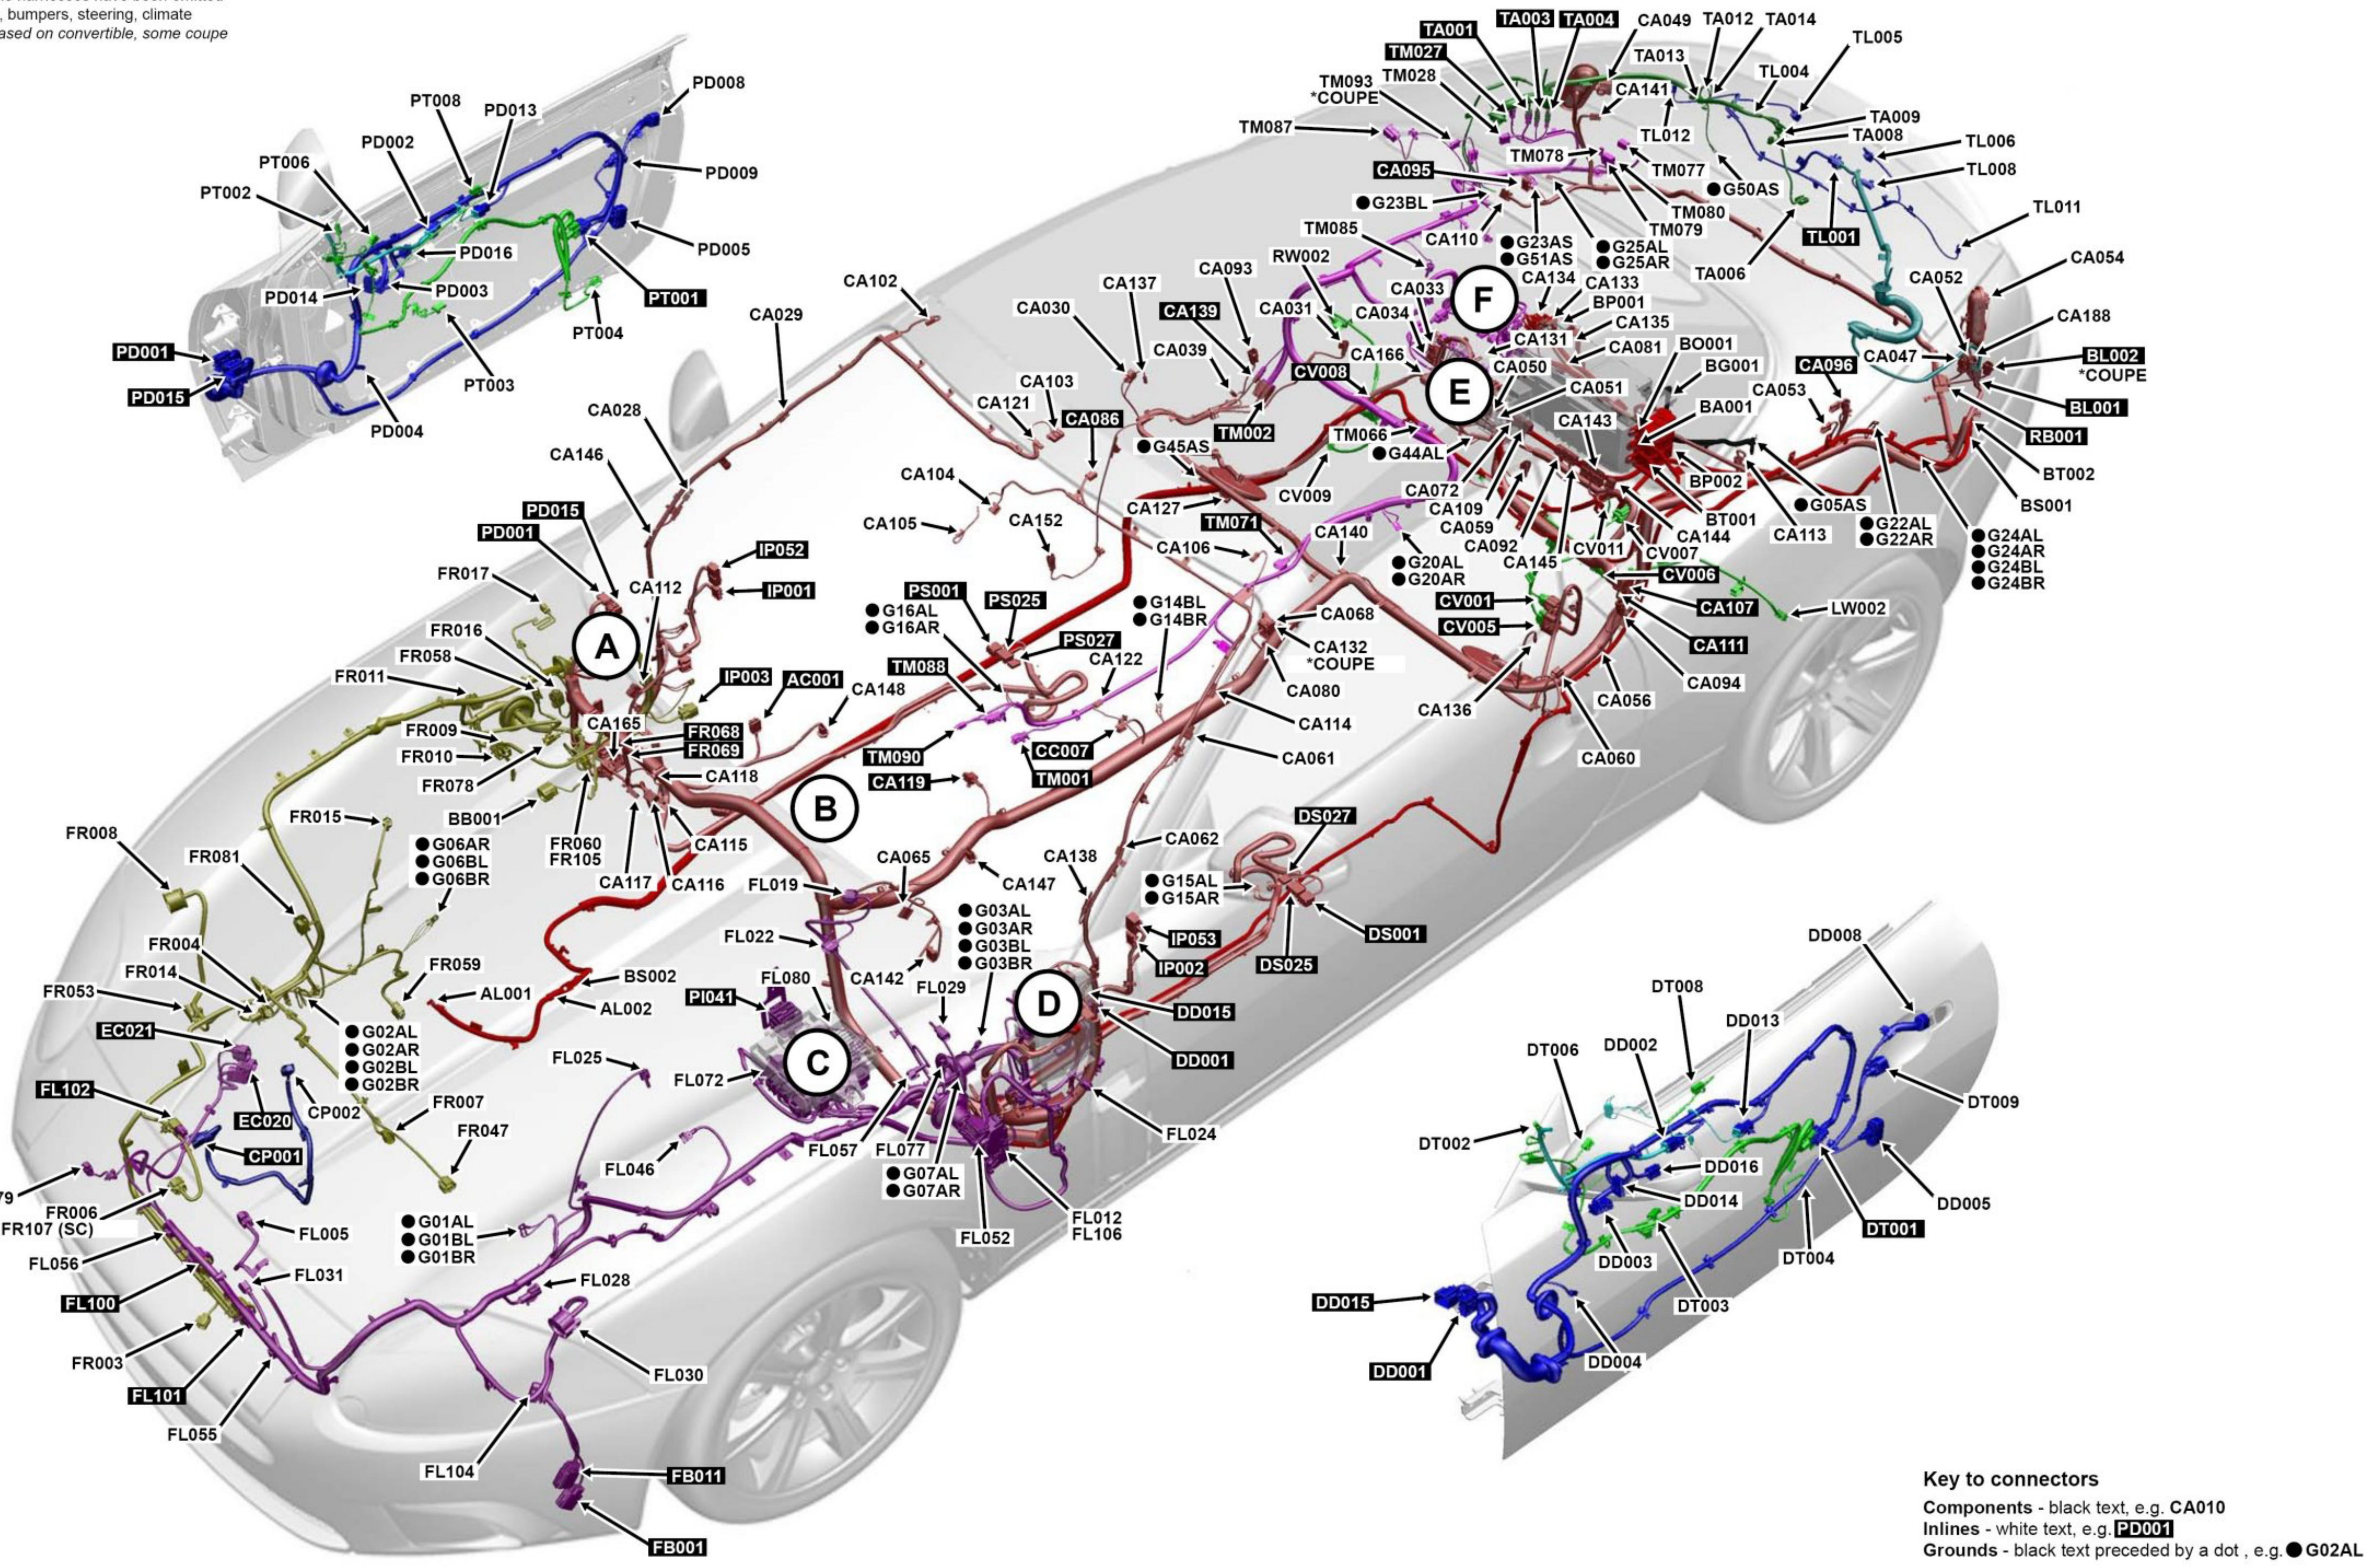

Key to connectors
Components - black text, e.g. **CA010**
Inlines - white text, e.g. **PD001**
Grounds - black text preceded by a dot , e.g. ● **G02AL**

All paper copies are uncontrolled.

DETAIL B
IP AND CENTRE CONSOLE

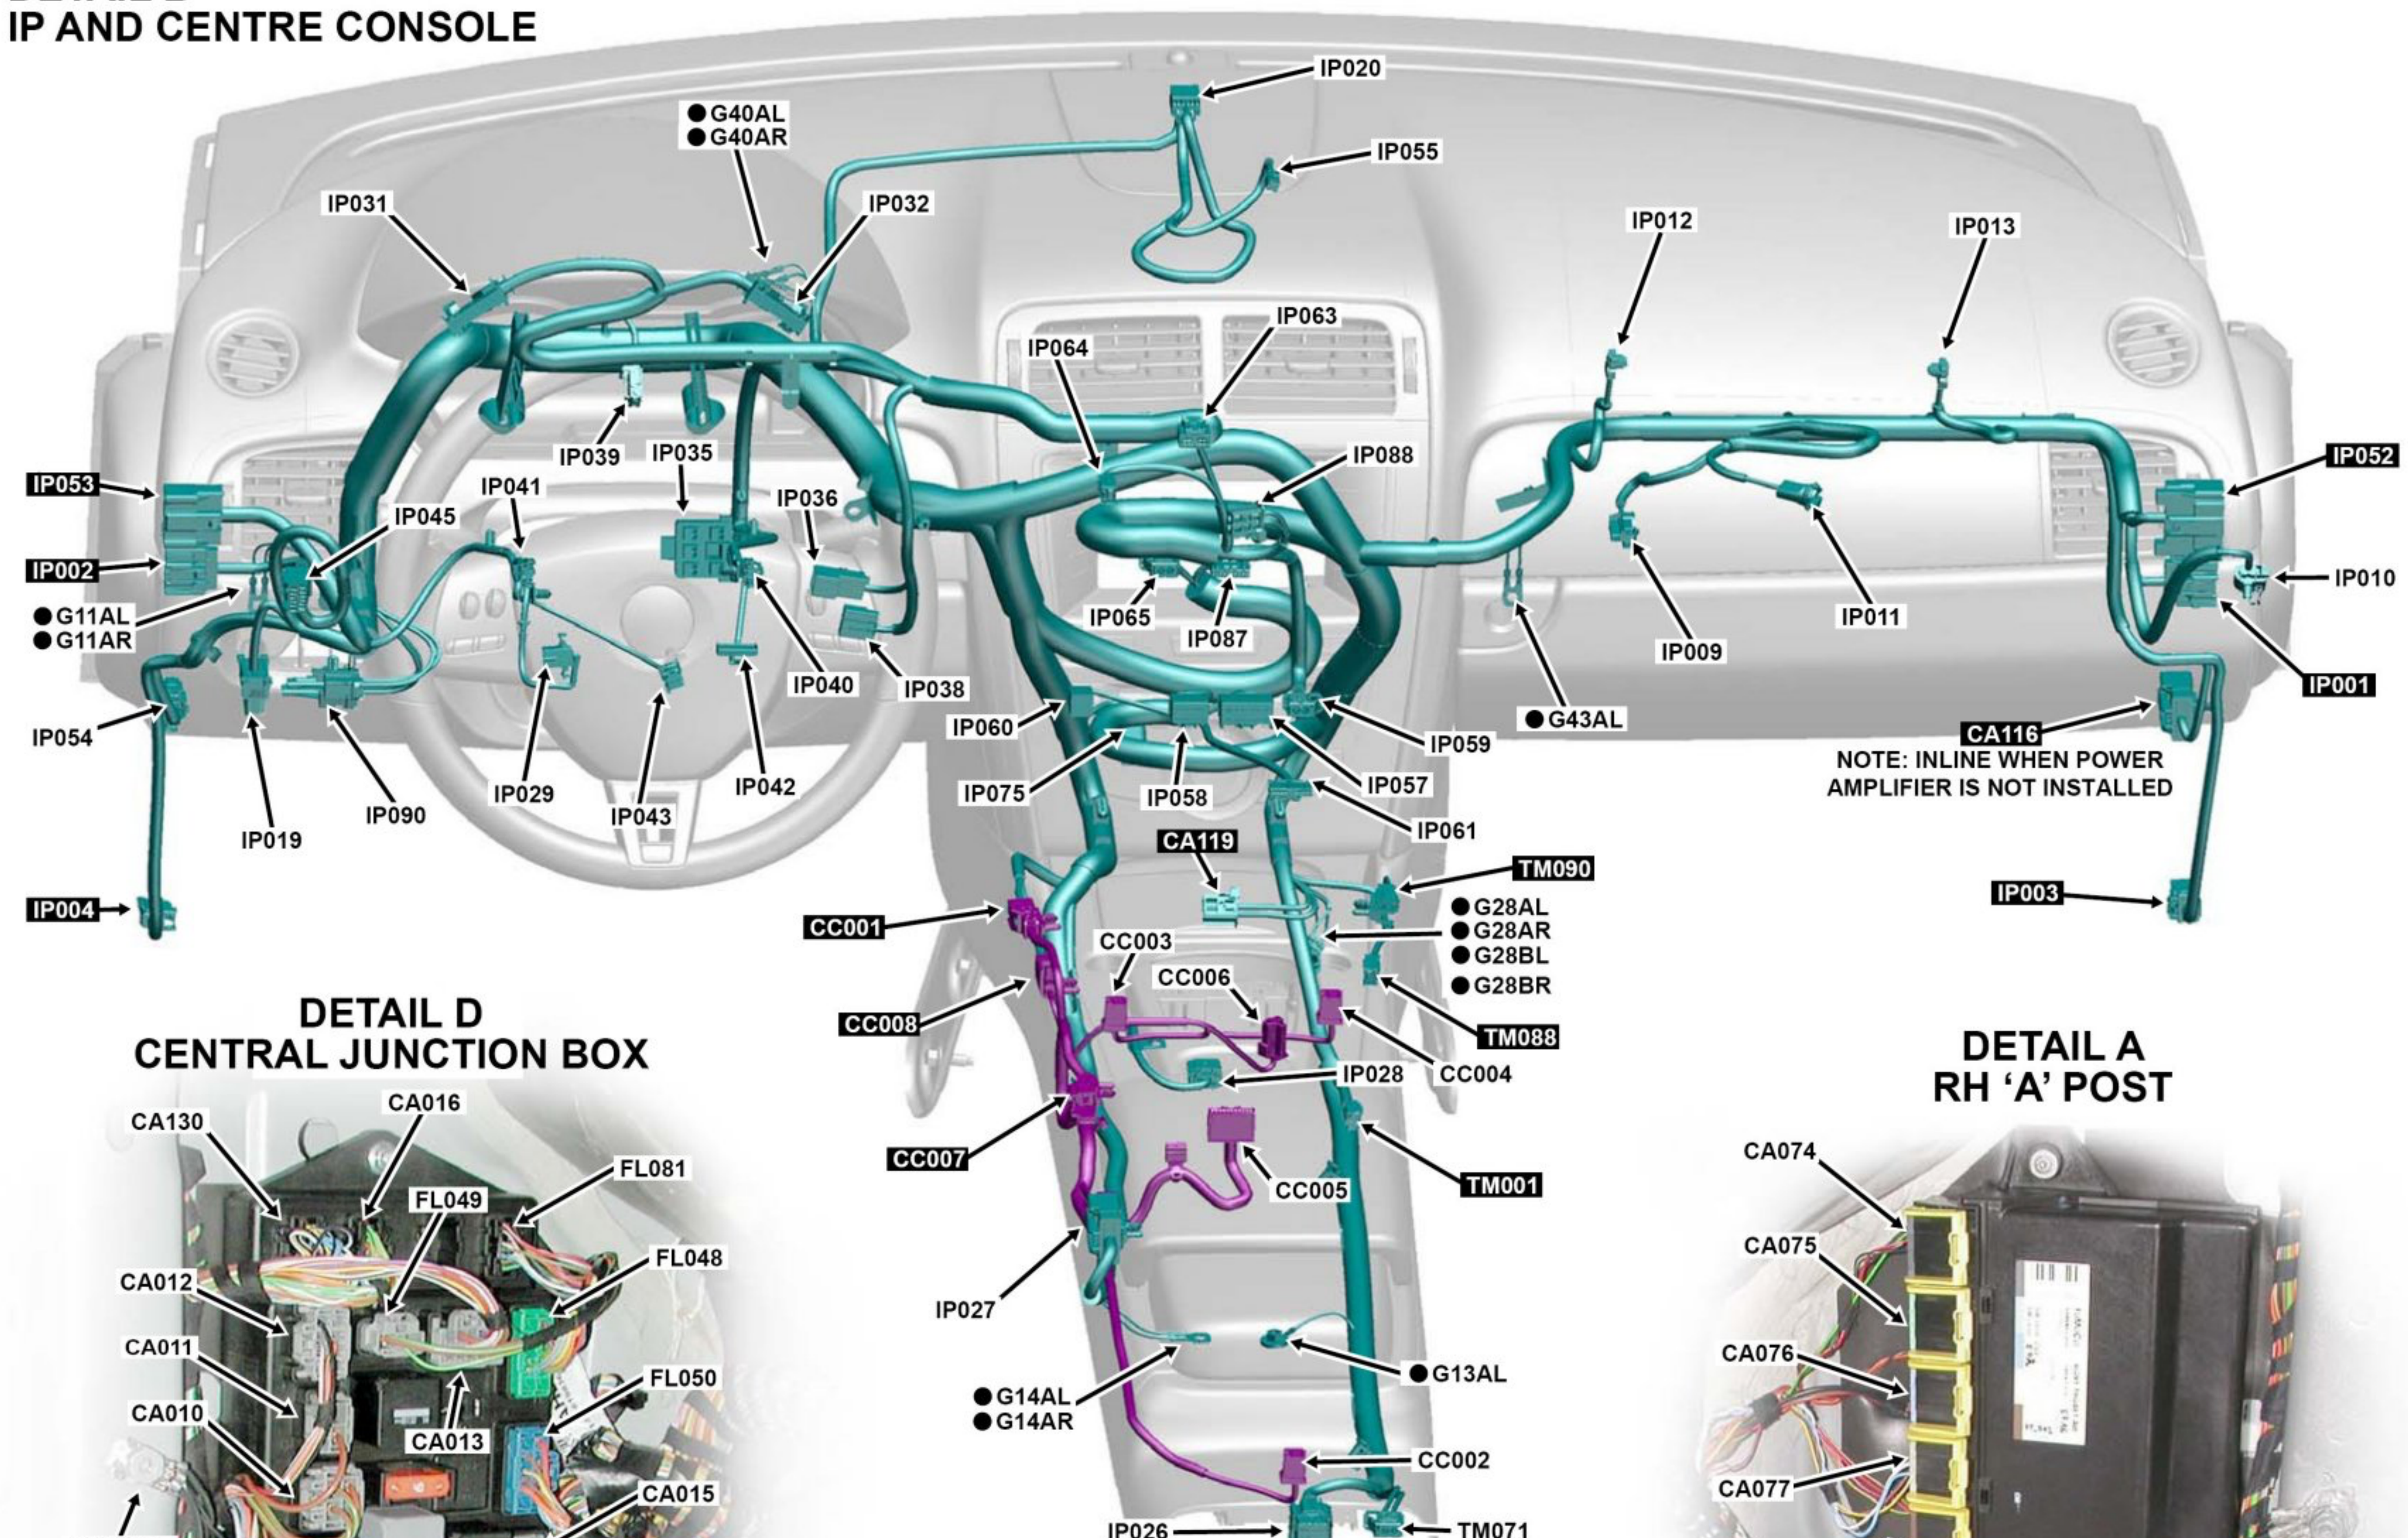

DETAIL C
POWER DISTRIBUTION BOX

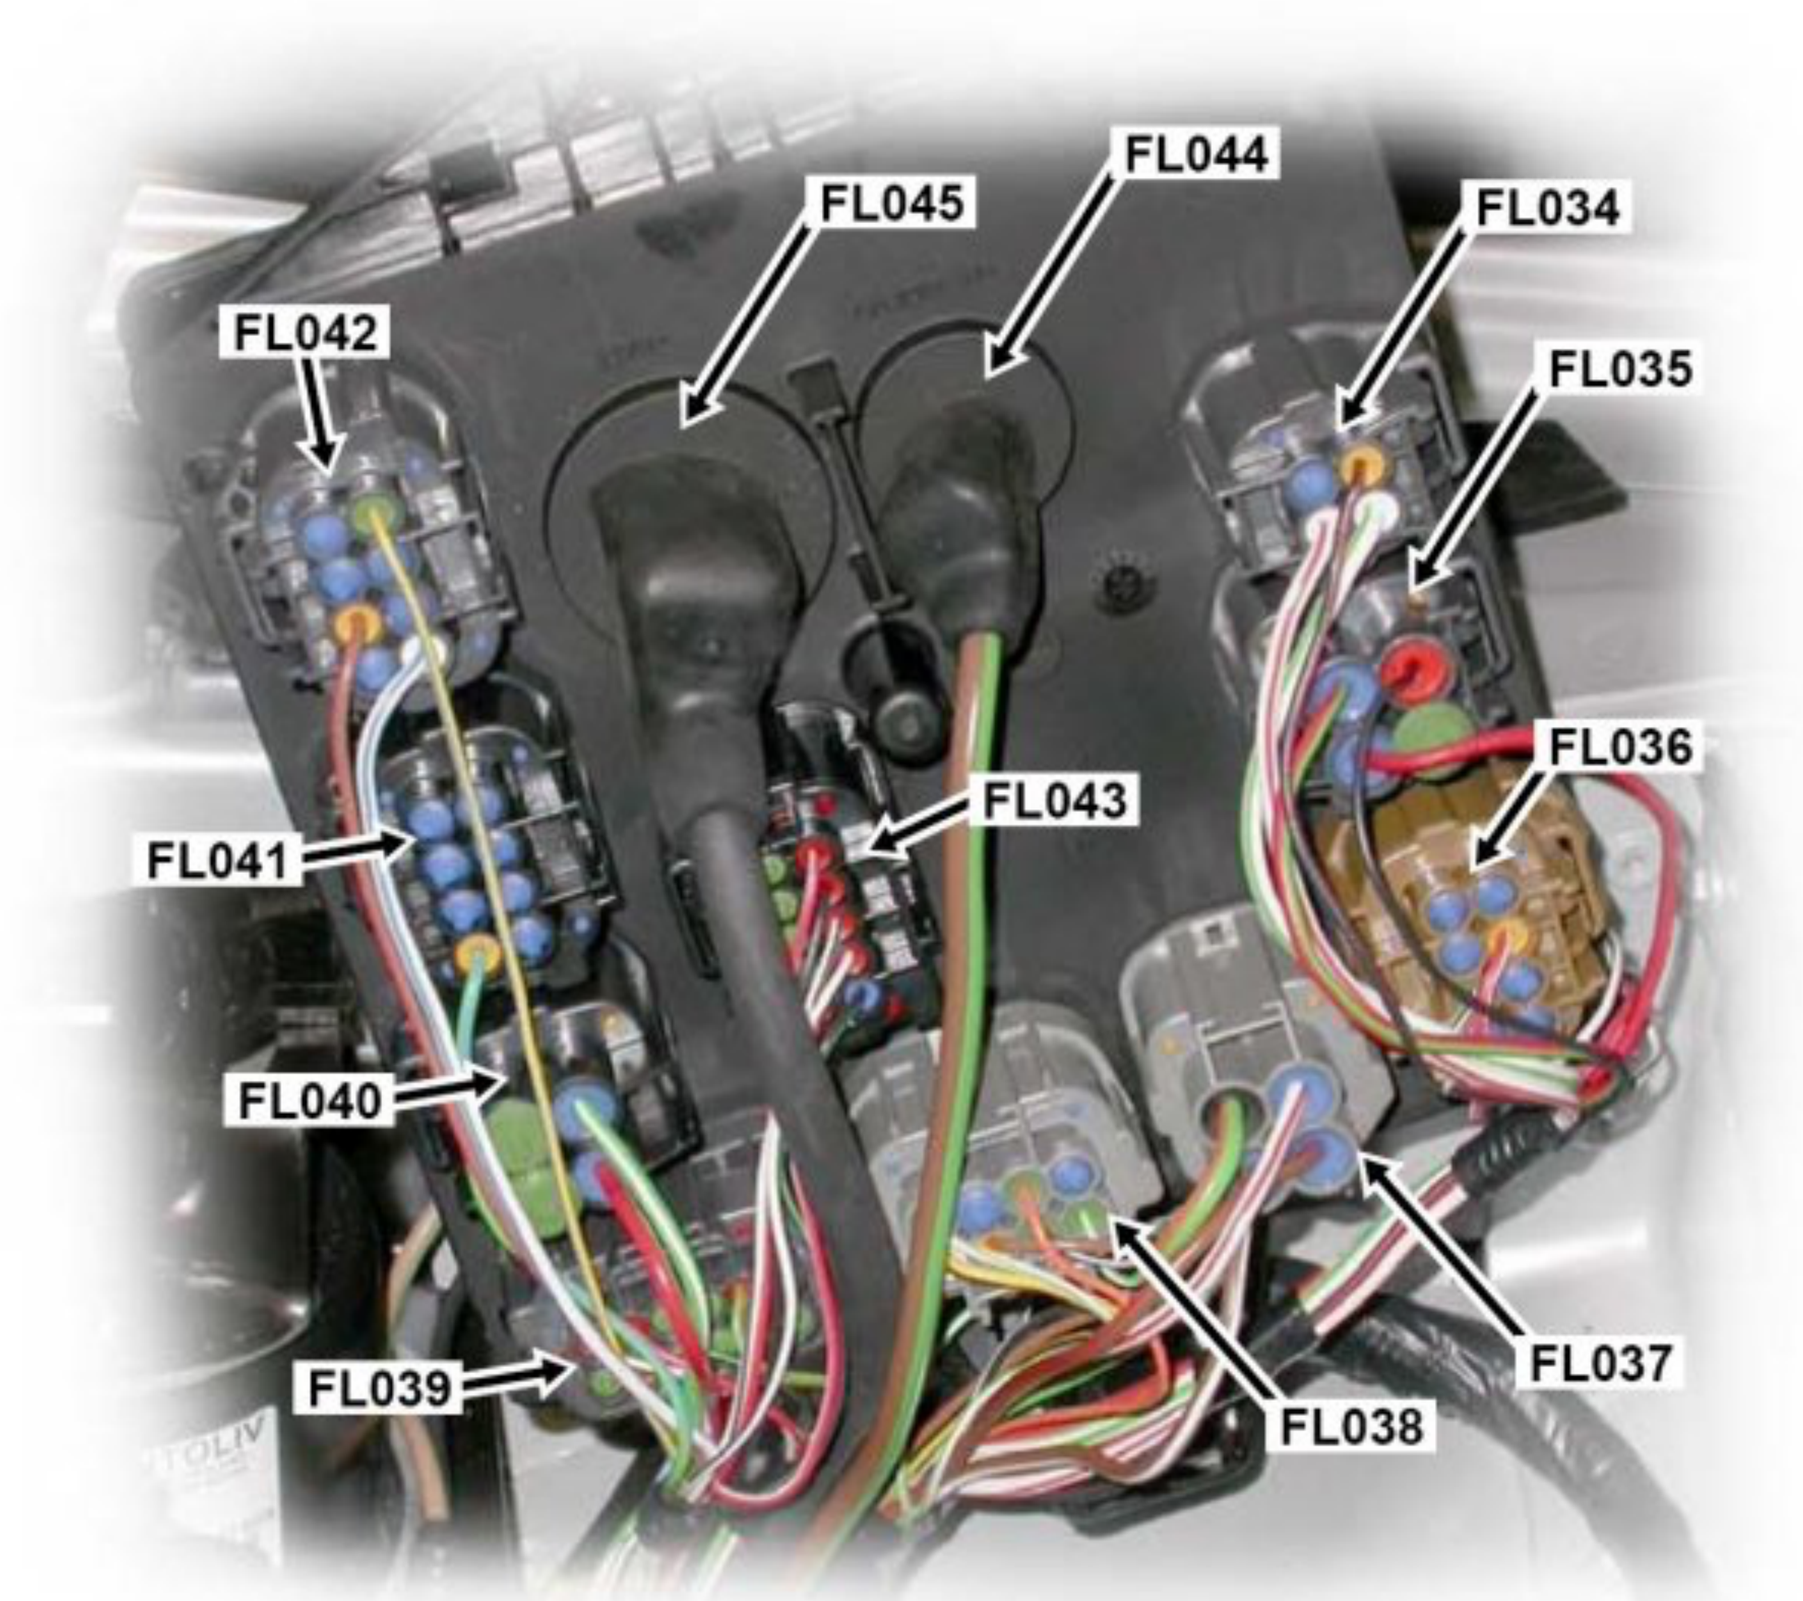

DETAIL D
CENTRAL JUNCTION BOX

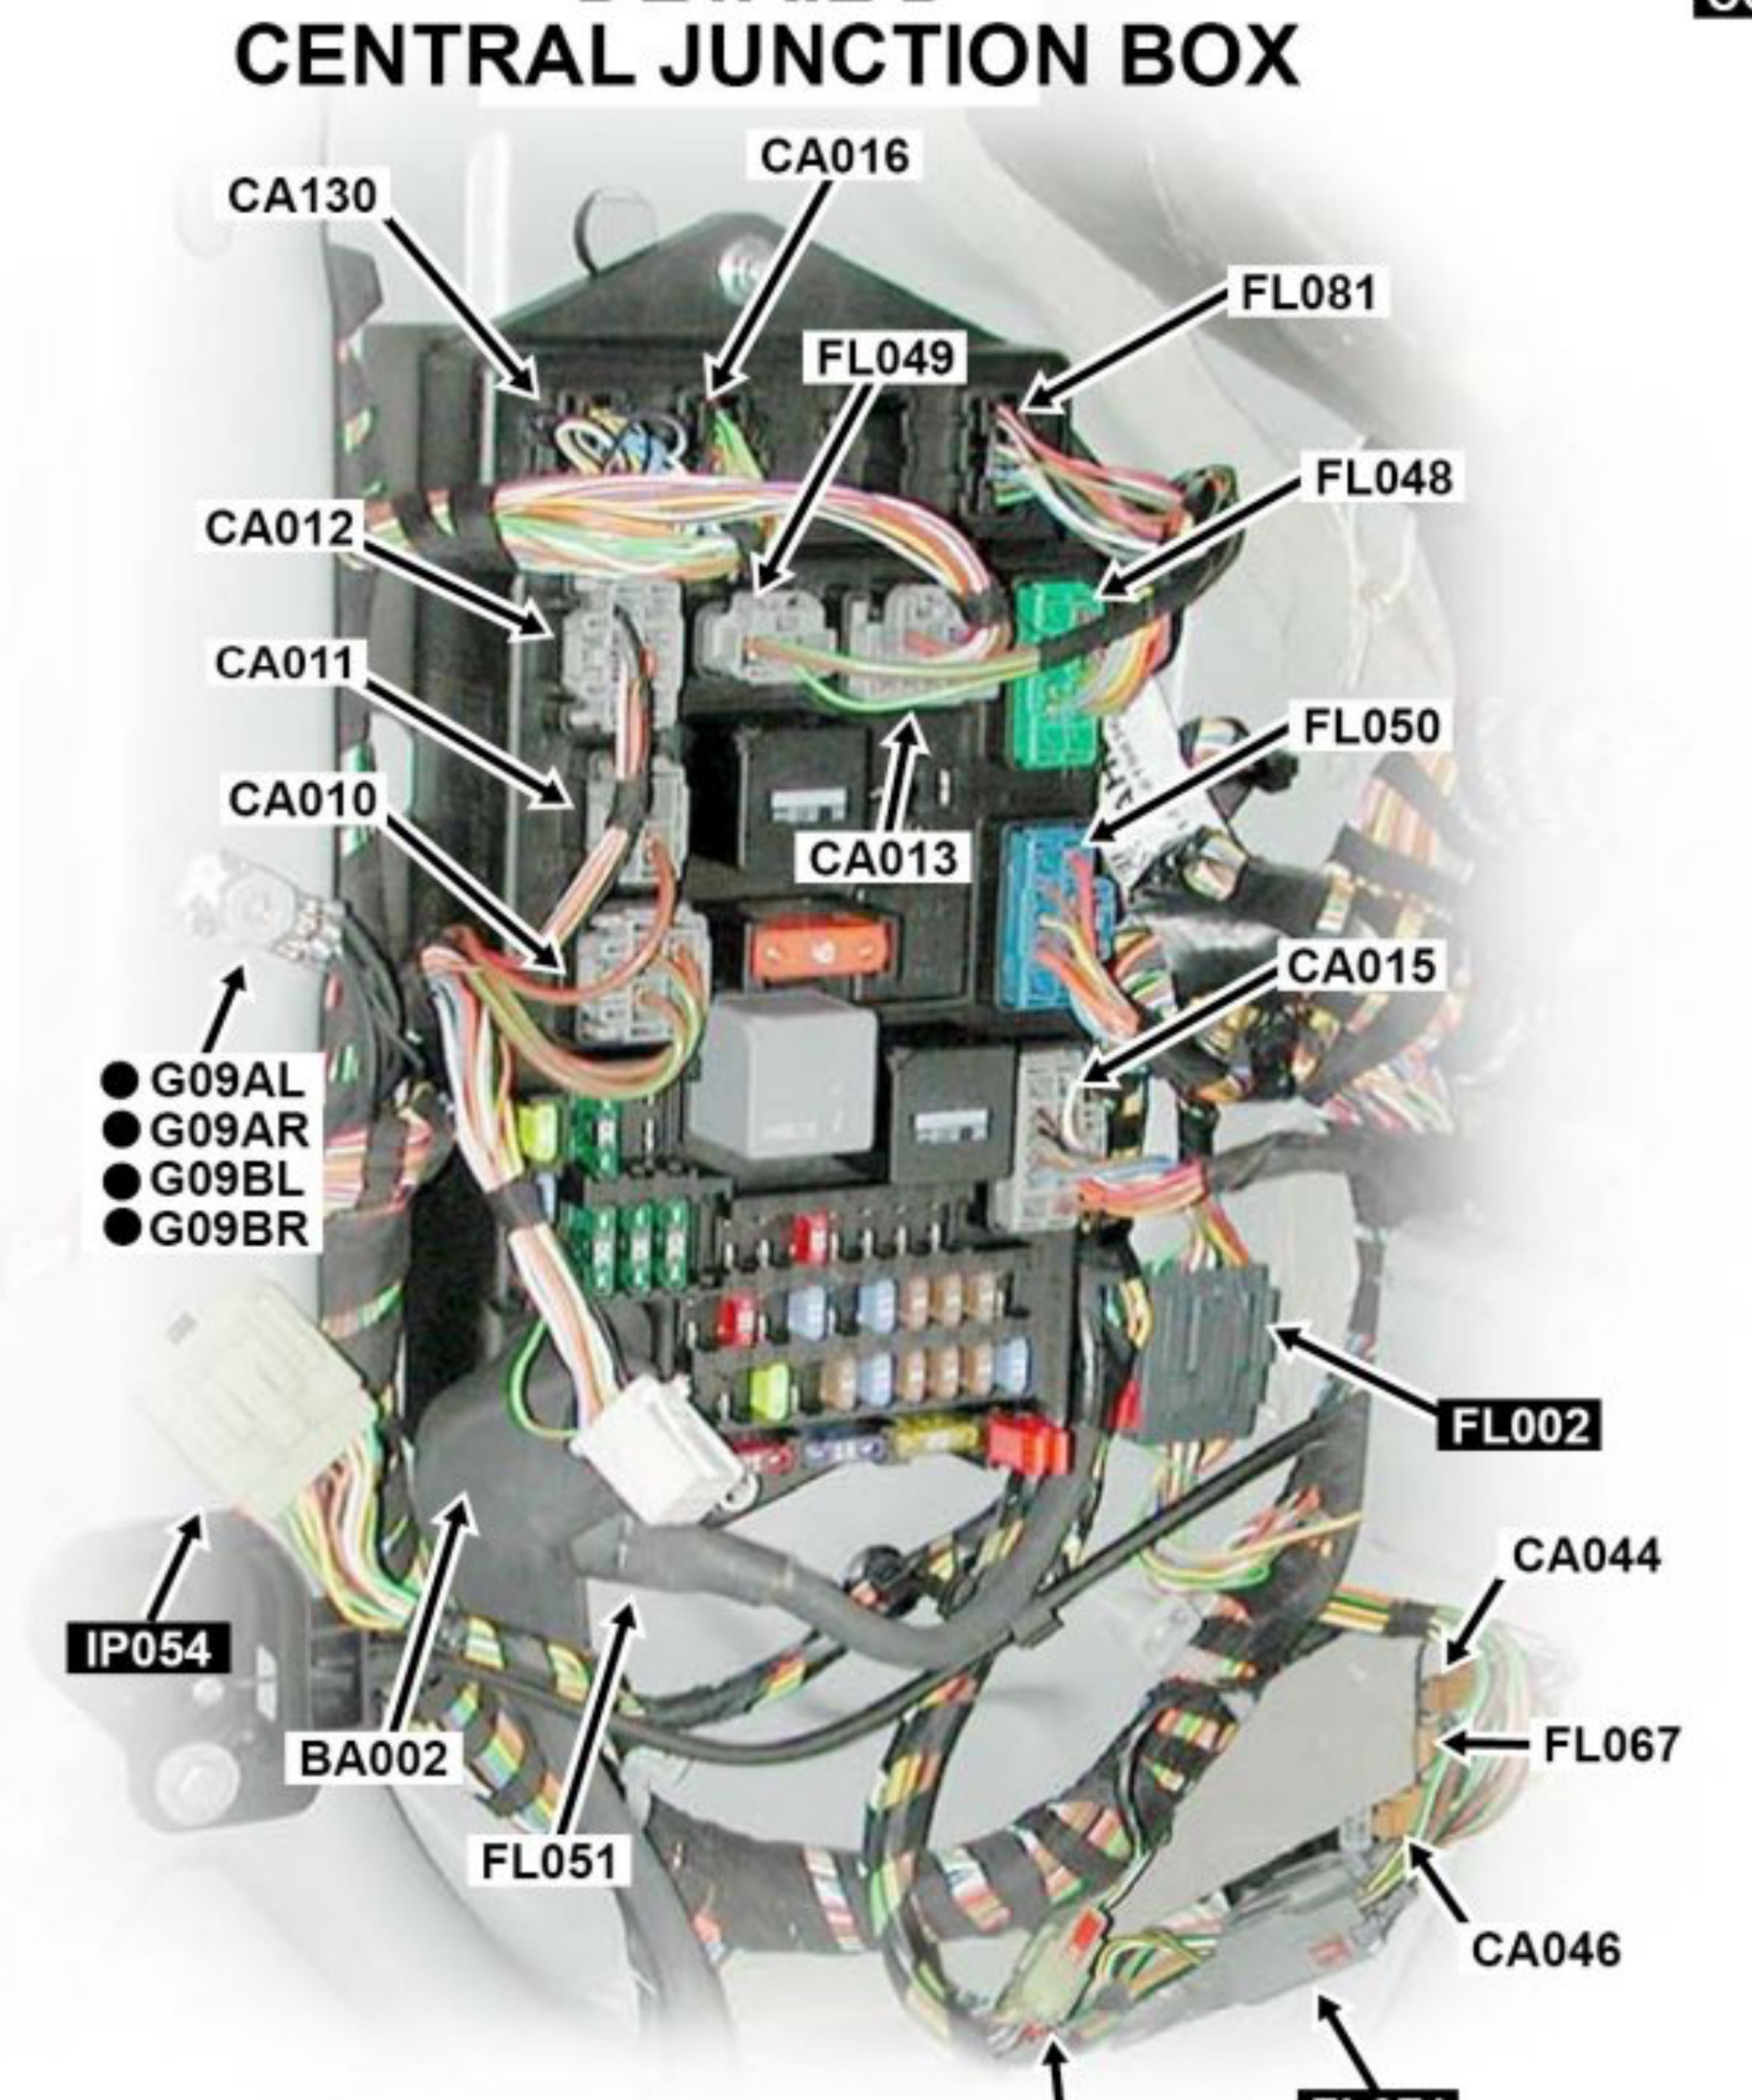

DETAIL A
RH 'A' POST

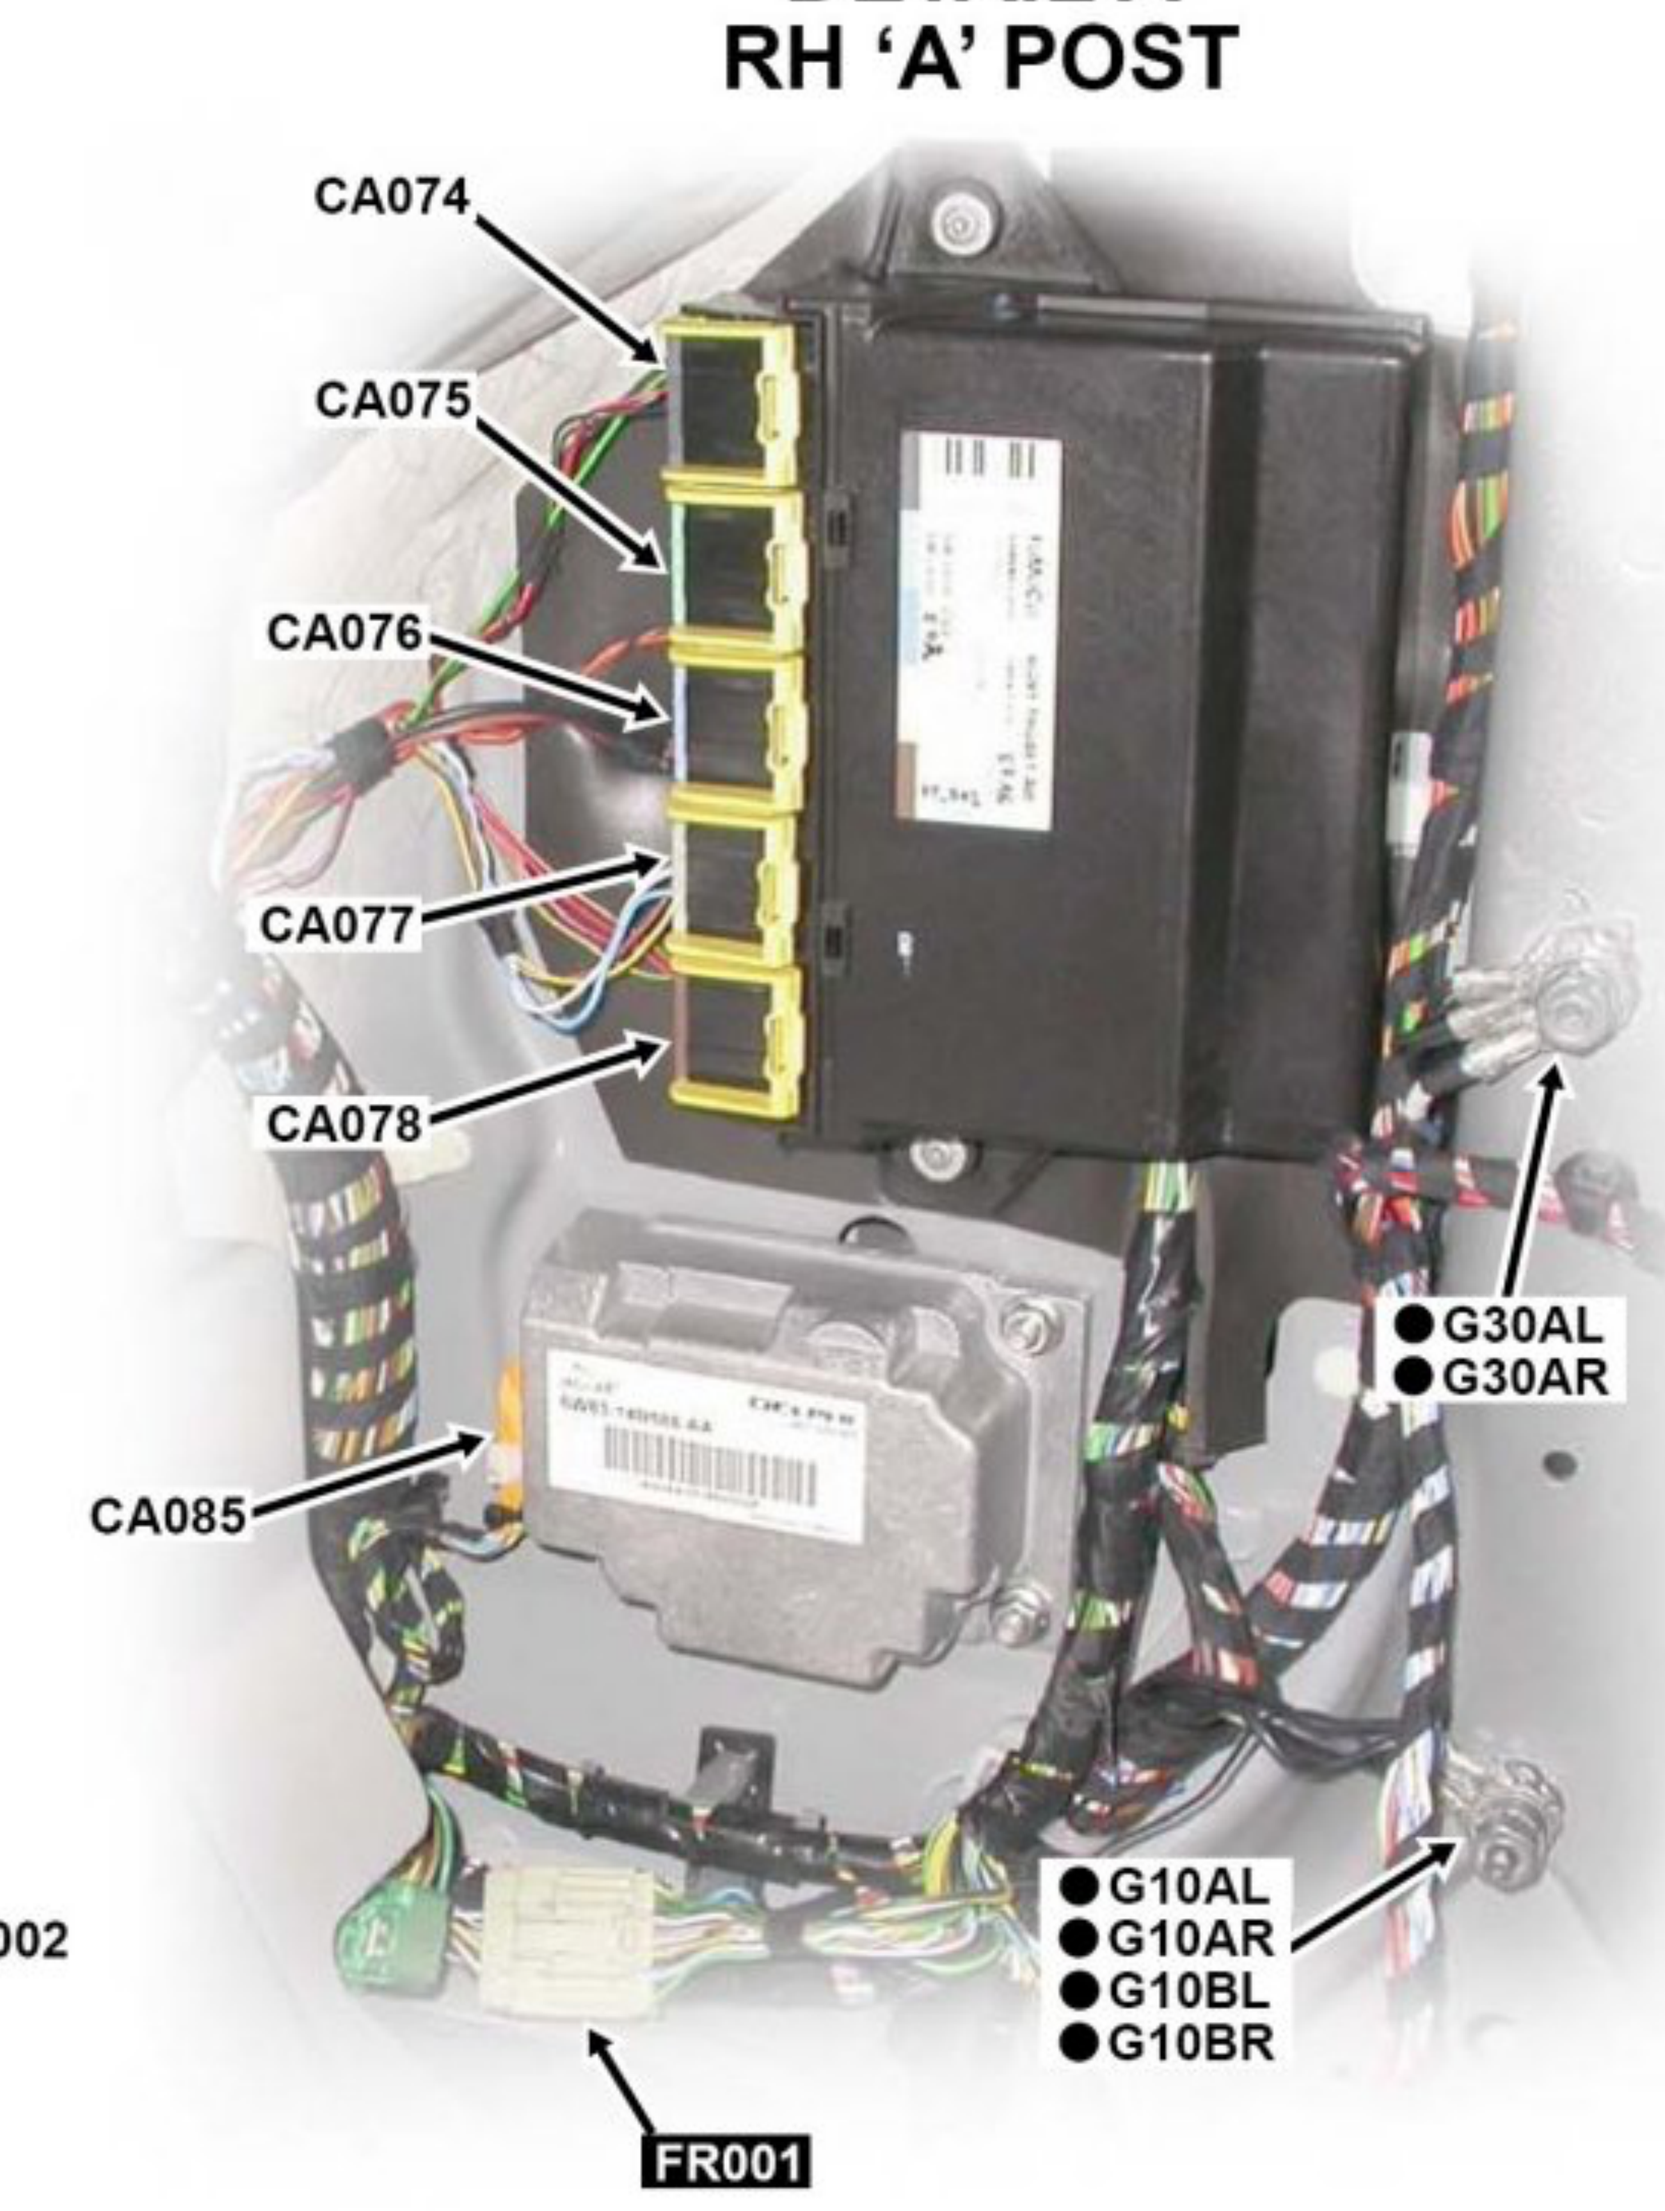

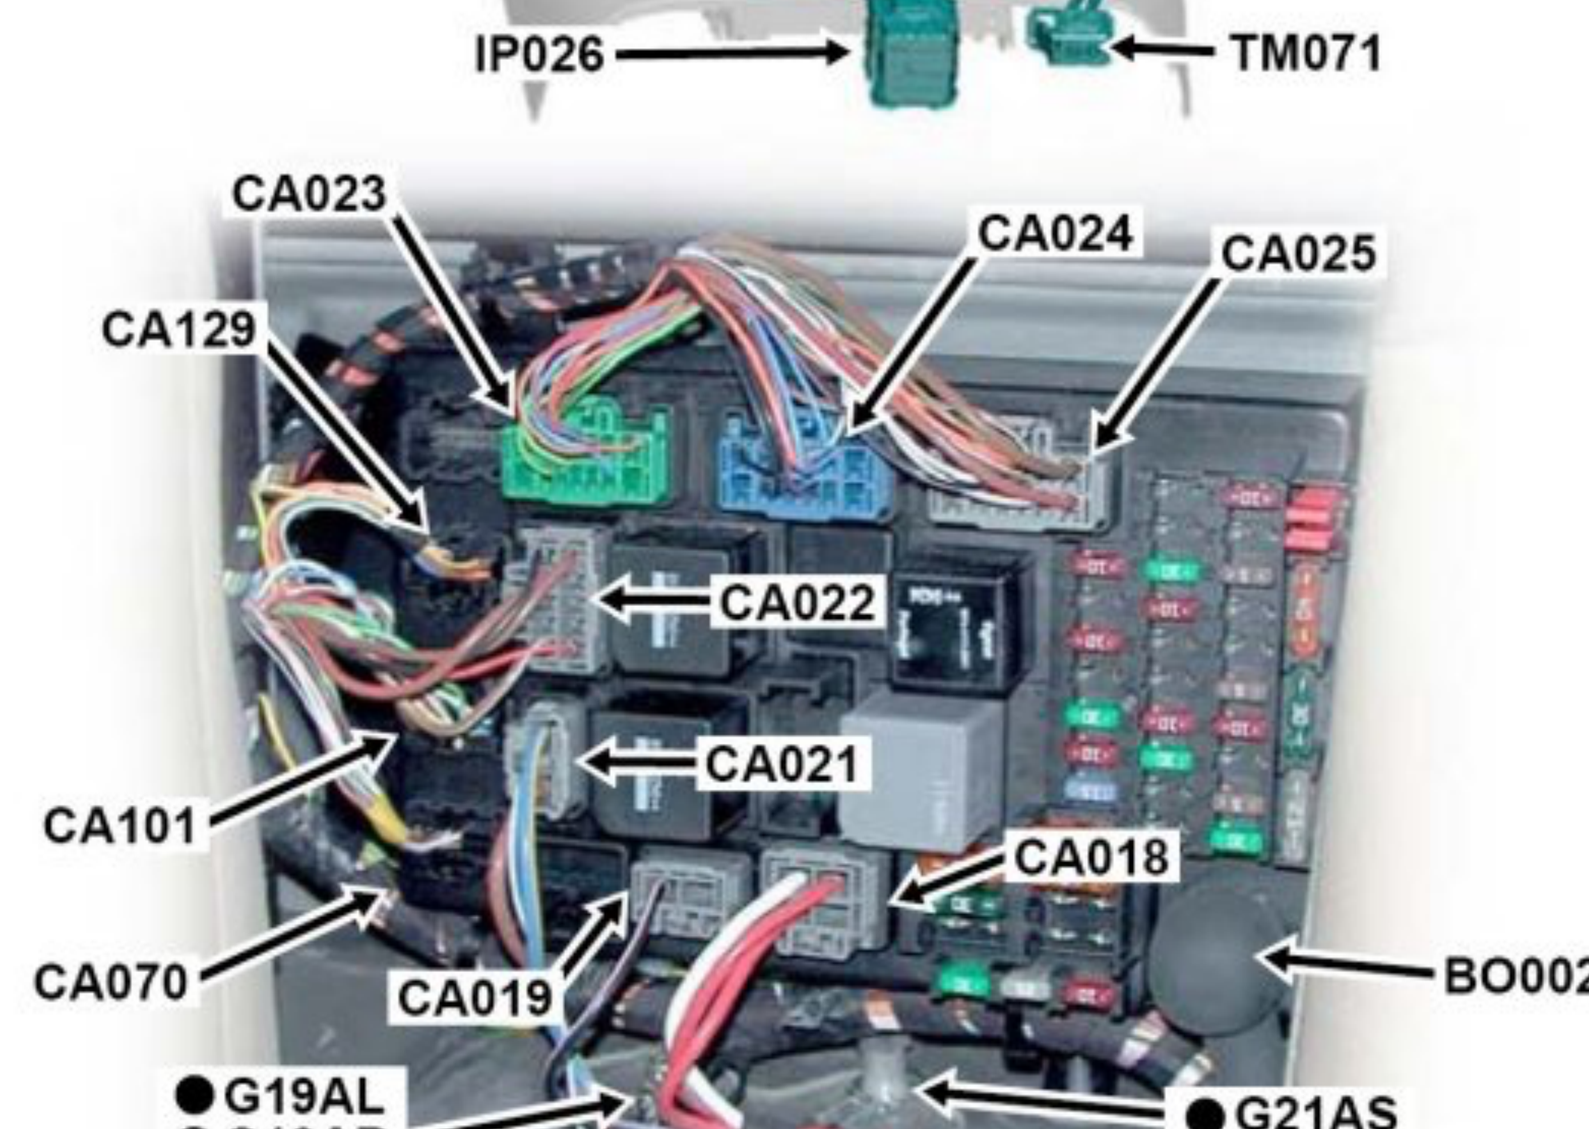

DETAIL E
AUXILIARY (REAR) JUNCTION BOX

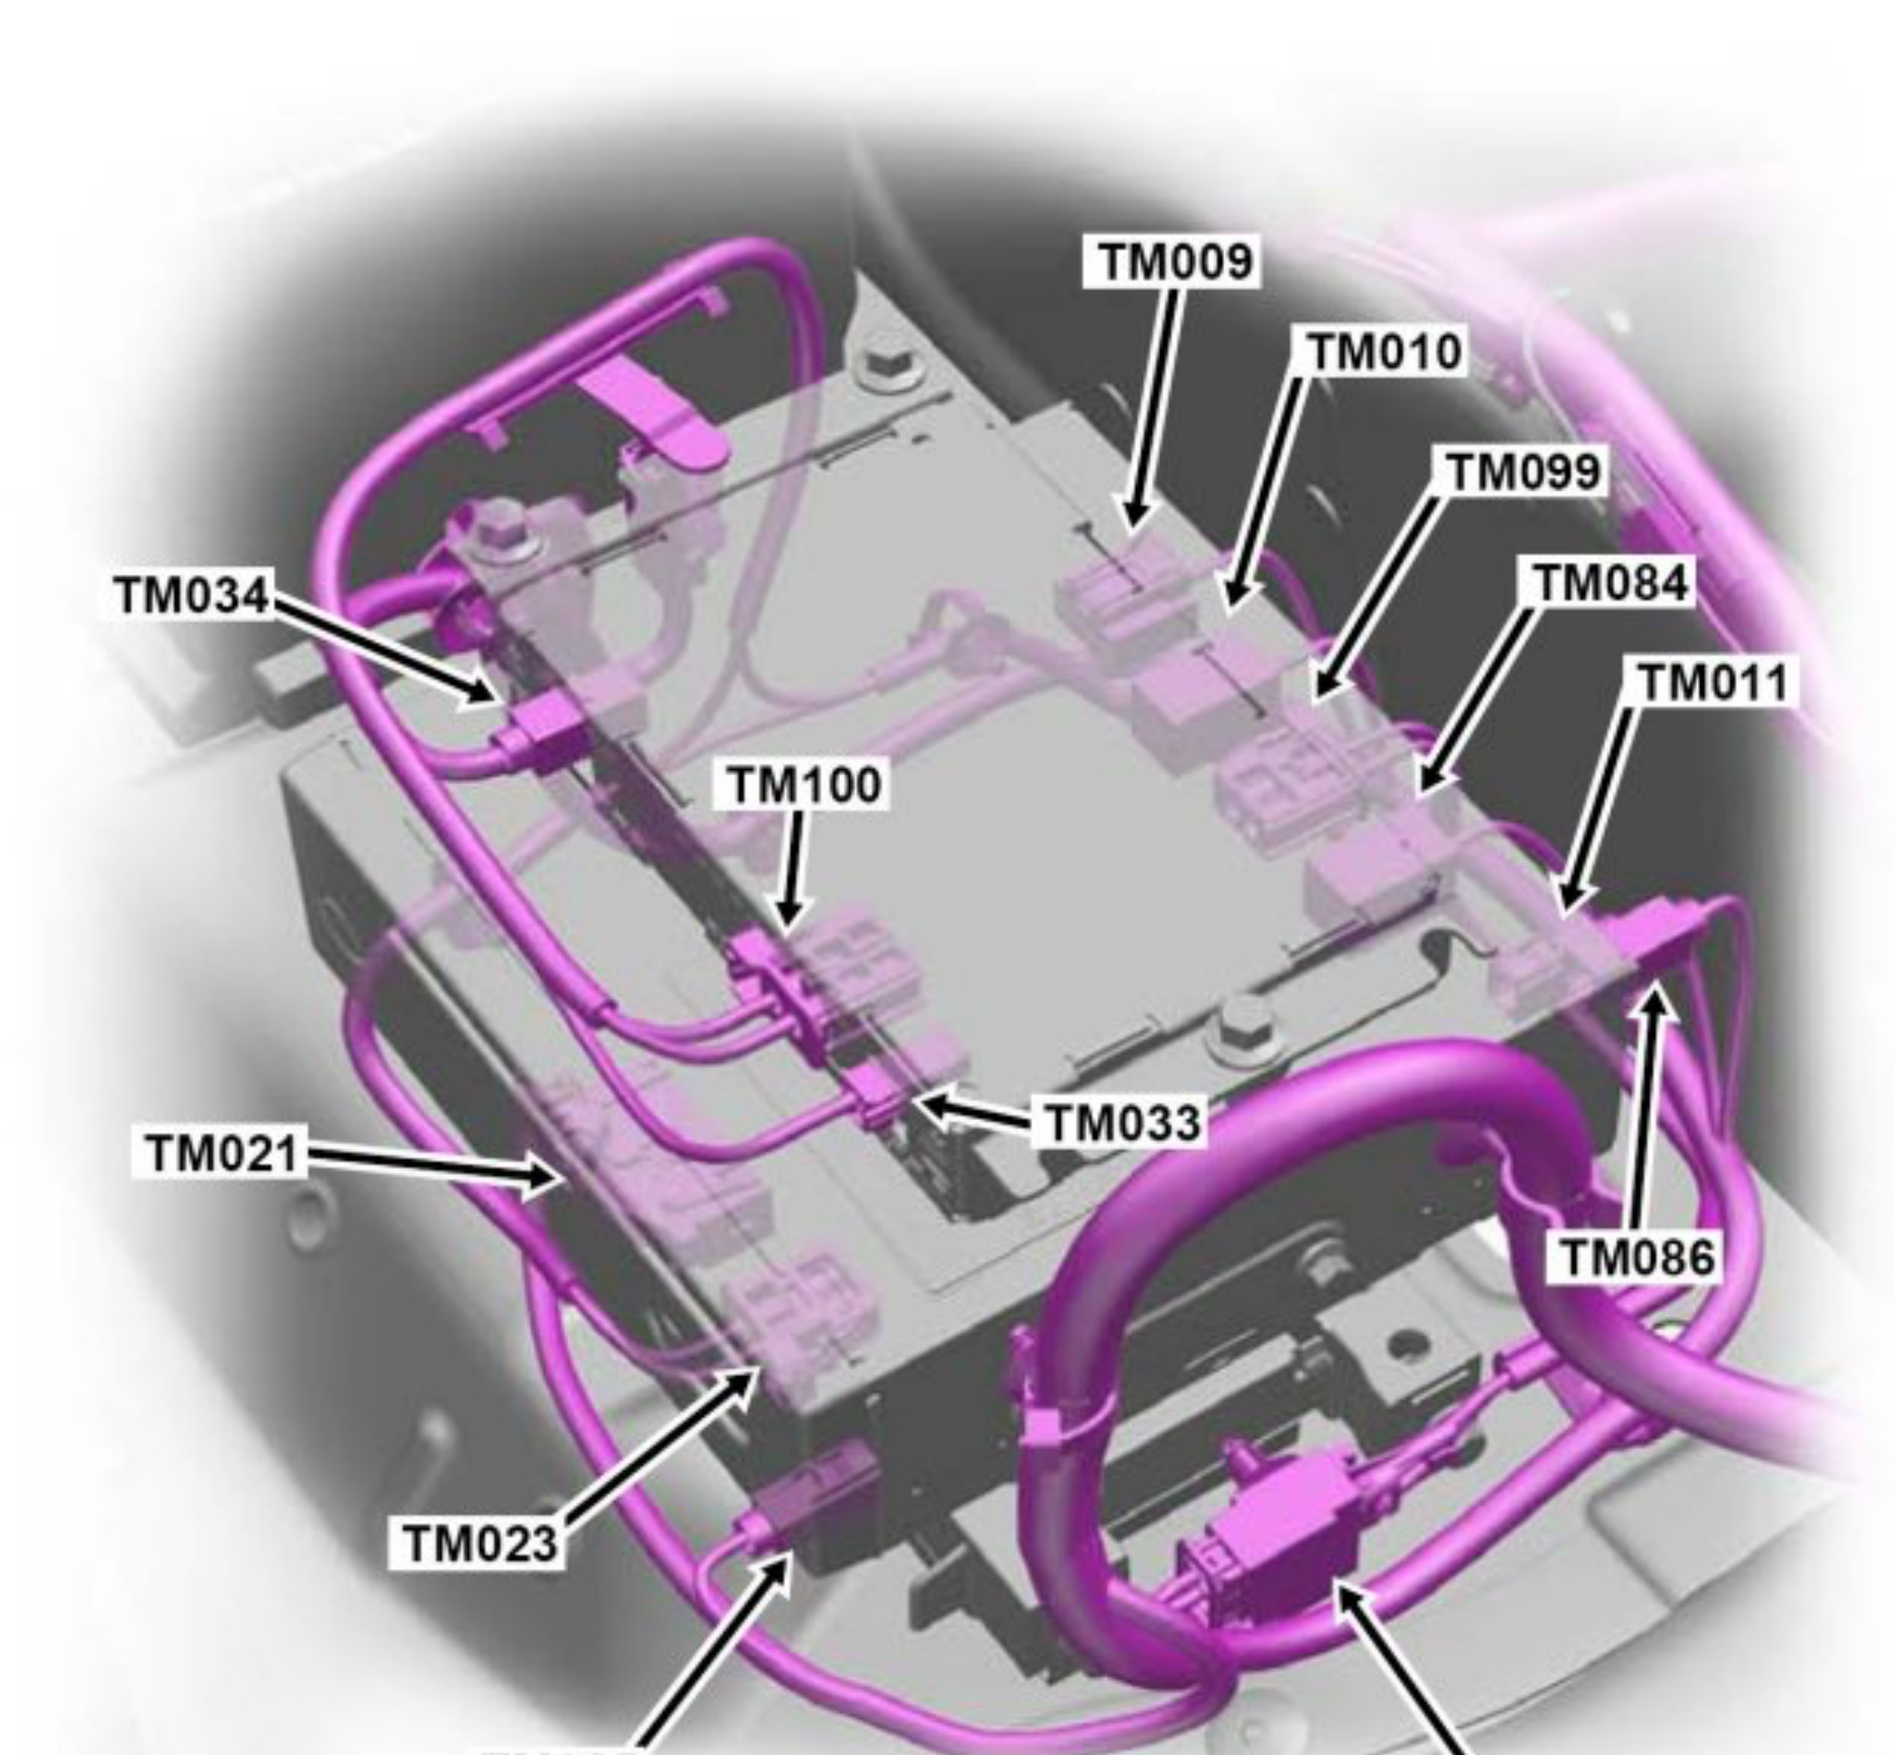

DETAIL F
BEHIND REAR SEAT