



JAGUAR

Parts Catalogue

XJ6 Series 2

Daimler Sovereign Series 2

RTC9883CA

January 1987


Whilst every effort is made to ensure the accuracy of the particulars contained in this Manual the Manufacturing Companies will not, in any circumstances, be held liable for any inaccuracies or the consequences thereof.

© Jaguar Cars Ltd 1987

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted in any form, electronic mechanical, photocopying, recording or other means without prior written permission of Jaguar Cars Limited.

Published by
Jaguar Cars Limited


VEHICLE AND UNIT SERIAL COMMENCING NUMBERS
VOGNS OG AGGREGATS SERIENUMMER BEGYNDENDE MED NUMMER
AANVANGS-SERIENUMMERS VAN CHASSIS EN ONDERDELEN
AUTON JA LAITTEEN ENSIMMAISET SARJANUMEROT
SERIE VEHICULE ET ORGANE NUMEROS DE DEBUT
SERIENANFANGSNUMMERN DER FAHRZEUGE UND EINHEITEN
NUMERI D'INIZIO SERIE VETTURE E GRUPPI
NUMEROS PRINCIPIANTES DE VEICULOS E DE UNIDADES
NUMEROS INICIALES DE SERIE DE VEHICULO Y DE UNIDAD
BORJAN AV VAGNENS OCH ENHETENS SERIENUMMER

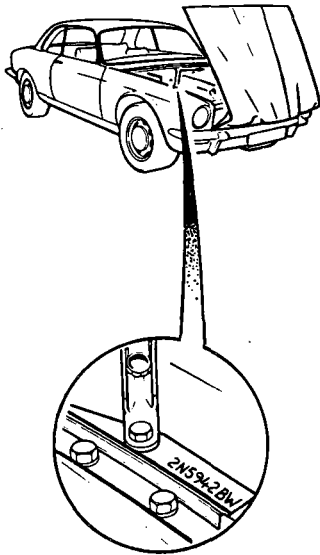

SERIES TWO JAGUAR MODELS	BODY TYPE	RH Stg 	LH Stg
XJ6 2.8 litre	4 Door SWB	-	2U.50001
XJ6 3.4 litre	4 Door LWB	3A.1001	3A.50001
XJ6 4.2 litre	4 Door SWB	2N.1001	2N.50001
XJ6L 4.2 litre	4 Door LWB	2T.1001	2T.50001
XJ6C 4.2 litre	2 Door	2J.1001	2J.50001

SERIES TWO
DAIMLER MODELS

Sovereign 3.4 litre	4 Door LWB	3B.1001	3B.50001
Sovereign 4.2 litre	4 Door SWB	2M.1001	2M.50001
Sovereign LWB 4.2 litre	4 Door LWB	2S.1001	2S.50001
Sovereign Two-Door 4.2 litre	2 Door	2H.1001	2H.50001
Vanden Plas 4.2 litre	4 Door LWB	3C.1001	3C.50001

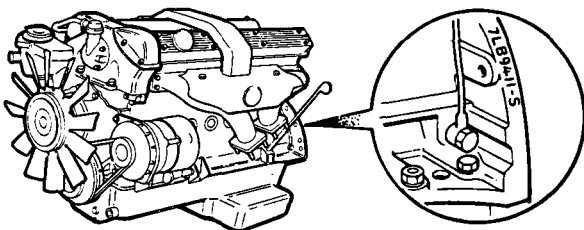

2.8 litre 7G.25000 (approx) onwards
 3.4 litre 8A.1001 onwards
 4.2 litre | 7L.74000 (approx) to 7L.99999
 | 8L.1001 onwards

ORDERING TRIMMED PARTS

When ordering a trimmed part the part number that appears in the catalogue/transparency must have a three letter suffix code added to denote the trim colour.

COLOUR CODES

ADA Terra cotta	JDA French blue
ADB Antelope	JDB Dark blue
ADC Tan	JDC Navy blue
ADD Cinnamon	JDD Light blue
ADE Biscuit	JDE Navy (New cloth)
ADF Chamois	
ADG Tuscan	LDA Blue/grey
ADH Fawn	LDB Grey
ADJ Sand (New cloth)	
ADK Old beige	MDA Silver
ADL Dark tan	
ADM New beige	NDA White
ADN Sand 2(New cloth) ①	
	PDA Black
CDA Maroon	PDB Ebony (New cloth)
CDB Russet	
CDC Garnet (New cloth)	
CDD Red	
DDA Cerise	
HDA Moss green	
HDB Olive green	
HDC Deep olive	
HDD Sage	
HDE Jade (New cloth)	
HDF Old green	

Example: BD.47159 HDE Headrestraint in Jade.

To determine the colour code of a particular part refer to the trim colour combination chart(s).

① Introduction of new shade of Sand cloth trim -
ADN - Sand 2 from :-

RH Stg.	LH Stg.
3A.2800	3A.50674
2T.15386	2T.59597
2J.1980	2J.52274
3B.1836	3B.50001
2S.6159	2S.50239
2H.1509	2H.50032

TRIM COLOUR COMBINATION CHART

LEATHER TRIM

DIRECTIONS FOR USE

1. Establish the basic trim colour of the car. These are the colours which appear in the Jaguar/Daimler sales and advertising literature.
2. Select the basic trim colour in the left hand column of the chart.
3. Select the item required from the descriptions across the top of the chart.
4. By reading across and down the colour code for the part can be obtained.

BASIC TRIM COLOUR	Seats (narrow and wide pleated) Rear panel for front seat in PVC (wide pleated seats) Rear panel for front seat in Nylon (Narrow pleated seats) Door trim rolls - Jaguar models Door trim rolls - Daimler models Door casings, pockets, armrests, lower B/C post casing, console Lower A post casing Headlining, cantrail, upper B/C post Underscuttle casings, boot trim Flange finishers (draught excluder) Carpets											
	ADD	ADD	ADC	ADD	PDA	ADD	ADD	ADH	PDA	ADC	ADC	
CINNAMON	ADD	ADD	ADC	ADD	PDA	ADD	ADD	ADH	PDA	ADC	ADC	
BISCUIT	ADE	ADE	ADE	ADE	PDA	ADE	ADE	ADH	PDA	ADC	ADC	
RUSSET	CDB	CDB	CDB	CDB	PDA	CDB	CDB	MDA	PDA	LDB	CDB	
MOSS GREEN	HDA	HDA	HDA	HDA	PDA	HDA	HDD	MDA	PDA	HDD	HDD	
OLIVE GREEN	HDB	HDB	HDB	HDB	PDA	HDB	HDD	MDA	PDA	HDD	HDD	
DARK BLUE	JDB	JDB	JDB	JDB	PDA	JDB	JDB	MDA	PDA	JDB	JDB	
BLACK	PDA	PDA	PDA	PDA	PDA	PDA	PDA	MDA	PDA	PDA	PDA	

TRIM COLOUR COMBINATION CHART

CLOTH TRIM

DIRECTIONS FOR USE

1. Establish the basic trim colour of the car. These are the colours which appear in the Jaguar/Daimler sales and advertising literature.
2. Select the basic trim colour in the left hand column of the chart.
3. Select the item required from the descriptions across the top of the chart.
4. By reading across and down the colour code for the part can be obtained.

BASIC TRIM COLOUR	Seats (complete) Door trim rolls (Jaguar models) Door trim rolls (Daimler models) Door and quarter casings in PVC Door and quarter casings in cloth Pockets, armrests, lower B/C post casing and console Lower A post casing Headlining, cantrail, upper B/C post Underscuttle casings, boot trim Flange finishers (draught excluder) Carpets										
	ADJ	ADE	PDA	ADE	ADJ	ADE	ADE	ADH	PDA	ADC	ADC
SAND	ADJ	ADE	PDA	ADE	ADJ	ADE	ADE	ADH	PDA	ADC	ADC
GARNET	CDC	CDB	PDA	CDB	CDC	CDB	CDB	MDA	PDA	LDB	CDB
JADE up to Sept 1975	HDE	HDB	PDA	HDB	HDE	HDB	HDD	MDA	PDA	HDD	HDD
JADE from Oct 1975	HDE	HDA	PDA	HDA	HDE	HDA	HDD	MDA	PDA	HDD	HDD
NAVY	JDE	JDB	PDA	JDB	JDE	JDB	JDB	MDA	PDA	JDB	JDB
EBONY	PDB	PDA	PDA	PDA	PDB	PDA	PDA	MDA	PDA	PDA	PDA

TRIM COLOUR COMBINATION CHART

VANDEN PLAS TRIM

DIRECTIONS FOR USE

1. Establish the basic trim colour of the car. These are the colours which appear in the Jaguar/Daimler sales and advertising literature.
2. Select the basic trim colour in the left hand column of the chart.
3. Select the item required from the descriptions across the top of the chart.
4. By reading across and down the colour code for the part can be obtained.

	Seats (complete) Door trim rolls Door casings, pockets, armrests, lower B/C post casing, console Headlining, cantrail, upper B/C post casing Underscuttle casings, boot trim Flange finishers (draught excluder) Lower A post carpet, LH console carpet, Front and rear floor carpets RH console carpet, tunnel carpet, sill carpets, crossmember carpets Nylon rugs									
BASIC TRIM COLOUR	ADF	PDA	ADF	ADH	PDA	PDA	ADF	ADF	ADF	ADF
CHAMOIS	ADF	PDA	ADF	ADH	PDA	PDA	ADF	ADF	ADF	ADF
TUSCAN	ADG	PDA	ADG	ADH	PDA	PDA	ADG	ADF	ADF	ADF
DEEP OLIVE	HDC	PDA	HDC	ADH	PDA	PDA	HDC	ADF	ADF	ADF