

## 2001 S-TYPE - Evaporative Emissions - 303-13

**Evaporative Emission Canister Purge Valve 17.15.30** 



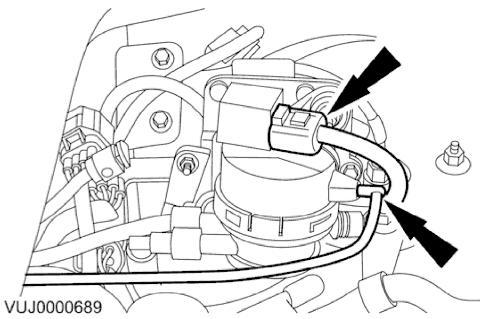


1. Disconnect the canister purge valve electrical connector and vacuum hose.

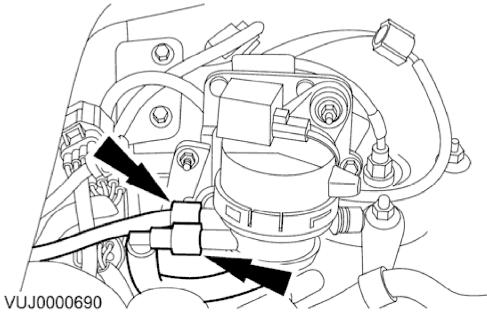

2. Disconnect the canister purge valve vacuum hoses.

## 2001 S-TYPE - Evaporative Emissions - 303-13

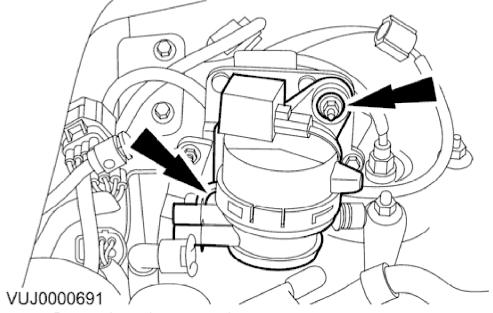

3. Remove the canister purge valve.

## Installation

1. To install, reverse the removal procedure.