

Floor Console 76.25.01

Removal

All vehicles

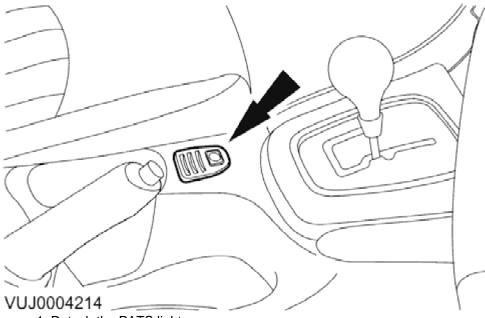


1. Detach the PATS light.

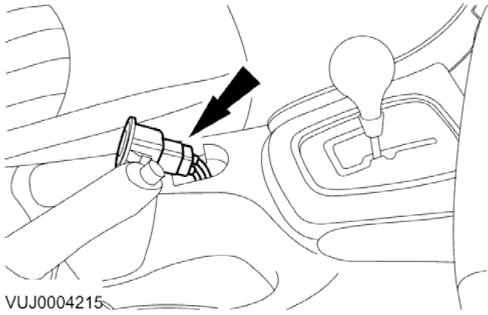


1

- Remove the PATS light.
 Disconnect the electrical connector.
 Remove the PATS light.


2011-04-12

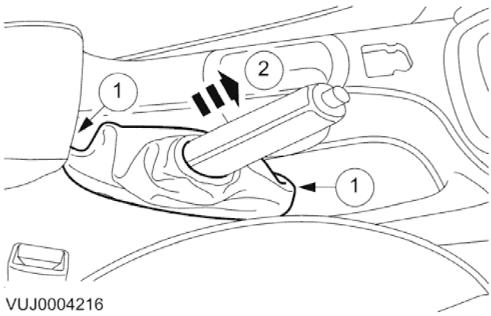


- 3. Remove the hand brake lever surround.
 - 1. Detach the hand brake lever surround.
 - 2. Remove the hand brake lever surround.

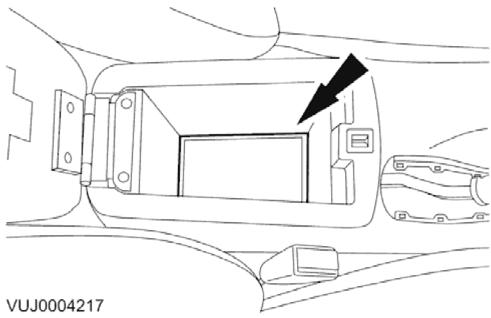


4. Remove the console stowage compartment non slip mat.

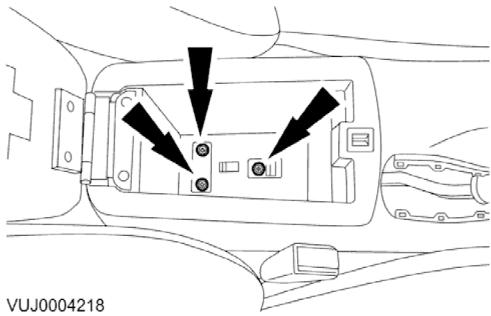


5. Remove the retaining screws.

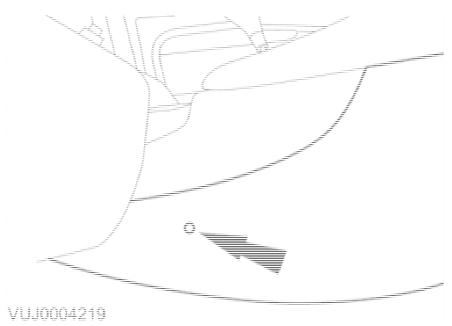

6. Remove the center console trim panel.

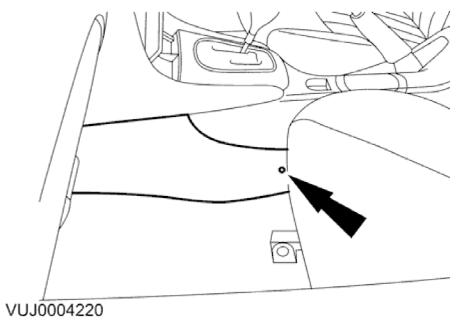

7. Remove the center console trim panel.

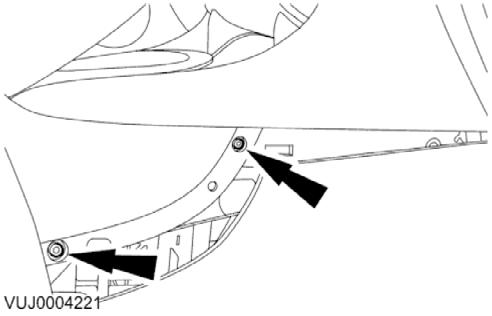


8. **NOTE:**

Right hand shown, left hand similar.


Remove the retaining screws.

Vehicles with automatic transmission

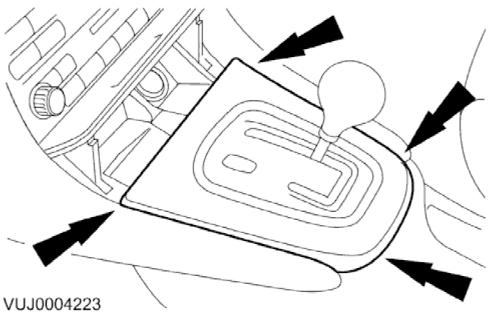


9. Remove the J-gate surround.

Vehicles with manual transmission

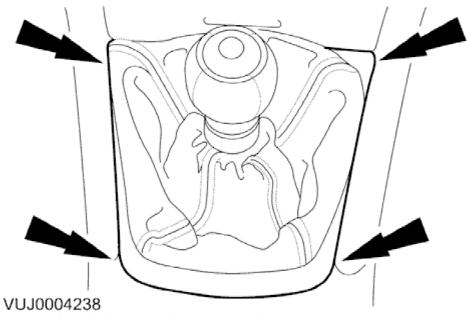


10. Detach the gear selector surround.

All vehicles

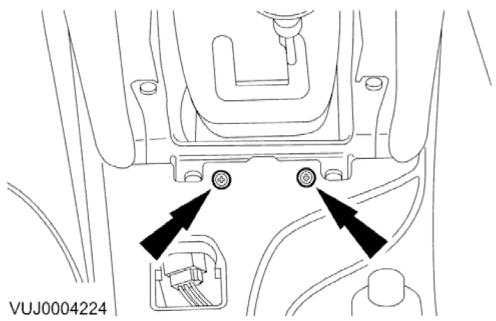

11. Remove the retaining screws.

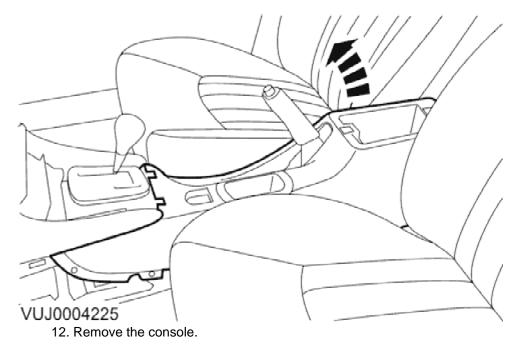

Installation

1. To install, reverse the removal procedure.