





Loosen the roof opening panel glass retaining screws.

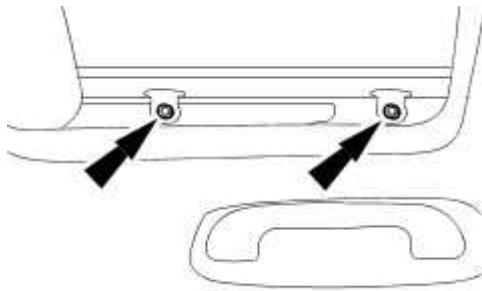


E30350

4. Adjust the front edge of the roof opening panel glass to between flush and 1 mm (0.04 in) low.

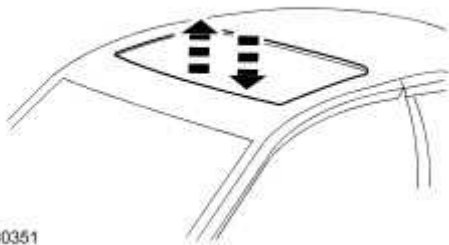

E30351

5. Adjust the rear glass edge to between flush and 1 mm (0.04 in) low.

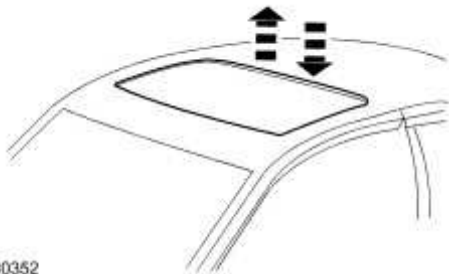


E30352

6. **NOTE:**

Left-hand shown, right-hand similar.

Tighten to 4 Nm.

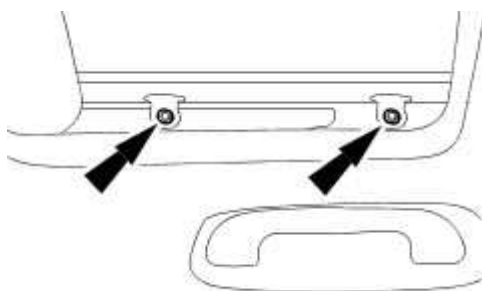


E30350

7. **NOTE:**

Right-hand shown, left-hand similar.

Reposition the air deflector to the roof opening panel runner.

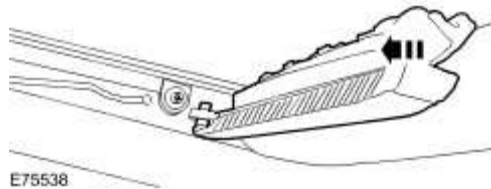


8. **NOTE:**

Right-hand shown, left-hand similar.

Install the air deflector.

- Make sure the air deflector is fully seated to the rear retaining clip.
- Attach the air deflector upper retainer.

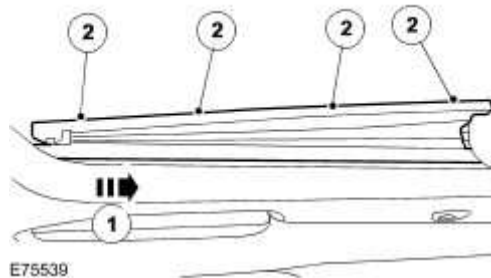

9. **NOTE:**

Left-hand shown, right-hand similar.

Install the sight shields.

