

Your Vehicle: 2001 Jaguar XJ-8 Sedan (X308) V8-4.0L (AJ27)



**DESIGNED TO INCREASE
HORSEPOWER AND ACCELERATION**

Helps Your Car Run Better!



THE WORLD'S BEST AIR FILTER

[Vehicle](#) » [Body and Frame](#) » [Splash Guard](#) » [Service and Repair](#)


[Notes](#)

Service and Repair


Radiator Splash Shield (76.22.90)

Removal


1. Raise front of vehicle and support on stands.
2. Remove and discard seven scrivets securing undertray to [bumper](#) cover.

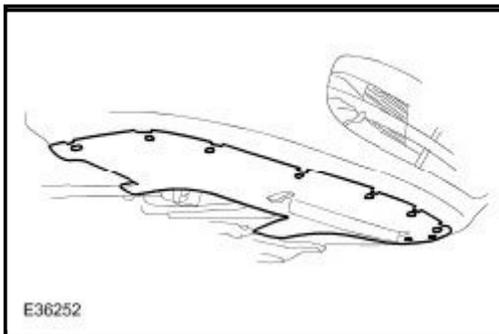

3. Remove and discard tiestrap securing undertray to crossbeam front brace.

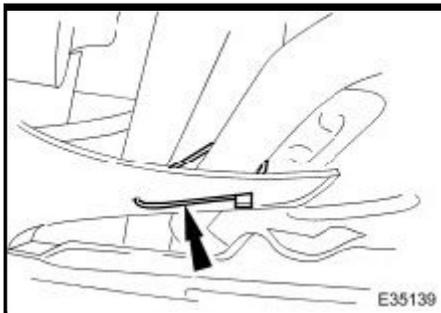

4. At each side of vehicle, remove and discard scrivet securing undertray to wheelarch liner.

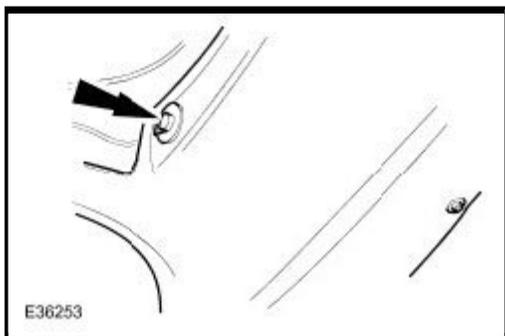

5. Remove undertray and wind deflectors from vehicle.
6. Remove and discard plastic scrivets securing wind deflectors to undertray.

Installation

1. Position wind deflector on undertray and secure with new scrivets.
2. Position liners in wheel arches.
3. Position undertray assembly under vehicle and using new plastic fixings, secure assembly to wheelarch liners.
4. Position undertray/wind deflector assembly on vehicle and secure to front [bumper](#) using new plastic scrivets.
5. Fit road wheels.
6. Lower vehicle from stands.

[Account](#) | [Vehicle](#) | [Help](#) | [Contact](#) | [Exit](#)

© 2011 ALLDATA, LLC. All Rights Reserved. [Trademarks](#) | [Privacy Policy](#) | [Terms and Conditions](#)