


Instrument Cluster Finish Panel 76.47.24

Removal

1. Turn ignition key to position II.
2. Move steering column to lowest and fully extended position.
3. Turn ignition key to position 'O'.
4. Remove battery cover and disconnect ground cable from battery terminal. Refer to <<86.15.15>>.

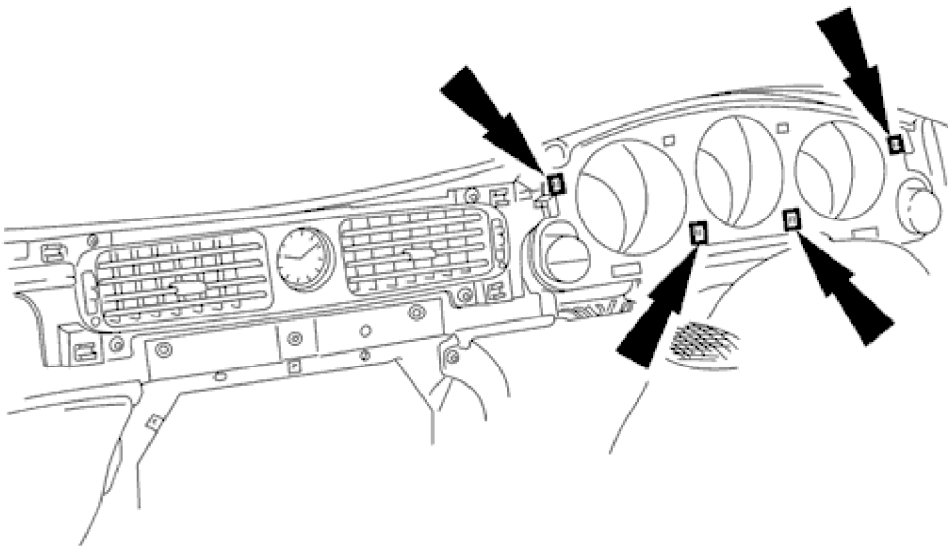

E36343

5. Release veneer panel from retaining clips.
6. Remove veneer panel from vehicle.
7. Remove and discard all retaining clips.

Installation

1. Fit new retaining clips to instrument surround.
2. Fit and fully seat veneer panel to instrument surround.
3. Connect ground cable to battery terminal and fit battery cover. Refer to <<86.15.15>>.

1998 XJ RANGE - Instrument Panel and Console - 501-12

4. Turn ignition key to position II.
5. Return steering column to original position.
6. Turn ignition key to position 'O'.