


4. Remove brake pads.

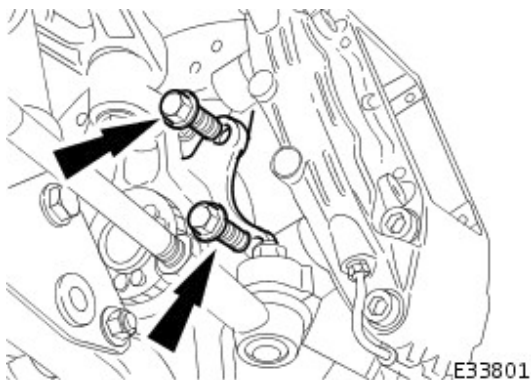

11. **⚠ CAUTION:** Only remove the bolts securing the caliper anchor bracket to the vertical link. Refer to caution above for more information.

Remove caliper from vertical link.



- Remove bolts.

12. Remove brake dust and clean mating surfaces. See Warning above.

Installation

1. Install caliper to vertical link.

- Install and tighten bolts to 180 Nm.

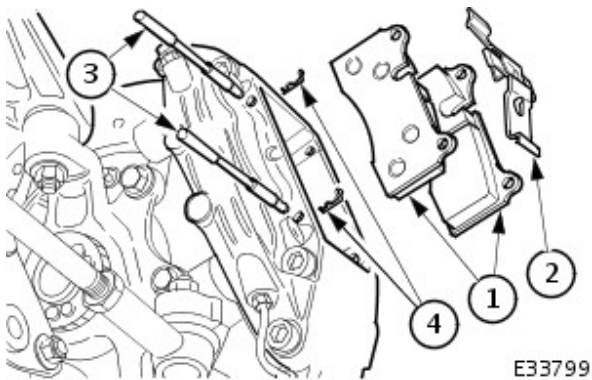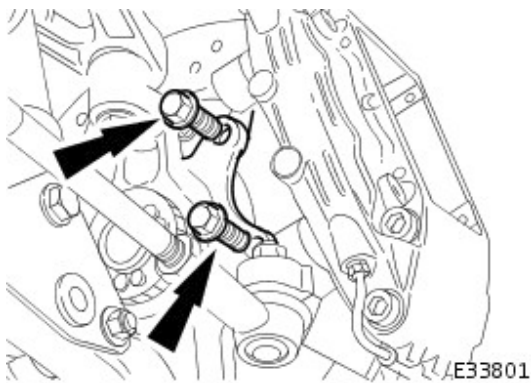

2. CAUTIONS:

⚠ Retracting the caliper piston may cause the fluid reservoir to over-flow. Remove brake fluid spillage immediately from paint work, with clean water.

⚠ Note the condition of pins and 'R' clips and replace if necessary.

Install brake pads into caliper.

- Slowly retract caliper pistons.

1. Install pads.