



 ${\bf 11.}$ Remove tape from access hole in PVC secondary water shedder and slacken glass regulator stop adjuster bolt.



12. Motor door glass further up until the horizontal datum line aligns with the upper seal.

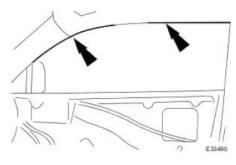

13. Move glass regulator stop to abut quadrant and tighten adjuster bolt.

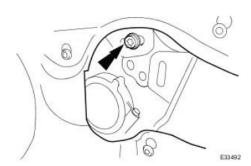

- 14. Motor door glass to fully up position, measure any lift adjustment required and re-mark glass in that position.
- 15. Motor door glass to partially lowered position.
- Slacken glass regulator stop adjuster bolt, move stop required amount and tighten bolt.