


Headliner 76.64.01


Removal

1. Remove front seats. Refer to 76.70.01.90.
2. Remove rear seat cushion and squab. Refer to 76.70.37 and 76.70.38.
3. Remove battery cover and disconnect earth cable from battery terminal. Refer to <<86.15.19>>
4. Remove rear quarter casings. Refer to <<76.13.73>>.
5. Remove combined grab handles and coat hanger hooks.
6. Remove 'J' gate surround. Refer to <<76.25.24>>.
7. Remove center console. Refer to <<76.25.01>>.
8. Remove 'A' post upper trim panels. Refer to <<76.13.31>>.
9. Remove sun visors. Refer to 76.10.47.
10. Remove sun visor retention bezels. Refer to <<76.10.58>>
11. Remove roof console. Refer to <<76.13.69>>.

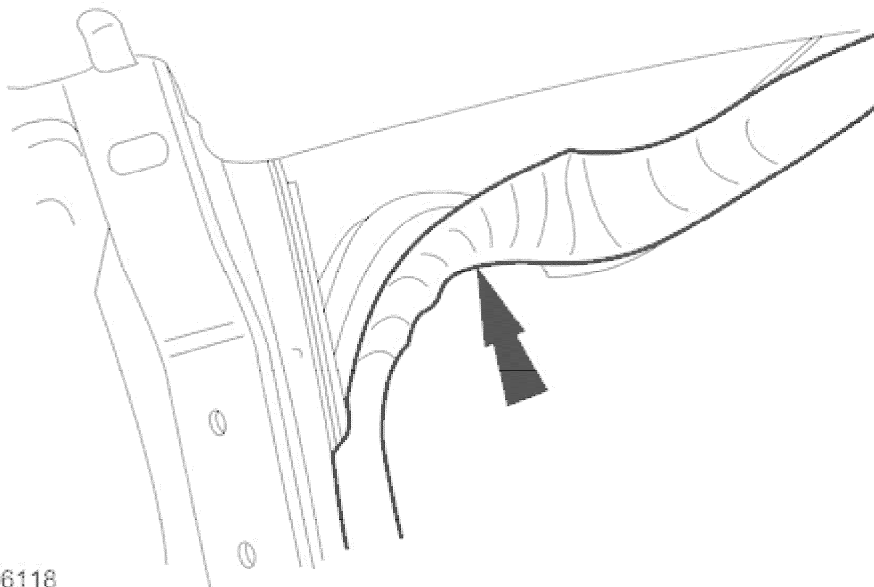


E36118

12. Withdraw each door aperture seal from flange upper section.

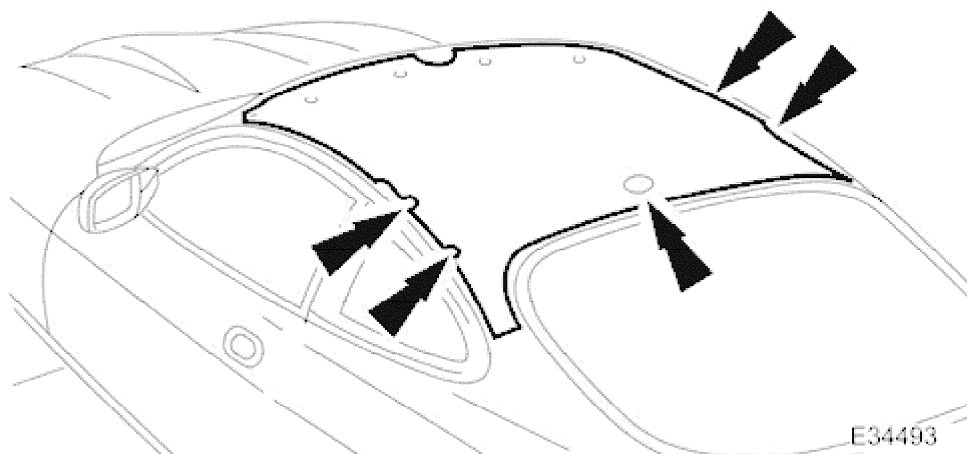

13. Position headlining for access.

- Easing the body tabs back to release the headlining, progressively move the headlining downwards to access interior light multiplug.
- Disconnect interior light multiplug and free headlining from remaining body tabs.

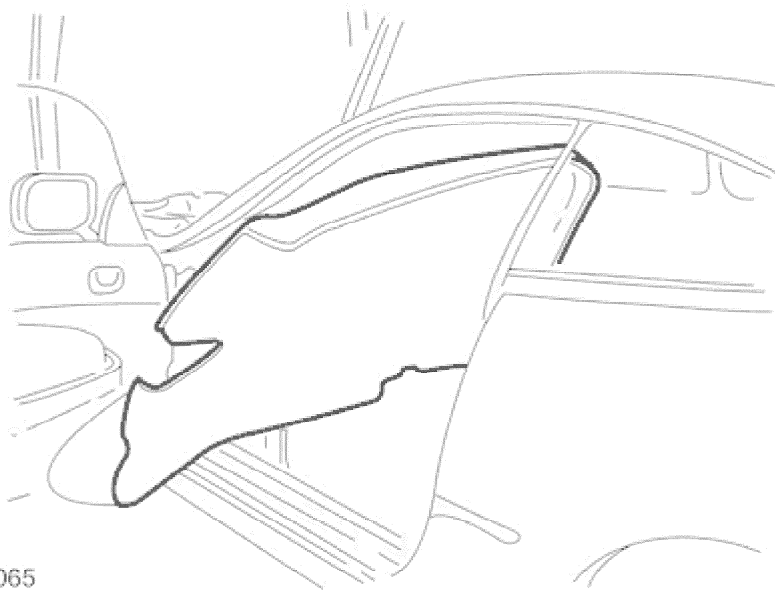

14. Avoiding damage to fascia, door aperture seals and door casings, lift and turn headlining through 90 degrees, tilt into passenger footwell and remove from vehicle.

15. Remove interior light from headlining.

Installation

1. Fit interior light to headlining.
2. Place headlining in vehicle tilted to position with one end in footwell and opposite end at top of door aperture.
3. Lift and rotate headlining through 90 degrees.

2001 XK RANGE - Interior Trim and Ornamentation - 501-05

4. Position headlining at roof and reposition door aperture seals to retain it.
5. Connect interior light multiplug.
6. Fully seat headlining ensuring correct positioning over backlight flange.
7. Bend body tabs into position to secure headlining.
8. Fit roof console. Refer to <<**76.13.69**>>.
9. Fit both sun visors. Refer to 76.10.47
10. Fit 'A' post upper trim panels. Refer to <<**76.13.31**>>.
11. Fit center console assembly. Refer to <<**76.25.01**>>.
12. Fit 'J' gate surround. Refer to <<**76.25.24**>>.
13. Fit combined grab handles and coat hanger hooks.
14. Fit rear quarter casings. Refer to <<**76.13.73**>>.
15. Fit rear seat squab and cushion. Refer to 76.70.37 and 76.70.38.
16. Connect earth cable to battery terminal and fit battery cover. Refer to <<**86.15.15**>>.
17. Fit front seats. Refer to 76.70.01.90.