

INFORMATION AND ENTERTAINMENT SYSTEM - VEHICLES WITH: INCONTROL TOUCH PRO

TOUCHSCREEN [G2159857]

REMOVAL AND INSTALLATION

87.01.14	TOUCH SCREEN (TS) - RENEW - VEHICLES WITH INCONTROL TOUCH PRO	ALL DERIVATIVES	0.80	USED WITHINS	+
87.02.14	TOUCH SCREEN (TS) - RENEW - VEHICLES WITH INCONTROL TOUCH	ALL DERIVATIVES	0.80	USED WITHINS	+


REMOVAL

CAUTION:

Take care not to damage the touch screen when removing the components.



1. Disconnect the startup battery ground cable.
Refer to: [Startup Battery Disconnect and Connect](#) (414-01 Battery, Mounting and Cables, General Procedures).

2.

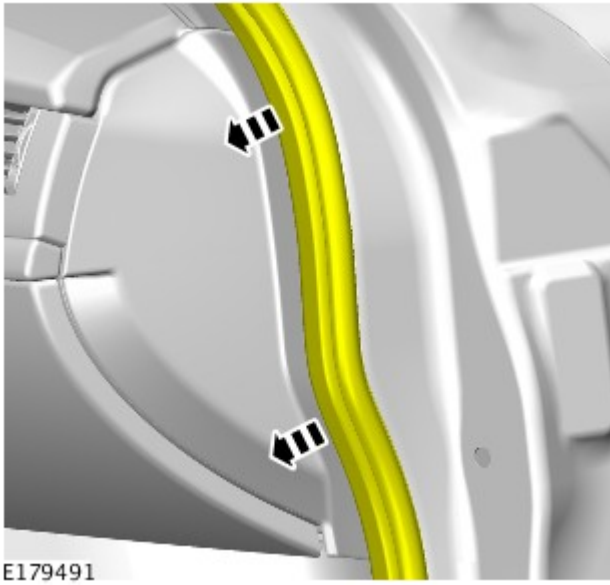


Position the door seal to one side.

3.

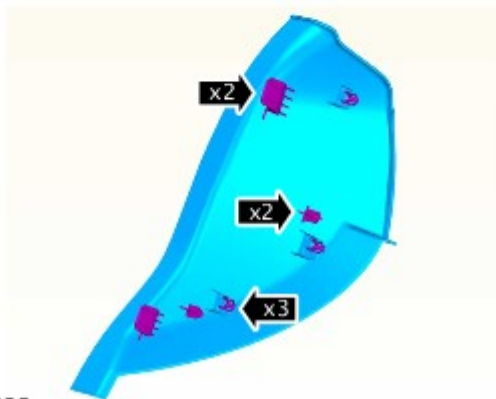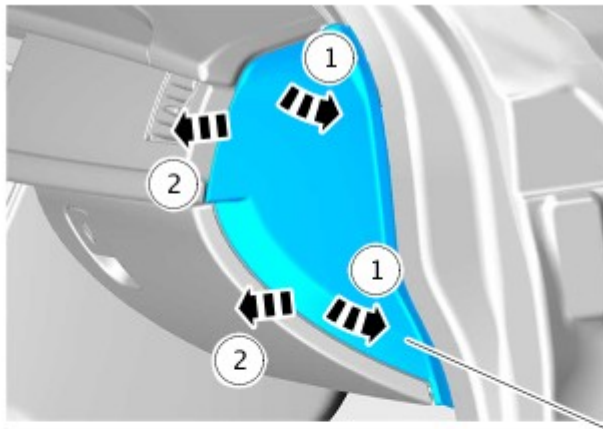


Remove the instrument panel side trim panel.

4.

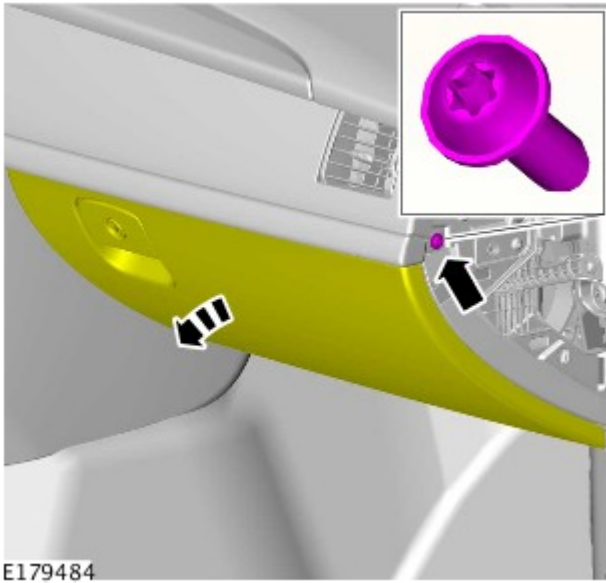


Remove the retaining screw. Lower the glovebox.

5.

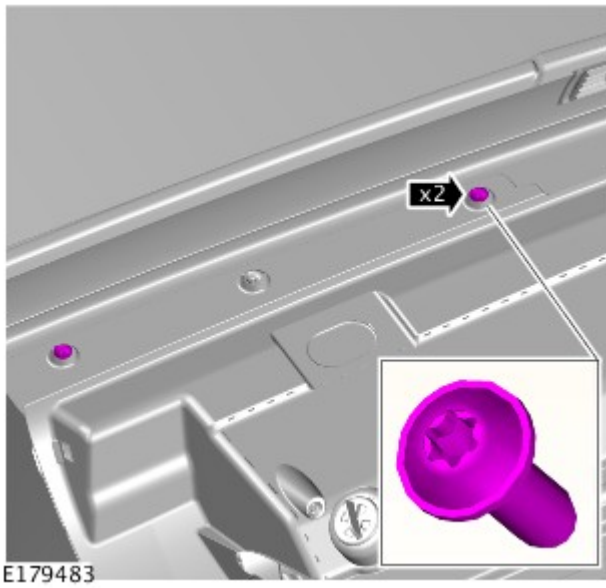

Remove the 2 retaining screws.


6.

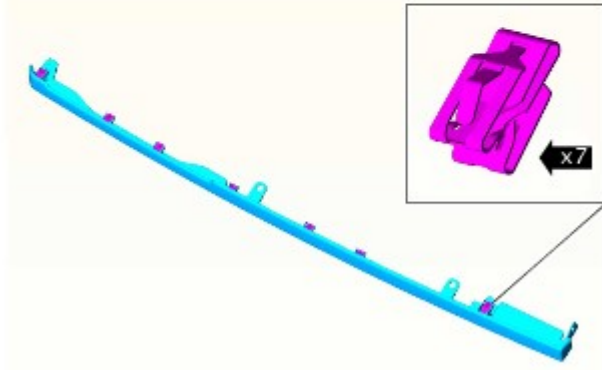

E179487

Remove the lower trim panel.


7.

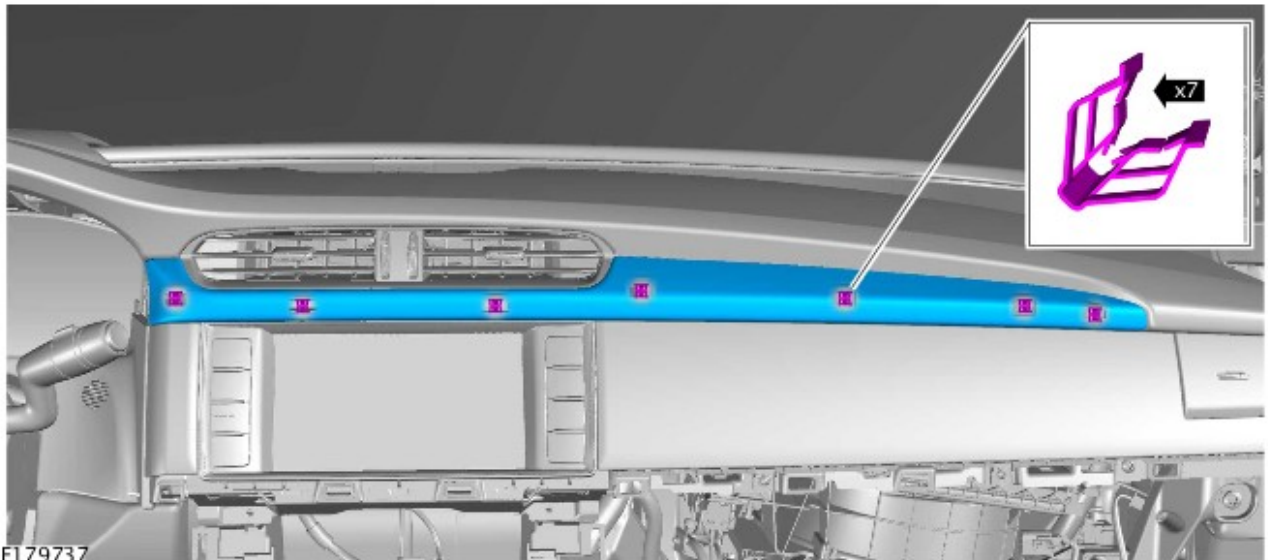

E179737

Remove the upper trim panel.


8.

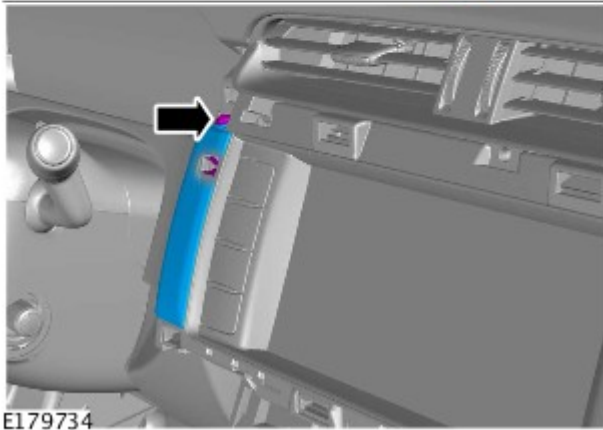

E179734

- Remove the retaining screw.
- Remove the trim panel.

9.

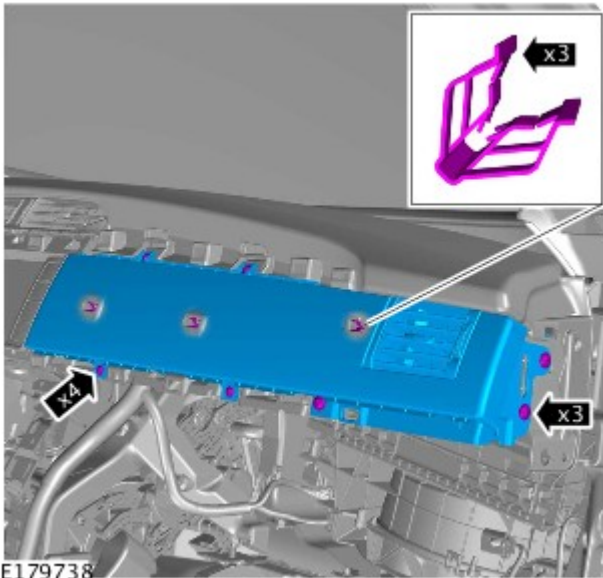


E179738

- Remove the 7 retaining screws.
- Remove the trim panel.

10.

CAUTION:

Care must be taken when handling the component. Do not place on a surface with the touch screen faced down. Failure to follow this instruction may damage the component.

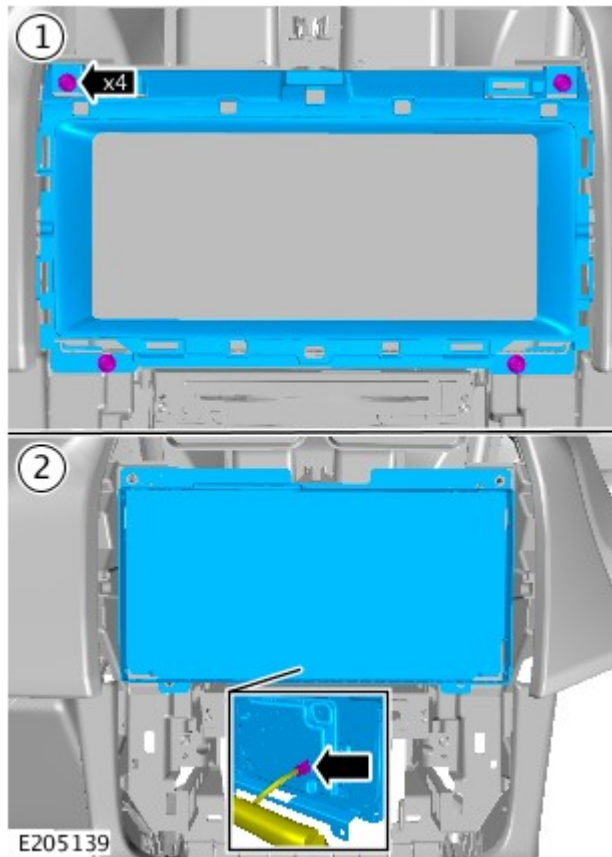

- Remove the 4 retaining screws.
- Remove the touch screen trim panel.
- Position the touch screen to one side and disconnect the electrical connector.
- Remove the touch screen.

INSTALLATION

1.
 - Connect the touch screen electrical connector.
 - Install the touch screen.
 - Install the touch screen trim panel.
 - Install the 4 retaining screws.
Torque: 3.5Nm

2.
 - Install the trim panel.
 - Install the 7 retaining screws.
Torque: 2.5Nm

-
- 3.
- Install the trim panel.
 - Install the retaining screw.
- Torque: 2.5Nm*
-

4. Install the upper trim panel

5. Install the lower trim panel.

6. Install the 2 retaining screws.

Torque: 2.5Nm

7. Close the glovebox. Install the retaining screw.

Torque: 2.5Nm

8. Install the instrument panel side trim panel.

9. Install the door seal.

10. Connect the startup battery ground cable.

Refer to: [Startup Battery Disconnect and Connect](#) (414-01 Battery, Mounting and Cables, General Procedures).