

# **Checking and Top-up**

## **Diesel engines**

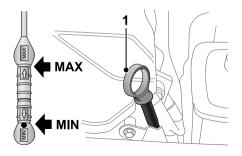

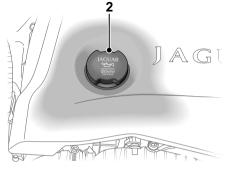

JAG0652

Remove the dipstick (1) and wipe clean with a non-fluffy cloth. Replace fully, then withdraw the dipstick. If the oil level is above the mark **MIN** on the dipstick then no additional oil is required.

If the oil is at or below the **MIN** mark, remove the oil filler cap (2) and add 1 litre of oil to the recommended engine oil on page 218.

Refit the dipstick and filler cap and securely tighten the filler cap by hand.

## Recommended engine oil

Jaquar recommends ( Castrol /

## Oil specification - Petrol engine

An oil of 5W-30 viscosity to Jaguar specification WSS M2C913 - B must be used in all vehicles with a petrol engine.

For top up purposes only, where the WSS M2C913 - B specification cannot be found, ACEA A3/B3 or ACEA A1/B1 specification oils may be used.

## Oil specification - Diesel engine

An oil of 5W-30 viscosity meeting Jaguar specification WSS M2C913 – B is preferred. Where this is not possible, oil meeting ACEA B1 or ACEA B3 may be used.

#### SAE viscosity rating

For climates ranging from -30°C (-22°F) and +50°C (+122°F), the following oil viscosities may be used:

0W-30

5W-30 (preferred)

0W-40

5W-40

**Note:** It is recommended that the oil level is topped up using oil of the same viscosity. If you are unsure which oil viscosity is used in your car, your Jaguar Dealer/Authorised Repairer will be able to advise.

If you are operating this vehicle in climates outside the above temperature range, contact your Jaguar Dealer/Authorised Repairer for advice.