


# Rear Door Trim Panel (76.34.04)


## Removal

### All vehicles


- 1 . Remove the rear door quarter window blind lower seal.

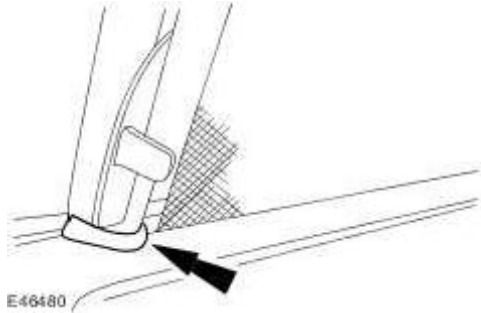


- 2 . Remove the rear door window blind finisher trim.

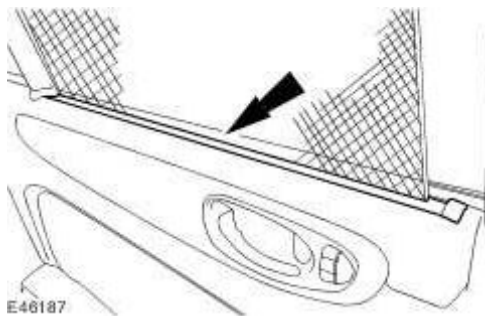

- 3 . Remove the rear door interior handle retaining screw cover.

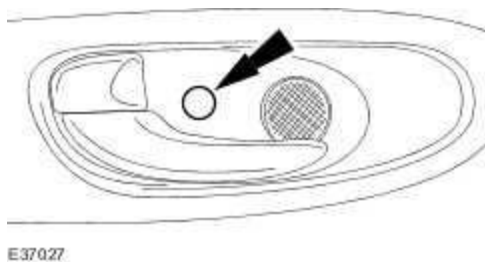


- 4 . Remove the rear door interior handle retaining screw.

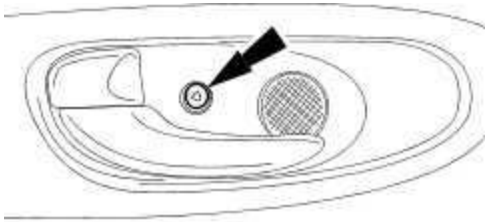

E37028


5 . Remove the rear door trim panel retaining screws.

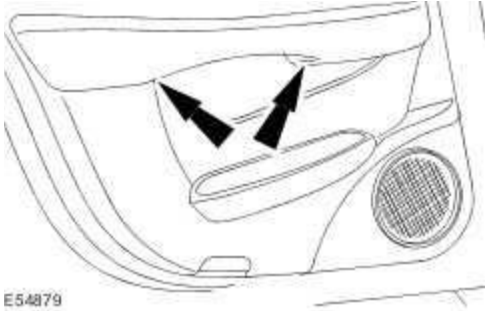

E54879

### Short wheelbase


6 . Remove the rear door trim panel retaining screw.

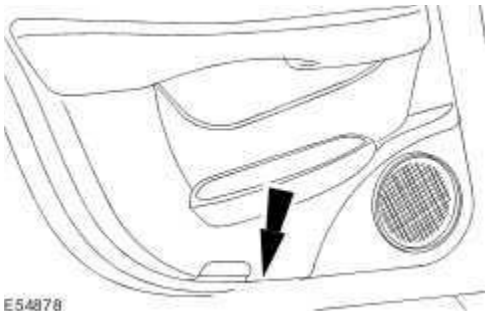

E54878

### Long wheelbase


7 . Remove the rear door trim panel retaining screws.

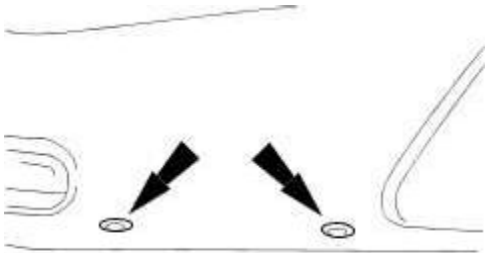

E53474


**All vehicles**

8 . Detach the rear door trim panel.

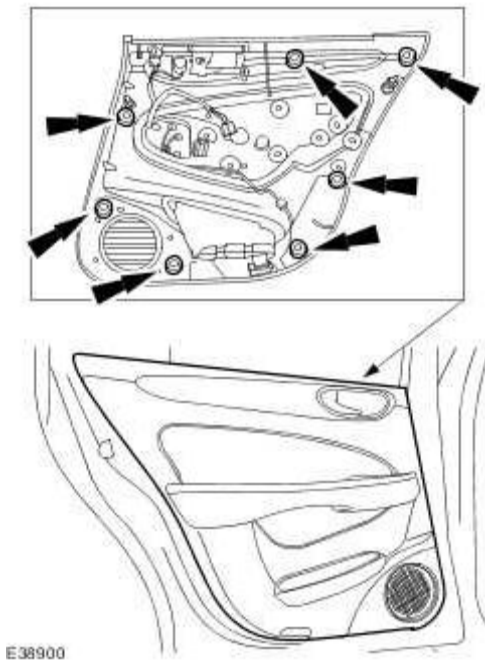


E38900

9 . Detach the rear door interior handle cable.

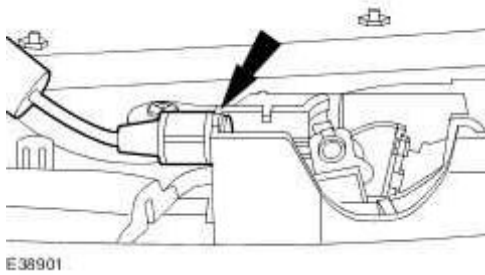

E38901


10 . Remove the rear door interior handle cable.

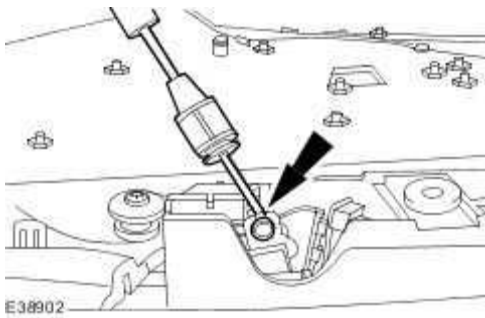

E38902

11 . Remove the rear door trim panel.

▶ Disconnect the electrical connector.

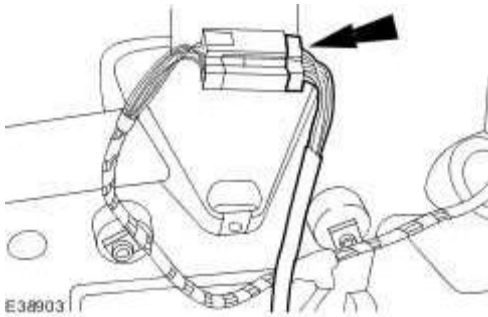

## Installation

1 . To install, reverse the removal procedure.