



Thermostat Vehicles With: Supercharger 26.45.07

Removal

1. Open the engine compartment and fit paintwork protection sheets.
2. Drain the radiator. Refer to this Section. Retain the coolant drain tray in position to catch any spillage when removing the outlet pipe.

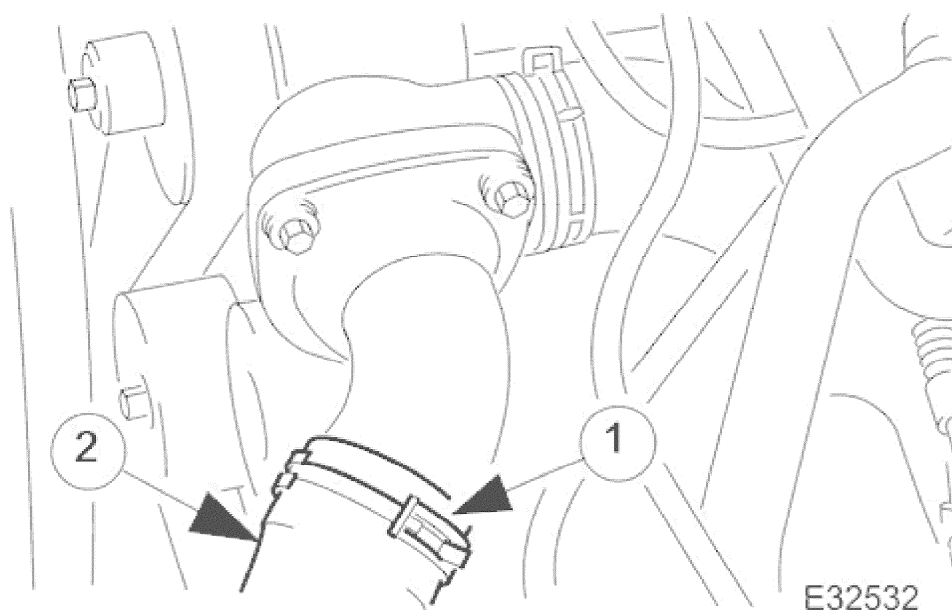

3. Disconnect the bottom hose from the coolant outlet pipe.
 1. Release and reposition the hose clip.
 2. Disconnect the bottom hose.

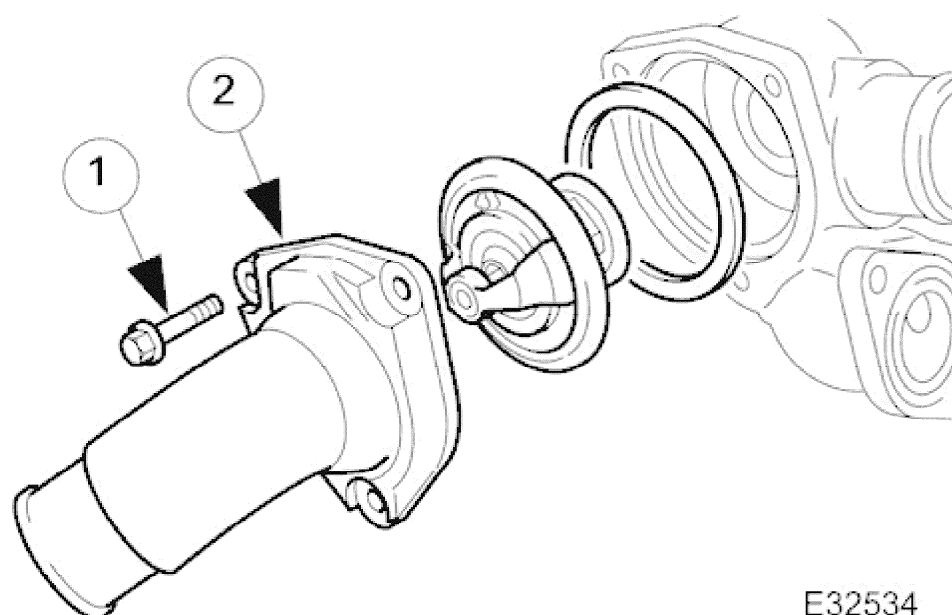

4. Remove the thermostat from the outlet pipe.
 1. Remove the three bolts which secure the thermostat cover to the outlet pipe.
 2. Remove the thermostat cover, the thermostat and the seal from the outlet pipe. Discard the seal.

2001 XK RANGE - Engine Cooling - 303-03A

Installation

1. Installation is the reverse of the removal procedure.
 - Use new sealing rings on the coolant outlet pipe and thermostat housing.
 - The thermostat ball valve must locate in the recess in the cover.
2. Tighten the thermostat cover bolts to 8 - 10 Nm.
3. Refill the cooling system as described in this section.