


Interior Trim and Ornamentation - Headliner

Removal and Installation

Removal


1. Remove the front seats. Refer to 76.70.01.90.
2. Remove the rear seat cushion and squab. Refer to 76.70.37 and 76.70.38.
3. Remove the battery cover and disconnect earth cable from the battery terminal. Refer to 86.15.19.
4. Remove the rear quarter casings. Refer to 76.13.73.
5. **NOTE:** Right-hand shown, left-hand similar.
Remove the front seatbelt height adjusters.

E 94990

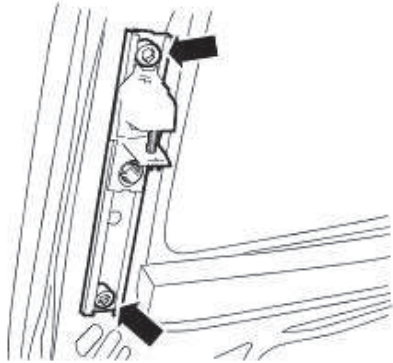


6. Remove the combined grab handles and coat hanger hooks.
7. Remove the 'J' gate surround. Refer to 76.25.24.
8. Remove the center console. Refer to 76.25.01.
9. Disconnect the brake shift interlock actuator and transmission control switch electrical connectors.

E37997

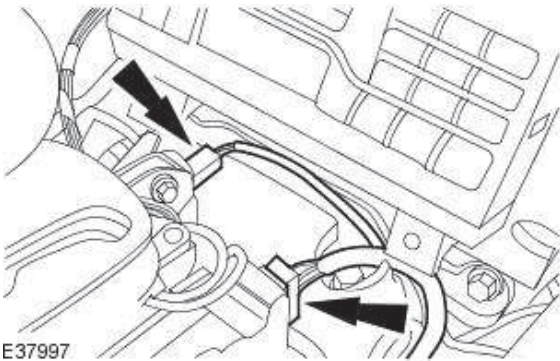


10. Release the transmission selector lever assembly.

E94948

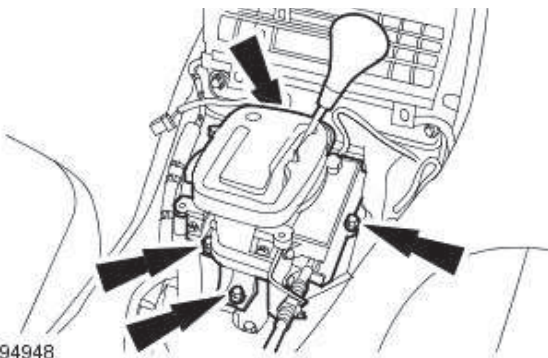


11. Remove the radio console securing screws and partially withdraw the console for access.

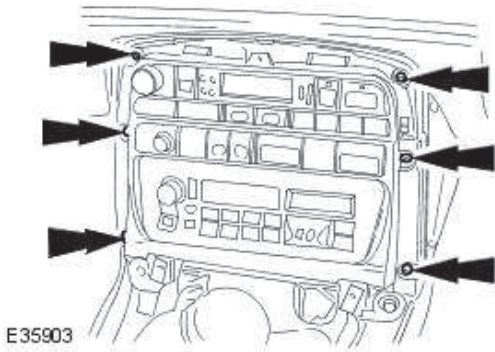

E35903

12. Release the radio assembly.

- Disconnect the console harness multiplugs and aerial co-axial connector.
- Remove the nut securing the earth lead and remove the lead from the stud.
- Disconnect the radio harness multiplug and position harness clear of center console.
- Disconnect the compact disc player 'Din' plug from the radio.

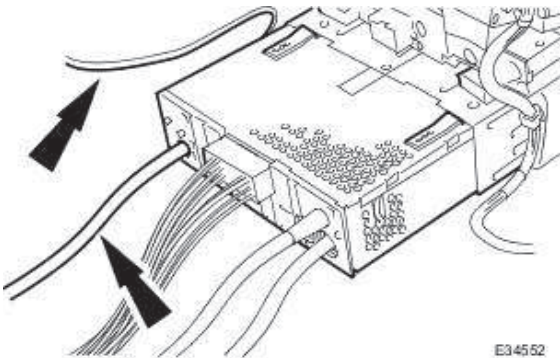

E34552

13. Remove the 'A' post upper trim panels. Refer to 76.13.31.


14. Remove the sun visors. Refer to 76.10.47.

15. Remove the sun visor retention bezels. Refer to 76.10.58

16. Remove the roof console. Refer to 76.13.69.

17. Position the headlining for access.


- Easing the body tabs back to release the headlining, progressively move the headlining downwards to access the interior light multiplug.
- Disconnect the interior light multiplug and free the headlining from the remaining body tabs.

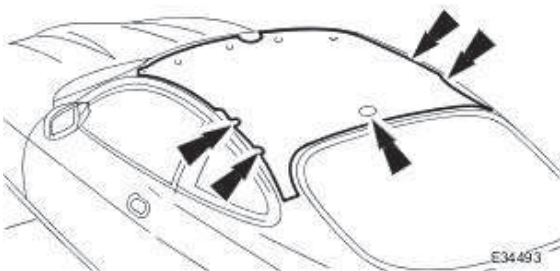

E34493

18.  CAUTION: Make sure the headliner must not be creased or folded during removal or installation. Failure to follow this instruction may result in damage to the component.

Lift and turn the headlining through 90 degrees, tilt into the passenger footwell and remove from the vehicle.

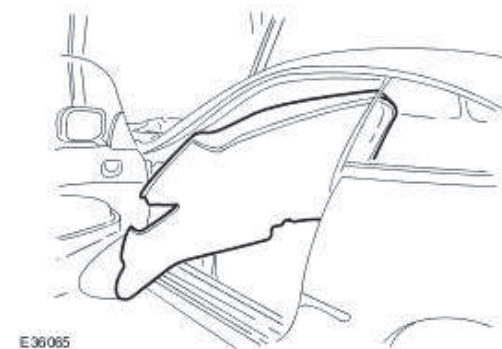

E36085


19. Remove the interior light from headlining.

Installation

1. Fit the interior light to the headlining.
2. Place the headlining into the vehicle tilted into position with one end in the footwell and the opposite end at top of the door aperture.
3. Lift and rotate the headlining through 90 degrees.
4. Connect the interior light multiplug.
5. Position the headlining at the roof and reposition the door aperture seals to retain it.
6. Fully seat the headlining ensuring correct positioning over the backlight flange.

7. Bend the body tabs into position to secure the headlining.
8. Fit the roof console. Refer to 76.13.69.
9. Fit the sun visor retention bezels. Refer to 76.10.58
10. Fit the sun visors. Refer to 76.10.47
11. Fit the 'A' post upper trim panels. Refer to 76.13.31.
12. Connect the radio harness and radio console harness multiplugs.
13. Position the ground lead to the radio stud and install the securing nut.
14. Connect the aerial co-axial lead to the radio and stow excess harness and lead lengths into the radio mounting aperture.
15. Fully seat the radio into the console, ensuring that the retaining clips are fully seated and harnesses and leads do not obstruct.
16. Position the radio console and install the securing screws.
17. Install the transmission selector lever assembly.

- Tighten to 11 Nm.

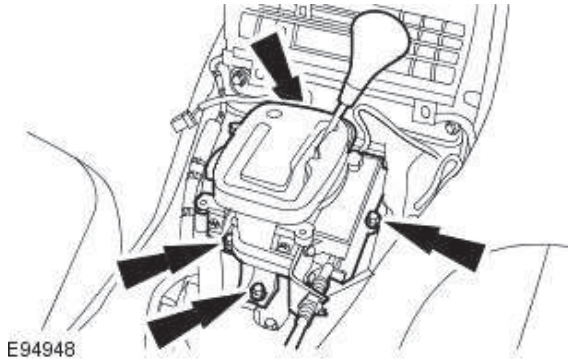


E94948

18. Connect the brake shift interlock actuator and transmission control switch electrical connectors.
19. Fit the center console assembly. Refer to 76.25.01.
20. Fit the 'J' gate surround. Refer to 76.25.24.
21. Fit the combined grab handles and coat hanger hooks.
22. NOTE: Right-hand shown, left-hand similar.

Fit the front seatbelt height adjusters.

- Tighten to 20 Nm.

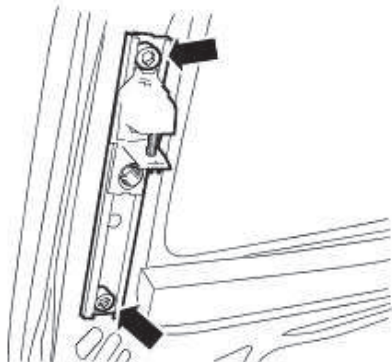

E 94990

23. Fit the rear quarter casings. Refer to 76.13.73.
24. Fit the rear seat squab and cushion. Refer to 76.70.37 and 76.70.38.
25. Connect the earth cable to battery terminal and fit battery cover. Refer to 86.15.15.
26. Fit the front seats. Refer to 76.70.01.90.