

Welcome THOMAS BROCK

Leading source of Online Diagnostic & Repair Information

Your Vehicle: 2005 Jaguar S-Type (X200) V6-3.0L

Vehicle » Transmission and Drivetrain » Automatic Transmission/Transaxle » Technical Service Bulletins » Customer Interest » A/T Controls - Harsh Shifting Concerns

A/T Controls - Harsh Shifting Concerns

JTB00071 (Issue 2)
Zoom Sized for Print
NUMBER
MODEL S-TYPE, XJ, XK



DATE

ISSUE '2' CHANGES ARE HIGHLIGHTED WITH GRAY BACKGROUND.

SECTION: 307

Harsh Transmission Shifts Repair Procedure

S-TYPE (X200)	VIN:	M45255 - N52047
	Model Year:	2003 - 2005
XJ (X350)	VIN:	G00442 - G49700
	Model Year:	2004 - 2005
XK8 (X100)	VIN:	A30645 - A48684
	Model Year:	2003 - 2005

Zoom Sized for Print

AFFECTED VEHICLE RANGE

## CONDITION SUMMARY:

Situation:

The customer may complain of harsh transmission shifting. The adaptive shift strategy can drift over time causing higher than normal clutch pressures.

## NOTE:


The customer should be informed that after the adaption clearing procedure and re-configuration repair the transmission shift quality will improve over time as the transmission adapts to the customer's driving requirements.

## Action:

Should a customer express the above concern, clear the adaptions, reconfigure the <u>TCM</u>, and reset the adaptions by following the Repair Procedure below.

PARTS:

No parts necessary; information only

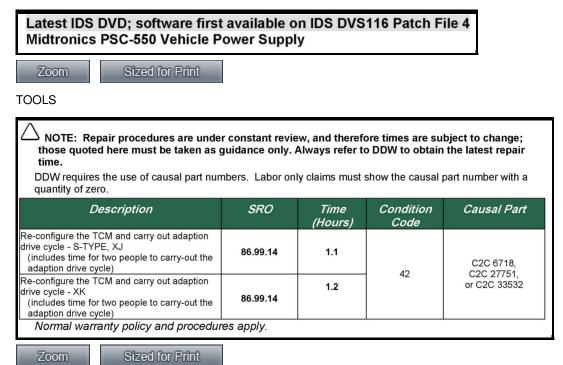

WARRANTY

CAUTION: Ensure the ignition is switched 'OFF', parking brake is 'ON', and the transmission selector lever is in park.			
$\wedge$			
CAUTION: A Midtronics PSC-550 Vehicle Power Supply must be connected to the vehicle battery during diagnosis / module programming.			
1. Connect the Midtronics PSC-550 Vehicle Power Supply to the vehicle battery.			
$\bigtriangleup$ NOTE: IDS must be loaded with software release DVD116 Patch File 4 or later.			
<ol><li>Connect the IDS to the vehicle and begin a new diagnostic session by entering the correct VIN for the current vehicle.</li></ol>			
3. Follow the IDS prompts to read the vehicle configuration.			
4. Select 'No' when prompted 'Do you wish to read diagnostic trouble codes?'			
5. Select 'tick' to continue.			
6. Select the 'Vehicle Configuration' tab when Content Model is displayed.			
<ol><li>From the Vehicle Configuration menu, clear the transmission adaptions by selecting from the drop-down menu:</li></ol>			
<ul> <li>'Special Applications' &gt; Transmission Control Module Adaption Clear' &gt; 'Application'</li> </ul>			
8. Select 'tick' to continue, following all on-screen instructions to complete this task.			
<ul> <li>IDS will return to the Vehicle Configuration menu when completed.</li> </ul>			
<ol> <li>From the Vehicle Configuration menu, configure the 'Transmission control module' by selecting from the drop- down menu:</li> </ol>			
<ul> <li>'Module programming' &gt; 'Configure existing module' &gt; 'Transmission control module'</li> </ul>			
10. Select 'tick' to continue, following all on-screen instructions to complete this task.			
IDS will return to the Vehicle Configuration menu when completed.			
Zoom Sized for Print			
REPAIR PROCEDURE			
PERFORM TRANSMISSION ADAPTIONS DRIVE CYCLE			
1. Select 'Special Applications'.			
2. Select 'Transmission Control Module Adaption'.			
CAUTION: On-road testing <i>must</i> be performed as a two-man operation.			

CAUTION: Do not move the accelerator pedal during gear shifts. Follow all on-screen instructions and note all warnings.

NOTE: The car may be driven as normal to a suitable flat road before carrying out the drive cycle road test. The clutches may be adapted in any order; it is not necessary to carry out the adaptions in the order shown on the IDS screen. The process below gives the ideal adaption drive cycle; however, if road conditions do not permit the drive cycle to be completed the car may be driven normally until suitable conditions are found, then the drive cycle can be continued.

NOTE: This process must be carried-out with the transmission in 'normal' mode (*not* sports mode) on a flat road. The transmission fluid temperature must be above 50°C (122°f) and below 100°C (212°f). If the maximum temperature is reached, drive vehicle at a constant speed to cool the transmission.

Zoom

Sized for Print

3.	'C' Clutch (1-2 upshift)
	• Using light throttle, accelerate from rest, ensuring the torque band is within the indicated bar graph range.
ľ	<ul> <li>Once the 1-2 upshift is completed and the correct torque conditions have been met, the next vacant box adjoining 'C' clutch will turn green with a 'tick' to show 'C' clutch has adapted. The highlight will move to 'B' Clutch.</li> </ul>
4.	'B' Clutch (2-3 upshift)
1	<ul> <li>Maintaining constant throttle input and the torque band is within the indicated bar graph range, continue accelerating.</li> </ul>
	<ul> <li>Once the 2-3 upshift is completed and the correct torque conditions have been met, the next vacant box adjoining 'B' clutch will turn green with a 'tick to' show 'B' clutch has adapted. The highlight will move to 'E' Clutch.</li> </ul>
5.	'E' Clutch (3-4 upshift)
ľ	<ul> <li>Maintaining constant throttle input and the torque band is within the indicated bar graph range, continue accelerating.</li> </ul>
	<ul> <li>Once the 3-4 upshift is completed and the correct torque conditions have been met, the next vacant box adjoining 'E' clutch will turn green with a 'tick' to show 'E' clutch has adapted. The highlight will move to 'A' clutch.</li> </ul>
6.	'A' Clutch
	<ul> <li>Maintaining constant throttle input and the torque band is within the indicated bar graph range, continue accelerating to 50 mph (80kph), ensuring the transmission upshifts into fifth gear.</li> </ul>
	<ul> <li>Lift off the throttle, allowing the vehicle to slow down until fourth gear engages. The next vacant box for 'A' clutch will turn green with a 'tick'.</li> </ul>
7.	'D' Clutch
ľ	<ul> <li>Gently braking from fourth gear to a standstill and holding for 10 seconds will alternately populate one of the clutches ('A' on the first standstill and 'D' on the next standstill, etc).</li> </ul>
8.	Once each clutch has adapted three times as shown by the green 'ticks' in the boxes, the 'Status – Adaption Complete' box will turn green with a 'tick' and the transmission adaption drive cycle operation is complete.
9.	When the task is complete, exit the current session.
10.	Disconnect IDS.
11.	Exit the current session.
12.	Disconnect IDS and the Midtronics PSC-550 Vehicle Power Supply from the vehicle.

Zoom

Sized for Print

PERFORM TRANSMISSION ADAPTIONS DRIVE CYCLE

Account | Vehicle | Help | Contact | AutoZone Community | Exit

© 2020 ALLDATA, LLC. All Rights Reserved. Trademarks | Privacy Statement | Do Not Sell My Personal Information | Terms and Conditions